

OPERATOR'S AND PARTS MANUAL NO. PB-74/7500

# **MEYER**

## **V-FORCE**

### **TWIN EXPELLER SUPER SPREADER**

MODEL: 7400  
7500

US PATENT NO.  
5,368,236  
5,501,404



DO NOT OPERATE EQUIPMENT UNTIL THIS MANUAL HAS BEEN READ AND UNDERSTOOD.



MANUFACTURED BY  
***Meyer Mfg. Corp.***

674 W. Business Cty Rd A  
P.O. Box 405  
Dorchester, Wisconsin 54425-0405  
Phone 715-654-5132 • FAX 715-654-5513  
1-800-325-9103  
[www.meyermfg.com](http://www.meyermfg.com)  
E-mail: [sales@meyermfg.com](mailto:sales@meyermfg.com)



## 1.0 IMPORTANT INFORMATION

Prior to 2016 model year, the serial number plate is found on the upper left front corner of the spreader or stamped in the left front frame channel.

For 2016 model year and later, the serial number plate is found on the upper left front corner of the spreader.

Please enter the model, serial number and additional information in the space provided for future reference.

**Model No.** \_\_\_\_\_  
**Serial No.** \_\_\_\_\_  
**Date of Purchase** \_\_\_\_\_  
**Dealership** \_\_\_\_\_  
**Dealership Phone No.** \_\_\_\_\_



**Always use your serial number when requesting information or when ordering parts.**

### HOW TO READ YOUR SERIAL NUMBER

**EXAMPLE: SV127500253**

**Model Type / Model Year / Model / Sequence Of Build**

↓            ↓            ↓            ↓  
**SV            12            7500            253**

---

Meyer Manufacturing Corporation  
674 W. Business Cty Rd A  
Dorchester, WI 54425  
Phone: 1-800-325-9103  
Fax: 715-654-5513  
Email: sales@meyermfg.com  
Website: www.meyermfg.com



# PRE-DELIVERY & DELIVERY CHECK LIST

Spreader Check List

## Meyer Manufacturing Corporation

Phone: 715-654-5132 • Toll-Free: 1-800-325-9103 • P.O. Box 405 • Dorchester, WI 54425

This Pre-Delivery & Delivery Check List must be gone through by the Selling Party and the Customer to validate the Owner's Registration Form.

### PRE-DELIVERY CHECK LIST

After the New Meyer Spreader has been completely set-up, check to be certain it is in correct running order before delivering it to the customer.

The following is a list of points to inspect:

**Check off each item as you have made the proper adjustments and found the item operating satisfactorily. Any adjustments made, MUST be according to specifications defined in this manual.**

- All shields and guards are in place and securely fastened.
- All bolts and other fasteners are secure and tight.
- All mechanisms operate trouble free.
- All grease fittings have been lubricated, gear boxes filled to proper levels, and all roller chains are oiled. See "Lubrication" section of this manual.
- PTO shields turn freely.
- All roller chain springs adjusted properly for automatic tensioning. See "Adjustments" section in this manual.
- Both LR and RR Spinner Material Guides are adjusted properly. See "Adjustments" section in this manual.
- All decals are in place and legible.
- All stop/tail/turn lights work properly.

### DELIVERY CHECK LIST

The following check list is an important reminder of valuable information that **MUST** be passed on to the customer at the time the unit is delivered.

**Check off each item as you explain it to the customer.**

- Explain to the customer that pre-delivery check list was fully completed.
- Give customer the Owner & Operator's Manual. Instruct to read and completely understand its contents **BEFORE** attempting to operate the spreader.
- Explain and review with customer the New Meyer Spreader manufacturer's warranty.
- Show the customer where to find the serial number on the implement.
- Explain and review with the customer "Safety Precautions" section of this manual.
- Explain and review with customer the proper "Start-up and Operating Procedures" sections of this manual.
- Demonstrate the PTO Shaft Locking Device and proper PTO shaft storage. Also, demonstrate proper hydraulic hose storage and tip holder used to keep system clean from contaminants.
- Explain that regular lubrication and proper adjustments are required for continued proper operation and long life of the spreader. Review with the customer the "Lubrication" and "Adjustments" sections of this manual.
- Explain and review with customer the recommended loading and unloading procedures for different types of manure.
- Also, demonstrate the manual operation of the Trip Pan Doors (V-Max only) and proper way to adjust the Rear Spinner Material Guides.
- Fully complete this "PRE-DELIVERY & DELIVERY CHECK LIST" with the customer.

### 3.0 INTRODUCTION

*Congratulations on your purchase of a new Meyer farm equipment product. Undoubtedly you have given much consideration to your purchase and we're proud that you have selected Meyer. Pride in craftsmanship, engineering and customer service have made Meyer products the finest in the farm equipment industry today.*

*There is no substitute for quality. That is why thousands of people like you have purchased Meyer farm equipment. They felt it was the best equipment to serve their farming needs, now and in years to come. We ask that you follow our policy of "safety first", and we strongly suggest that you read through the "Owner / Operator's Manual & Parts Book" before operating your Meyer farm equipment. Meyer Manufacturing Corporation wants to thank you for not compromising quality. We are determined to offer excellence in customer service as well as provide you with the very best value for your dollar.*

*Sincerely,*

*All Employees of*

*MEYER MANUFACTURING CORPORATION*



This SAFETY ALERT SYMBOL means ATTENTION! BE CAREFUL! YOUR SAFETY IS INVOLVED! It stresses an attitude of HEADS UP FOR SAFETY. When you see this symbol, be alert to the possibility of PERSONAL INJURY and carefully read the message that follows.



**WARNING: NEVER OPERATE WITHOUT ALL COVERS, SHIELDS AND GUARDS IN PLACE. KEEP HANDS, FEET AND CLOTHING AWAY FROM MOVING PARTS. SOME COVERS AND GUARDS HAVE BEEN REMOVED FOR ILLUSTRATIVE PURPOSES ONLY IN THIS MANUAL. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH**

**NOTE: All references to right hand (RH), left hand (LH) front and rear apply to the product as viewed from the rear of the box.**



**IMPORTANT:** You are urged to study this manual and follow the instructions carefully. Your efforts will be repaid in better operation and service as well as a savings in time and repair expense. Failure to read this manual and understand the machine could lead to serious injury. If you do not understand instructions in this manual, contact either your dealer or Meyer Manufacturing Corp. at Dorchester, WI 54425.



**WARRANTY:** At the front of this manual is an "Owner's Registration Form". Be sure your dealer has completed this form and promptly forwarded a copy to Meyer Manufacturing to validate the manufacturer's warranty. The product model and serial number are recorded on this form and on the inside of the front cover for proper identification of your Meyer Forage Box by your dealer and the manufacturer when ordering repair parts. The serial number is stamped above the discharge opening on the unit discharge end frame.



**REPAIR PARTS:** At the back of this manual is the repair parts section. All replacement parts are to be obtained from or ordered through your Meyer dealership. When ordering repair parts, refer to the parts section and give complete information including quantity, correct part number, detailed description and even model number and serial number of the forage box which needs repair parts.

**Manufacturer's Statement:** Meyer Manufacturing Corporation reserves the right to make improvements in design, or changes in specifications at any time, without incurring any obligation to owners of units previously sold. This supersedes all previous published instructions.

# TABLE OF CONTENTS

1.0 IMPORTANT INFORMATION .....	2
PRE-DELIVERY & DELIVERY CHECK LIST .....	3
3.0 INTRODUCTION .....	4
MANUFACTURER'S WARRANTY .....	7
SAFETY PRECAUTIONS .....	9
SAFETY FIRST .....	10
SAFETY DECALS .....	11
PRE-OPERATION .....	13
TRANSPORTING .....	14
TRUCK MOUNT SPREADERS .....	15
FREEZING WATER OPERATION .....	15
OPERATION .....	17
LOADING .....	17
UNLOADING .....	17
SHEAR SPROCKET INSTRUCTIONS .....	18
STORAGE AFTER USE .....	19
PTO DRIVE LINE .....	20
DRIVE LINE ATTACHMENT .....	20
PTO LUBRICATION .....	21
LUBRICATION FOR OPTIONAL TRUCK MOUNT MECHANICAL DRIVE SYSTEM .....	22
ADJUSTMENTS .....	23
SPINNER MATERIAL GUIDES .....	23
SHEAR ARM MATERIAL GUIDE ADJUSTMENT .....	23
FRONT DRIVE ROLLER CHAINS .....	24
LUBRICATION .....	26
LUBRICATION & ADJUSTMENT FOR 3RD AUGER .....	28
INSTRUCTIONS FOR AUTOMATIC CHAIN OILER .....	29
REPAIR PARTS .....	30
FRONT SHIELD & SIDE SHAFT DRIVE .....	30
AUGER DRIVE, PRIMARY REDUCTION .....	32
AUGER DRIVE, SECONDARY REDUCTION .....	34

RH AUGER DRIVE, FINAL REDUCTION .....	36
LH AUGER DRIVE, FINAL REDUCTION .....	38
BOX, AUGERS & SIDE SHAFT .....	40
7400/7500 UNLOADING GATE & MATERIAL GUIDES .....	42
7500 UNLOADING GATE & MATERIAL GUIDES .....	46
SPINNERS & GEARBOX SHAFT DRIVE .....	48
SPINNER GEAR REDUCERS .....	50
19-0047 UPPER GEARBOX - TRUCK .....	51
#19-0038-SYN 2:1 RATIO GEARBOX .....	52
HUBS, AXLE & TANDEM AXLE ASSEMBLY .....	54
THIRD AUGER .....	56
OIL-KIT .....	58
V-FORCE LIGHTING .....	60
918-0312 PTO DRIVE SHAFT ASSEMBLY .....	62
918-0312 PTO DRIVE SHAFT ASSEMBLY .....	64
540 RPM 1-3/8 - 6 SPLINE YOKE .....	66
1000 RPM KIT .....	67
SVS-RPM-KIT .....	67
918-0209 PTO DRIVE SHAFT ASSEMBLY .....	68
918-0211 PTO DRIVE SHAFT .....	68
918-0209 PTO DRIVE SHAFT ASSEMBLY .....	70
918-0211 PTO DRIVE SHAFT .....	70
918-0309 PTO DRIVE SHAFT ASSEMBLY .....	72
918-0311 PTO DRIVE SHAFT ASSEMBLY .....	72
918-0309 PTO DRIVE SHAFT ASSEMBLY .....	74
918-0311 PTO DRIVE SHAFT ASSEMBLY .....	74
918-0308 PTO DRIVE SHAFT ASSEMBLY .....	76
918-0310 PTO DRIVE SHAFT ASSEMBLY .....	76
#918-0150 VERTICAL DRIVELINE, TRUCK MOUNT MECHANICAL DRIVE .....	78
OPTIONAL TRUCK GEARBOX DRIVE PACKAGE .....	79
TROUBLESHOOTING .....	80
MEYER EQUIPMENT WHEEL TORQUE .....	82
TIRE INFLATION .....	82
SPECIFICATIONS .....	83
MAINTENANCE RECORD .....	85

# MANUFACTURER'S WARRANTY

## MEYER SUPER SPREADER

11 / 2014

- I. The "Owner's Registration Form" must be completed in full and promptly returned to Meyer Mfg. Corp. for this warranty to become both valid and effective. All warranties on new Meyer Super Spreaders shall apply only to the original retail customer from an authorized Meyer Mfg. Corp. dealership.
- II. This warranty shall not apply to any Meyer Super Spreader which has been subjected to misuse, negligence, alteration, accident, incorrect operating procedures, has been used for an application not designed for or pre-authorized by Meyer in writing, has had the serial numbers altered, or which shall have been repaired with parts other than those obtained through Meyer Mfg. Corp. Meyer is not responsible for the following: Depreciation or damage caused by normal wear, lack of reasonable and proper maintenance, failure to follow the operator's manual recommendations or normal maintenance parts and service. Meyer is not responsible for rental of replacement equipment during warranty repairs, damage to a power unit (including but not limited to a truck or tractor), loss of earnings due to equipment down time, or damage to equipment while in transit to or from the factory or dealer.
- III. Meyer Mfg. Corp. warrants new Meyer Super Spreaders to be free from defects in material and workmanship under recommended use and maintenance service, as stated in the "Owner / Operator's Manual & Parts Book" as follows:
  - A. Meyer Mfg. Corp. will repair or replace F.O.B. Dorchester, WI, as Meyer Mfg. Corp. elects, any part of a new Meyer Super Spreader which is defective in material or workmanship:
    - i. Without charge for either parts or labor during the first (1) year from purchase date to the original retail customer.
  - B. In addition to the above basic warranty, Meyer Mfg. Corp. will repair or replace F.O.B. Dorchester, WI as Meyer Mfg. Corp. elects:
    - i. Any part of the following which is defective in material or workmanship (not neglect to recommended use and service) with a "pro-rated" charge for parts only (not labor) during the stated time period from date of purchase to the original retail customer:

Seven (7) Years: After a period of (1) year, the spreader tank body is warranted against rust through for an additional period of (6) years. (Pro-Rated Parts Only). Parts included, front and rear end panels, side panels, and auger trough.
- IV. COMMERCIAL USE: Coverage as in paragraph III.A.1. ONLY, except warranty coverage is for (90) days for parts and labor to the original commercial retail customer.
- V. Repairs eligible for labor warranty must be made by Meyer Mfg. Corp. or an authorized Meyer dealership. The original retail customer is responsible for any service call and/or transportation of the Super Spreader to the dealership or factory for warranty service.
- VI. Except as stated above, Meyer Mfg. Corp. shall not be liable for injuries or damages of any kind or nature, direct, consequential, or contingent, to persons or property. This warranty does not extend to loss of crop or for any other reasons.
- VII. No person is authorized to give any other warranties or to assume any other obligation on Meyer Mfg. Corp.'s behalf unless made or assumed in writing by Meyer Mfg. Corp. This warranty is the sole and exclusive warranty which is applicable in connection with the manufacture and sale of this product and Meyer Mfg. Corp.'s responsibility is limited accordingly.

### Purchased Product Warranty:

This warranty does not apply to component parts not manufactured by Meyer such as but not limited to wheels, tires, tubes, PTO shafts, clutches, hydraulic cylinders, scales, etc.



**Meyer Manufacturing Corporation**

674 W. Business Cty Rd A

Dorchester, WI 54425

Phone: 1-800-325-9103

Fax: 715-654-5513

Email: [sales@meyermfg.com](mailto:sales@meyermfg.com)

Website: [www.meyermfg.com](http://www.meyermfg.com)





# SAFETY PRECAUTIONS



This symbol is used to call attention to instructions concerning personal safety. Be sure to observe and follow these instructions. Take time to be careful!



**WARNING: BEFORE ATTEMPTING TO OPERATE THIS SPREADER, READ AND STUDY THE FOLLOWING SAFETY INFORMATION. IN ADDITION, MAKE SURE THAT EVERY INDIVIDUAL WHO OPERATES OR WORKS WITH THE SPREADER, WHETHER FAMILY MEMBER OR EMPLOYEE, IS FAMILIAR WITH THESE SAFETY PRECAUTIONS.**

Require anyone who will operate this spreader to read and completely understand this owner's manual. Give necessary instructions.

DO NOT operate, service, inspect or otherwise handle this spreader until all operators have read this Owner's Manual and have been properly trained in its intended usage.

DO NOT allow minors (children) or inexperienced persons to operate this spreader.

If the spreader becomes clogged, shut off the tractor engine and allow all mechanisms to stop. Disconnect PTO shaft or hydraulic drive supply hoses (relieve hydraulic pressure). Then, clean or work on the spreader as required.

Always shut off power and disconnect PTO shaft or Hydraulic drive supply hoses (relieve hydraulic pressure) from tractor to prevent accidental startup or unexpected movement before working on machine.

DO NOT clean, adjust or lubricate while the spreader is in motion.

Make sure all hydraulic fittings are tight and that all hoses are in good condition. Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin and cause serious injury. Never investigate for hydraulic leaks by using a part of the body to feel for escaping fluid.

Inspect when first delivered and regularly thereafter; that all connections and bolts are tight and secure before operating.

Know how to stop the unloading unit of the spreader before starting it!

DO NOT operate until all shields, covers and guards are in place and securely fastened.

Make certain everyone is clear of the spreader before applying power.

Keep hands, feet and clothing away from moving parts. Loose or floppy clothing should not be worn by the operator.

Stay well clear of the spreader's rear and discharge spinners while operating.

DO NOT step up on any part of the spreader at any time. DO NOT use the PTO guard as a step.

DO NOT step over the power take-off shaft. Stay clear of the PTO at all times.

Keep PTO shaft telescoping tube shields turning freely. Keep PTO master shield on tractor. Replace damaged or missing shields.

Match the right tractor PTO spline and speed with the PTO driveshaft provided with the implement. This will assure proper geometry and operating speed. Never operate 540 RPM implements at 1000 RPM. Never operate 1000 RPM implements at 540 RPM. Never use a spline adapter. Use of adaptors will void warranty due to damage caused to the tractor PTO, PTO driveshaft, or implement.

Use only properly rated tires.

DO NOT tow at speeds in excess of 20 MPH when transporting this spreader. Never exceed a safe travel speed.

Observe all applicable traffic laws when transporting on public roadways (where legal to do so). Check local laws for all highway lighting and marking requirements.

**When towing the spreader on public roads** a safety chain of sufficient strength to support, along the line of travel, the gross weight of the spreader must be used (See Maximum Load Weight Chart in the Transporting Section). The safety chain should be attached per diagram in the Transporting Section.

Always install a SMV emblem on spreader for transporting on roadways and keep this emblem clean and bright.

MEYER MFG. CORP. PROVIDES GUARDS FOR EXPOSED MOVING PARTS FOR THE OPERATOR'S PROTECTION; HOWEVER, SOME AREAS CANNOT BE GUARDED OR SHIELDED IN ORDER TO ASSURE PROPER OPERATION. THE OPERATOR'S MANUAL AND DECALS ON THE MACHINE ITSELF WARN YOU OF DANGERS AND MUST BE READ AND OBSERVED CLOSELY!

## Study the Above Safety Rules

FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.



# SAFETY FIRST



A brief definition of signal words that are used in this manual is as follows:



**DANGER** indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.




**WARNING** indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury and includes hazards that are exposed when guards are removed.



**CAUTION** indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury. It is also used to alert against unsafe practices.

SEE DECALS ON PAGES 11 & 12

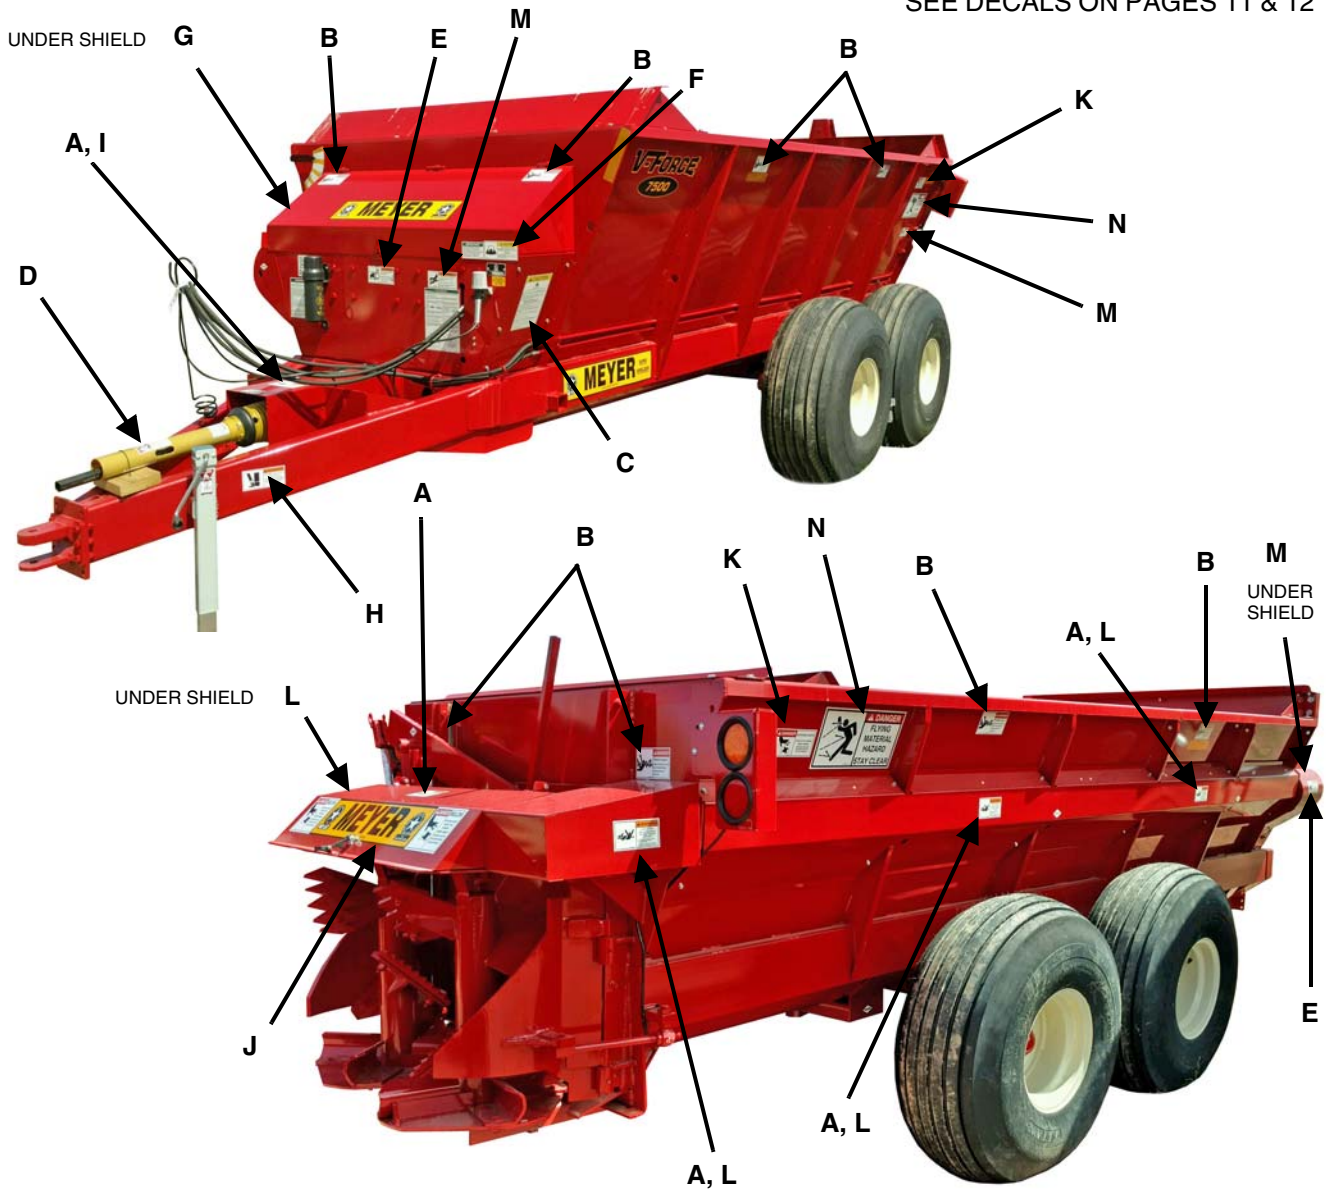

**CAUTION: READ ALL DECALS ON THE SPREADER AND IN THIS MANUAL. KEEP THESE DECALS CLEAN AND REPLACE ANY LOST OR DESTROYED DECALS. BECOME FAMILIAR WITH ALL TRACTOR AND SPREADER CONTROLS.**



# SAFETY DECALS




The Meyer Super Spreader is manufactured with operator safety in mind. Located on the manure spreader are various decals to aid in operation and warn of danger or caution areas. Pay close attention to all decals on the spreader.

**DO NOT REMOVE ANY DECALS. IF DECALS ARE LOST, DAMAGED OR IF MANURE SPREADER IS REPAINTED, REPLACE DECALS. REMEMBER: DECALS ARE FOR YOUR PROTECTION AND INFORMATION.**


**CAUTION**

**SAFETY FIRST**  
(Do Not Operate This Machine Without Reading These Instructions)

Meyer Mfg. Corp. always takes the operator's safety into consideration when designing farm machinery by covering exposed moving parts for his protection; however, some areas cannot be guarded or shielded in order to assure proper operation.

This safety alert symbol  means ATTENTION! BE CAREFUL! YOUR SAFETY IS INVOLVED! It stresses an attitude of HEADS UP FOR SAFETY, also read all other decals as they are also safety warnings.

Remember: The careful operator is the best operator. Most accidents are caused by human error. Certain precautions must be observed to prevent the possibility of injury or damage.

Read the  HEADS UP! Rules before you operate our equipment.  
 DO NOT allow persons other than the authorized adult operator near the machine.  
 DO NOT clean, adjust, or lubricate the machine when any part is in operation.  
 DO NOT pass in front of discharge area of machine when implement is in operation.  
 Tractor PTO MUST match implement PTO. (NEVER USE PTO ADAPTERS.)

IF THE MACHINE BECOMES CLOGGED, DISENGAGE POWER TAKE-OFF, REMOVE KEYS FROM TRACTOR, AND ALLOW ALL MECHANISMS TO STOP BEFORE CLEANING.

KEEP HANDS, FEET, CLOTHING, AND HAIR AWAY FROM ALL MOVING PARTS WHEN MACHINE IS IN OPERATION, LOOSE OR FLOPPY CLOTHING SHOULD NOT BE WORN BY THE OPERATOR.

STOP ENGINE, WAIT FOR ALL MOVEMENT TO STOP BEFORE LEAVING OPERATOR'S POSITION TO ADJUST, LUBRICATE, CLEAN, OR UNLOAD MACHINES. UNLESS OTHERWISE SPECIFICALLY RECOMMENDED IN THE OPERATOR'S MANUAL.

NEVER START THE MACHINE UNTIL ALL GUARDS AND SAFETY SHIELDS ARE SECURED IN PLACE.

KEEP OFF EQUIPMENT UNLESS SEAT OR PLATFORM FOR OPERATION AND OBSERVATION IS PROVIDED. KEEP ALL OTHERS OFF.

PTO SHIELD MUST ROTATE FREELY AND BE IN PLACE.

ALWAYS RUN PTO STRAIGHT IN LINE TO AVOID AN ACCIDENT BY BREAKAGE.

YOU MUST OBSERVE ALL APPLICABLE TRAFFIC LAWS WHEN TRANSPORTING ON PUBLIC ROADWAYS (WHERE LEGAL TO DO SO). CHECK LOCAL LAWS FOR ALL HIGHWAY LIGHTING AND MARKING REQUIREMENTS AND COMPLY WITH THESE LAWS.

MAKE CERTAIN EVERYONE IS CLEAR OF MACHINE BEFORE STARTING ENGINE OR OPERATION.

PLEASE KEEP ALL DECALS AND SLOW MOVING VEHICLE SIGN CLEAN SO THEY ARE LEGIBLE.

If any decal becomes damaged or lost, call your dealer or our plant for replacement.  
 Always use **GENUINE MEYER** replacement parts.

46-0001-22 1

DECAL C - 46-0001-22

**DANGER**

**ROTATING DRIVE SHAFT CONTACT CAN CAUSE DEATH**  
**KEEP AWAY!**  
**DO NOT OPERATE WITHOUT-**

- ALL DRIVE SHAFT GUARDS, TRACTOR AND EQUIPMENT SHIELDS IN PLACE
- DRIVE SHAFT SECURELY ATTACHED AT BOTH ENDS
- DRIVE SHAFT GUARDS THAT TURN FREELY ON DRIVE SHAFT
- READ OPERATOR'S MANUAL

**DO NOT USE PTO ADAPTERS**

DECAL D - 46-0001-13

**WARNING**

**ROTATING DRIVE LINE CAN CRUSH AND DISMEMBER**  
**DO NOT OPERATE WITHOUT SHIELD IN PLACE**

DISCONNECT AND LOCKOUT POWER SOURCE BEFORE ADJUSTING OR SERVICING UNIT.  
 FAILURE TO HEED WILL RESULT IN DEATH OR PERSONAL INJURY

46-3600-9

DECAL A - 46-3600-9

**DANGER**

**Rotating Augers**  
Disconnect and Lock Out Power Before Entering Box to Service.

46-0001-5

DECAL B - 46-0001-5

**WARNING**

**ENTANGLEMENT HAZARD**  
Keep All Shields In Place While Machine Is Running

46-0001-4

DECAL E - 46-0001-4

**CAUTION**

**TO PREVENT SERIOUS INJURY OR DEATH**

- DO NOT start, operate, or work on this machine without first carefully reading and thoroughly understanding the entire contents of the operators manual. (Require the same of all personnel who will operate this machine.)
- If operators manual is lost, contact your nearest Meyer Dealership or write or call:  
 MEYER MFG., CORP.  
 P.O. BOX 405 • Dorchester, WI 54425-0405  
 Phone 1-800-325-9103

Please give your name, address, phone number, model and serial number of your machine. A manual will be furnished.

- If you have any questions about operation or adjustments, and maintenance of this machine, contact your Meyer Dealership or Meyer Mfg., Corp. before starting or continuing the operation of this machine.

46-0001-35

DECAL F - 46-0001-35

**DANGER**

**ENTANGLEMENT HAZARD**  
Keep All Shields In Place While Machine Is Running

46-0001-26

DECAL G - 46-0001-26

**CAUTION: READ ALL DECALS ON THE SPREADER AND IN THIS MANUAL. KEEP THESE DECALS CLEAN AND REPLACE ANY LOST OR DESTROYED DECALS. BECOME FAMILIAR WITH ALL TRACTOR AND SPREADER CONTROLS.**



# SAFETY DECALS



The Meyer Super Spreader is manufactured with operator safety in mind. Located on the manure spreader are various decals to aid in operation and warn of danger or caution areas. Pay close attention to all decals on the spreader.



**DO NOT REMOVE ANY DECALS. IF DECALS ARE LOST, DAMAGED OR IF MANURE SPREADER IS REPAINTED, REPLACE DECALS. REMEMBER: DECALS ARE FOR YOUR PROTECTION AND INFORMATION.**



DECAL H - 46-3600-6



DECAL I - 46-0004-2



Decal J - 46-2636-14 with MEYER Logo



DECAL K - 46-9500-4



DECAL L - 46-3600-2



DECAL M - 46-8500-7



DECAL N - 46-7500-6




**CAUTION: READ ALL DECALS ON THE SPREADER AND IN THIS MANUAL. KEEP THESE DECALS CLEAN AND REPLACE ANY LOST OR DESTROYED DECALS. BECOME FAMILIAR WITH ALL TRACTOR AND SPREADER CONTROLS.**

# PRE-OPERATION

**! WARNING: BEFORE OPERATING, READ THIS OWNERS MANUAL COMPLETELY. PAY PARTICULAR ATTENTION TO THE “SAFETY PRECAUTIONS” AND “SAFETY FIRST” PAGES. READ ALL SAFETY MESSAGES HIGHLIGHTED BY “SAFETY ALERT SYMBOLS” THROUGHOUT THE MANUAL.**

This spreader can be purchased as either 540 RPM or 1000 RPM Model. Do not operate 540 RPM implements at 1000 RPM or 1000 RPM implements at 540 RPM. No PTO adapter may be used to alter speed or geometry. The hitch of the spreader is designed for a standard tractor drawbar. Adjust the drawbar at 15 to 22 inches above the ground. Extend or shorten the drawbar so horizontal distance from end of tractor PTO shaft to center of the hitch pin hole is 14, 16 or 20”, dependent on RPM. Secure the drawbar so that the hitch pin hole is located directly below the PTO drive line. See figure 1 for location of standard measurements.

An improperly located hitch point may cause damage to the universal joints of the PTO drive shaft. Conforming to the standard drawbar & PTO relationship will ensure that the PTO drive shaft will not become over-extended.

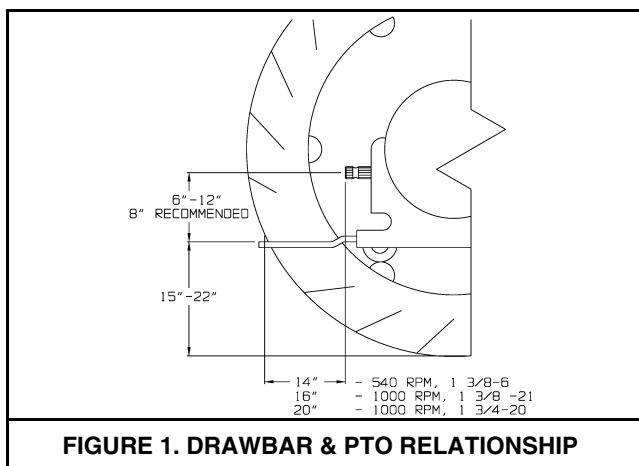

**FIGURE 1. DRAWBAR & PTO RELATIONSHIP**

WITH INITIAL HOOK-UP TO YOUR NEW MEYER SPREADER TEST PTO TRAVEL BY TURNING EQUIPMENT IN BOTH DIRECTIONS OBSERVING THE MINIMUM AND MAXIMUM TRAVEL DIMENSIONS AS SHOWN PER DRAWING ON FIGURE 7, PAGE 20.

**! DANGER: DO NOT OPERATE WITHOUT PTO GUARD ON SPREADER AND ON TRACTOR. MAINTAIN PTO DRIVE SHAFT GUARD TUBES IN OPERATING CONDITION. REPLACE THEM IF DAMAGED AND NOT TURNING FREELY. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

**! WARNING: INSPECT REGULARLY THAT ALL CONNECTIONS AND BOLTS ARE TIGHT AND SECURE BEFORE OPERATING. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

Check for proper assembly and adjustment and make sure that all bolts are tightened. Securely retighten after a few hours of operation, as bolts can loosen up on new machinery. Check wheel lug nuts upon delivery and periodically thereafter. Lug nuts should be tightened and the tires inflated to the recommended pressure. Refer to the wheel torque and tire inflation chart on page 82.

Inspect all adjustments on the spreader to be sure they are proper and to provide maximum performance. Lubricate the spreader completely if it is required and check the level of liquid gear grease in all three gearboxes.

**! WARNING: DO NOT OPERATE WITHOUT ALL SHIELDS, GUARDS AND COVERS INSTALLED. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

Fasten the spreader hitch to the tractor drawbar with a hitch pin that cannot bounce out. Use 1" diameter hitch pin to pull spreader.

Remove the weight from the jack (jack is not to be used when spreader is loaded). Remove jack from square mount tube and move to the transport storage tube on the left front side of the frame channel. Store in a horizontal position.


Before operation and after hitching the tractor to the spreader, connect the PTO drive shaft to the tractor. Slide spring loaded locking collar on PTO yoke rearward, and slide yoke onto the tractor PTO shaft. Release spring loaded collar. Be sure pins fall into groove of tractor PTO shaft and collar snaps forward into locking position.

**! CAUTION: DO NOT USE A STEEL HAMMER TO AID IN JOINING PTO PARTS.**

## TRANSPORTING

### TRACTOR TOWING SIZE REQUIREMENTS

Use the following chart for calculating the minimum tractor weight.

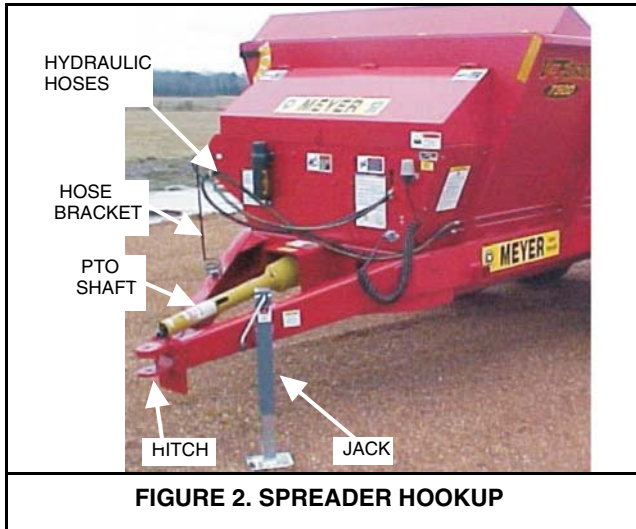

**FIGURE 2. SPREADER HOOKUP**

Route hydraulic hoses through the hose support rod which is mounted to the hitch frame, figure 2. Connect the hydraulic hoses for the flow control rear gate to the tractor's double acting valve hydraulic system. Move the tractor hydraulic controls to observe proper flow gate operation. If the controls operate the gate in opposite directions to what you expect, reverse the hydraulic hose connections at the tractor.

**! WARNING: HYDRAULIC FLUID ESCAPING UNDER PRESSURE CAN HAVE SUFFICIENT FORCE TO PENETRATE SKIN. KEEP ALL HOSES AND CONNECTIONS IN GOOD SERVICEABLE CONDITION. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

Before loading spreader, slowly engage the tractor PTO and operate machine at idle speed for several minutes to ensure the spreader is lubricated and operating properly.

Check that the flow control rear gate is completely closed. It is unlawful to allow slurry to splash or leak onto public roads.

MODEL	SPREADER EMPTY WEIGHT + LOAD = GW	MINIMUM TRACTOR WEIGHT UP TO 20 MPH
SV2636	6,100 + _____ = _____	2/3 of spreader gross weight
SV3245	7,640 + _____ = _____	2/3 of spreader gross weight
SV3954	8,650 + _____ = _____	2/3 of spreader gross weight
SV7400	8,040 + _____ = _____	2/3 of spreader gross weight
SV7500	9,000 + _____ = _____	2/3 of spreader gross weight
SI8720	11,445 + _____ = _____	2/3 of spreader gross weight
SI8865	18,140 + _____ = _____	2/3 of spreader gross weight

### MATERIAL ESTIMATED WEIGHT PER CUBIC FOOT

MATERIAL	LBS / CU. FT.
LIME SLUDGE	110-115 LBS.
DRY FEEDLOT MANURE	63-65 LBS.
CHICKEN LITTER	63-65 LBS.
CAKE SLUDGE	62-65 LBS.
SEMI-SOLID MANURE	58-60 LBS.
PEN PACKED MANURE	30-35 LBS.
LIQUID MANURE	63-65 LBS.

SOURCE: ASAE

**NOTE: HEAPED LOADS HAVE SIGNIFICANTLY HIGHER CAPACITIES.**

**! WARNING: DO NOT TOW AT SPEEDS GREATER THAN 20 MPH. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

**NOTE: The PTO horsepower requirements may not reflect adequate tractor size for towing the machine. Refer to tractor weight requirements for these recommendations and safety section for additional tractor and towing requirements.**

MAXIMUM SPREADER LOAD WEIGHTS							
Model	2636	3245T	3954T	7400	7500	8720T	8865T
Maximum Gross Weight (Pounds)	12,000	24,000	32,000	24,000	32,000	46,445	56,140
Total Net Weight (Pounds)	6,100	7,640	8,650	8,000	9,000	11,445	18,140
Cubic Foot Capacity**	181	227	272	249	324	468	562
Capacity in Gallons	1,355	1,694	2,033	1,868	2,433	3,500	4,200

\*\*Struck capacity, heaped loads have significantly higher capacities

Operating speed is dictated by the terrain over which you are traveling. Always use caution. Avoid traveling on slopes or hills that are unsafe.

**! WARNING: OBSERVE ALL APPLICABLE TRAFFIC LAWS WHEN TRANSPORTING ON PUBLIC ROADWAYS. CHECK LOCAL LAWS FOR ALL HIGHWAY LIGHTING AND MARKING REQUIREMENTS.**

**! WARNING: INSTALL AN EMBLEM ON REAR OF SPREADER FOR TRANSPORTING ON ROADWAYS AND KEEP THIS EMBLEM CLEAN AND BRIGHT. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

If you will travel on public roads and it is legal to do so, you must know all rules governing such operation. This will include lighting and brake requirements in addition to traffic rules. You may also be required to install a safety chain device on the spreader.

Check for traffic constantly. Be sure you can see that no one is attempting to pass you and that all traffic is sufficiently clear from you before making any turns.

### USE OF SAFETY CHAIN

**! CAUTION: A SAFETY CHAIN MUST BE INSTALLED TO RETAIN THE CONNECTION BETWEEN TRACTOR (OR OTHER TOWING VEHICLE) AND SPREADER WHENEVER TRAVELING ON PUBLIC ROADS IN CASE THE HITCH CONNECTION WOULD SEPARATE. A**

### SUGGESTED ATTACHMENT IS ILLUSTRATED ON FIGURE 3.

The chain must be of adequate size to hold the weight of the loaded spreader (See table on page 14). See your ag cart or wagon owner / operator's and parts book, which is also available at [www.meyermfg.com](http://www.meyermfg.com). If using a grab hook at the end(s) of the chain to secure the chain to itself, a hook latch must be installed.

The length of the safety chain is not to be any longer than necessary to turn without interference. If any chain links or attachment hardware are broken or stretched, repair before using. Store chain so it does not corrode or become damaged. Do not use this chain for other implements because the strength and length of the chain may not be adequate. Identify this chain for use on this particular spreader. Do not use the intermediate support as the attaching point.


### TRUCK MOUNT SPREADERS

Depending on the make and model of the truck it may be necessary to install a light converter (MEYER PART #56-0028). Converter will allow signal lights and brake lights to operate according to DOT lighting standard. Call factory for more information.

### FREEZING WATER OPERATION

Allow spreader to completely empty last of manure contents and disengage tractor PTO. Shut off tractor, remove the ignition key and allow all movement to stop before attempting to clean the spreader.

**! WARNING: DO NOT CLEAN, ADJUST OR**

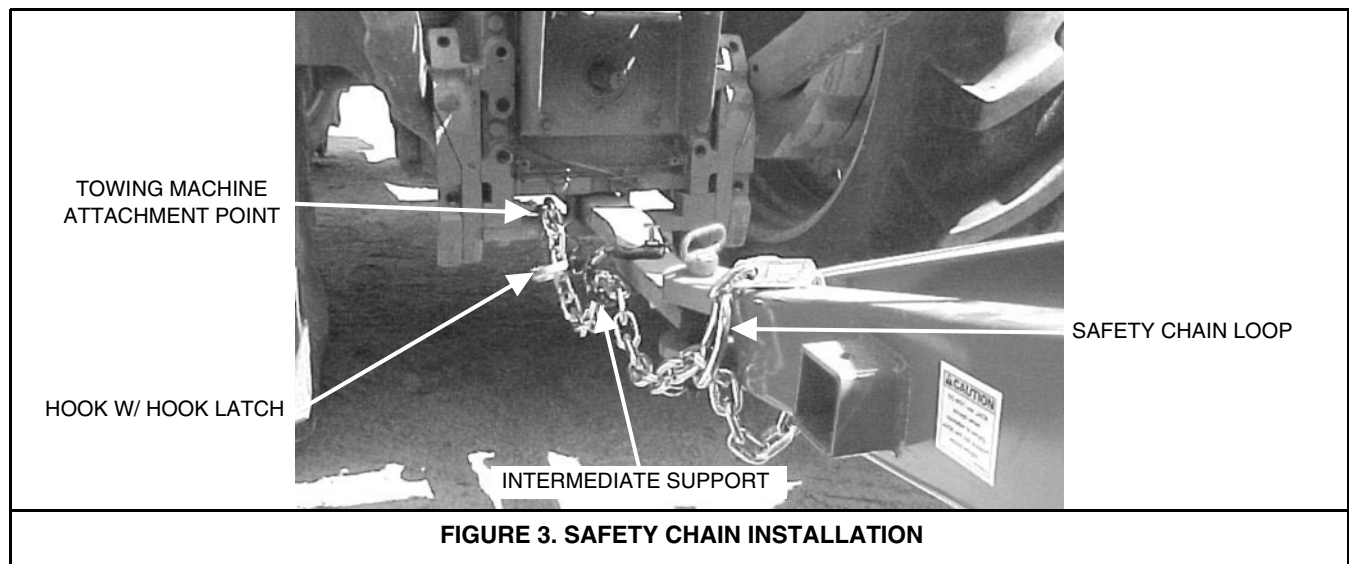

Clean all manure from rear ends of augers, flow control rear gate and spinners.



**WARNING: MAKE CERTAIN EVERYONE IS CLEAR OF EQUIPMENT BEFORE APPLYING POWER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

Slowly engage the PTO. Operate the spreader several minutes to clean manure scrapings and to allow any remaining manure and the spreader to freeze dry. Hydraulically run the flow control rear gate up and down to clean gate slide guides. Park spreader with flow control rear gate approximately halfway open.

Before loading in freezing weather, make sure augers and spinners are free to rotate, and the flow control rear gate moves freely up and down.



**DANGER: KEEP AWAY AND KEEP OTHERS CLEAR OF ROTATING SPINNERS AT REAR OF SPREADER. SERIOUS INJURY OR AMPUTATION COULD RESULT. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**



# OPERATION

## LOADING

**!** CAUTION: TO PREVENT DAMAGE TO AUGERS, SPINNERS, AND DRIVE LINES, FOREIGN OBJECTS (STONES, CONCRETE, TIMBER, METAL OR LARGE FROZEN CHUNKS OF MANURE) SHOULD NEVER BE LOADED INTO THE SPREADER.

**!** DANGER: NEVER ENTER THE SPREADER BOX FOR ANY REASON WITHOUT FIRST DISCONNECTING PTO SHAFT FROM TRACTOR. DO NOT ALLOW OTHERS IN THE BOX. ROTATING AUGERS CAN CRUSH AND DISMEMBER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

**!** CAUTION: DO NOT USE JACK EXCEPT WHEN SPREADER IS EMPTY. JACK WILL NOT SUPPORT ADDED WEIGHT. UNBALANCED WEIGHT MAY RESULT IN UNEXPECTED “TIP UP” OF SPREADER.

Before loading, especially in freezing weather, make sure the augers and spinners are free to rotate and the flow control rear gate moves freely up and down.

Check and be sure that the flow control rear gate is completely closed before loading.

When the spreader is parked for loading, shift the tractor to neutral or park and set the brakes. The moisture content of the manure will determine how full the spreader can be loaded so that no manure spills out.

You will probably be able to load solid manure at least level with the top of the box while semi-liquid and liquid manure will have to be less than full in the spreader box. It is unlawful to allow manure to splash or leak onto public roads.

A liquid manure kit is available for installation around the top of the box on your spreader which will aid in the containment of liquids.


## UNLOADING

**!** WARNING: MAKE CERTAIN EVERYONE IS CLEAR OF SPREADER BEFORE APPLYING POWER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

When you are ready to begin spreading application on the field, open the hydraulic flow control rear gate and slowly engage the tractor PTO clutch. This can be done while traveling forward to avoid a heavier application of liquid manure at the edge of the field than desired.

For liquid and semi-liquid manure, the application rate can be controlled by the amount the flow control rear gate is opened. The gate indicator on the front of the 7500 box or on rear of 7400 box will provide a ready reference for the amount of opening. See figure 4. For solid manure (dry, pen-packed or manure containing long straw or hay) the flow control rear gate MUST be completely open since this material is not free flowing.

**VERY IMPORTANT: THIS MACHINE IS NOT INTENDED TO BE A BALE GRINDER, HAY CHOPPER OR BEDDING MACHINE. LONG HAY OR STRAW MUST CONTAIN MANURE IN ORDER TO BE SPREAD. FAILURE TO COMPLY MAY DAMAGE THE DRIVE TRAIN AND VOID THE WARRANTY.**

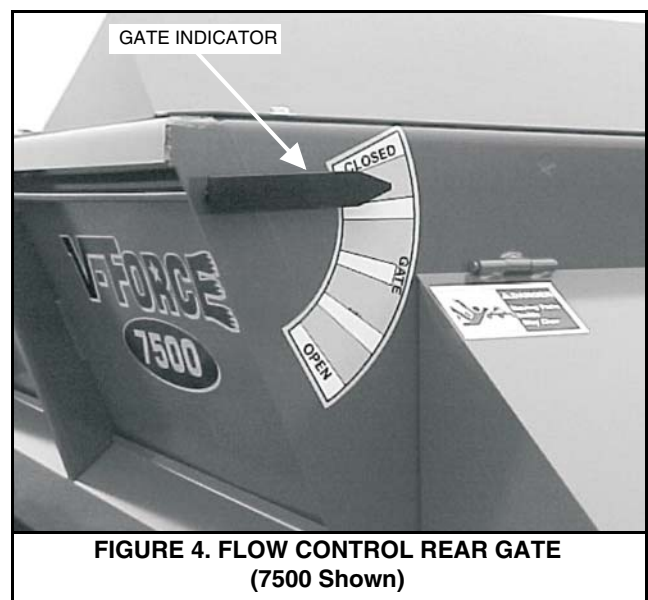


The rear spinners have been designed and tested to provide the best spread pattern for most liquids and semi solid manure. However, the pattern will vary for each specific condition. The factors that contribute most to differing patterns will be moisture content and the amount and length of bedding material. For most typical conditions, the spread pattern should be uniform and about 20 ft. wide. When this is the case, plan your spreading patterns so you do not have to travel over previously spread manure which will be slippery, resulting in poor traction. Traction on wet grass is also poor. When the resulting pattern may require that you overlap during spreading, use precautions on slopes and hills where you could experience a loss of traction by traveling over ground with previously spread manure.

**NOTE: Further control of the application rate is possible by the relationship of tractor engine speed to ground speed (transmission gear selection). For optimum, trouble-free performance it is necessary to operate at or near engine PTO speed.**

When the spreader is empty, idle the tractor and stop the PTO. Close the flow control rear gate.

**! WARNING: NEVER OPERATE PTO ABOVE ITS NORMAL 540/1000 RPM RATING. NEVER CONNECT SPREADER PTO SHAFT TO A 1000 RPM TRACTOR PTO, UNLESS THE SPREADER IS EQUIPPED WITH A 1000 RPM OPTIONAL KIT OR IS FACTORY BUILT FOR 1000 RPM. TRACTOR PTO MUST MATCH IMPLEMENT PTO. FAILURE TO HEED MAY RESULT IN SPREADER DAMAGE OR SERIOUS PERSONAL INJURY.**

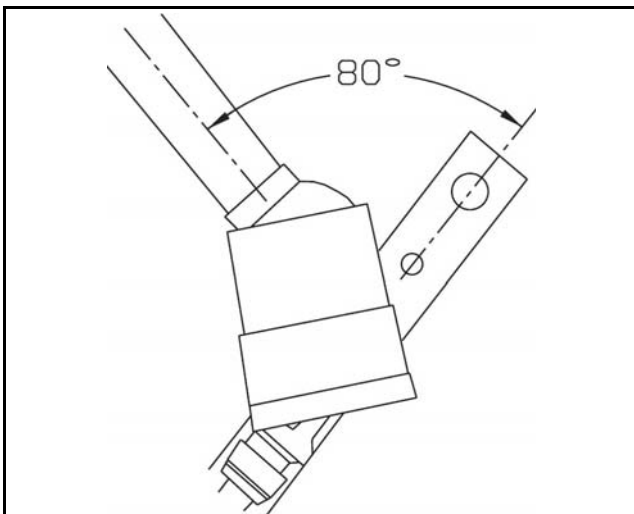

**NOTE: Failure to idle the tractor before disengaging the PTO will cause roller chain over-running and damage to the chain tighteners.**

**NOTE: Maximum life of the PTO shaft universal joints will result if you stop the PTO while making turns at the end of the field.**

**! CAUTION: DO NOT EXCEED THE MAXIMUM 80° TURNING ANGLE ON THE CONSTANT VELOCITY PTO DRIVE LINE. EXCEEDING THE TURNING ANGLE WILL DAMAGE THE CONSTANT VELOCITY “CENTER HOUSING” AND WILL EXERT EXCESSIVE PRESSURES ON THE PTO INPUT CENTER SHAFT AND RELATED BEARINGS.**


### **SHEAR SPROCKET INSTRUCTIONS**

(7500 Models - Standard, 7400 Models - Optional Prior to SV117400201)

The Meyer Spreader you have received has been equipped with a shear sprocket design on the main auger drive sprockets. The augers are being driven by two Allen head grade 8 shear bolts on each drive sprocket. The design is such that if the bolts are sheared another set of holes to install new shear bolt will always be accessible without turning over the machine.


**! DANGER: AT NO TIME SHOULD INSTALLATION BE DONE WITH ANYONE ON THE TRACTOR. SHUT THE TRACTOR OFF, REMOVE THE KEY AND DISCONNECT THE DRIVE LINE BEFORE DOING ANY SERVICE ON THIS MACHINE. SERIOUS INJURY OR DEATH MAY OCCUR IF SAFETY IS NOT FOLLOWED.**

Prior to Serial Number SV117400402 and SV127500243 & Later, the shear plate sprocket is set up with the standard drive bolts being 1/2"-20 (see figure 5 on page 19). If the 1/2"-20 bolts do shear, replace with the same 1/2"-20 diameter bolts after the obstruction has been removed. Install the new bolts in the proper way as to drive off of the head of the bolt, not the nut. Shear or sprocket failure will occur if assembled incorrectly! An extra set of holes for 9/16"-18 drive bolts are located on the sprocket if additional shear strength is needed due to shear bolt failure from extra tough material that is being spread. The two different size holes available (1/2"-20 & 9/16"-18) are close in size. **Be sure to install the proper size bolt into the correct size hole. CHANGING TO THE 9/16"-18 BOLTS PROVIDES LESS PROTECTION FOR THIS EQUIPMENT.**

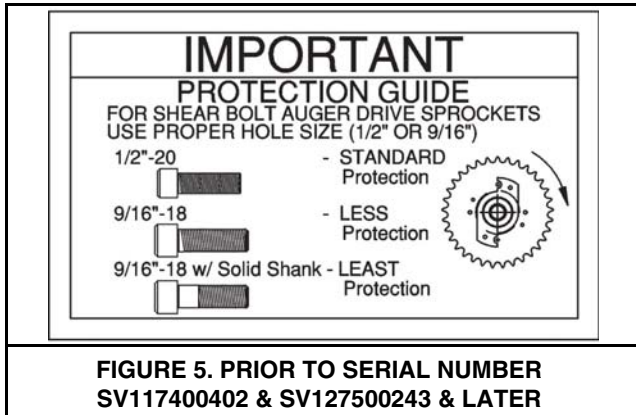

**FIGURE 5. PRIOR TO SERIAL NUMBER SV117400402 & SV127500243 & LATER**

Serial Number SV117400402 thru SV127500242, the shear plate sprocket is set up with the standard drive bolts being 1/2"-13 (see Figure 6). If the 1/2"-13 bolts do shear, replace with the same 1/2"-13" course thread bolts after the obstruction has been removed. Install the new bolts in the proper way as to drive off of **the head** of the bolt, not the nut. **Shear or sprocket failure will occur if assembled incorrectly!** 1/2"-20 fine thread bolts are available if additional shear strength is needed due to shear bolt failure from extra tough material that is being spread. **CHANGING TO THE 1/2"-20 BOLTS PROVIDES LESS PROTECTION FOR THIS EQUIPMENT.**

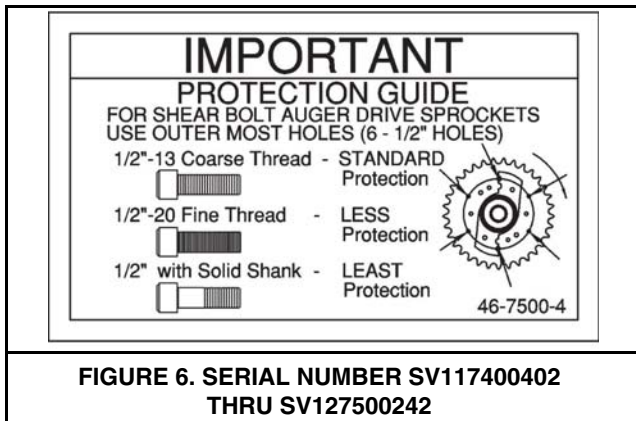

**FIGURE 6. SERIAL NUMBER SV117400402 THRU SV127500242**

Recommended procedure to follow if shear does occur. If only one auger shears unload the opposite side of spreader and remove obstruction from sheared side of machine. After obstruction has been removed install new shear bolts in sheared auger and unload the remainder of the load. If both sides do shear install only one set of auger shear bolts and unload one side at a time. After first side is unloaded install bolts in opposite side and unload the remainder of the spreader. If a second shear has happened without obstruction in the auger, install the next larger size shear bolt. As the shear bolt size is increased the protection on the machine is going to decrease. The potential for equipment damage is greater.

Order replacement bolts and nuts from the chart below.

**Prior to Serial Number SV117400402 and SV127500243 and Later**

Part #	Description
831-5020-1.75	1/2"-20 x 1-3/4" Allen Head Cap Bolt
884-5020	1/2"-20 Top Locknut Grade 8
831-5618-1.75	9/16"-18 x 1-3/4" Allen Head Cap Bolt
884-5618	9/16"-18 Top Locknut Grade 8
831-5618-1.75-SL	9/16"-18 x 1-3/4" Allen head Cap Bolt With Shank
910-0101	120B33 Shear Sprocket Assembly Complete

**Serial Number SV117400402 thru SV127500242**

Part #	Description
831-5013-1.75	1/2"-13 x 1-3/4" Allen Head Cap Bolt
884-5013	1/2"-13 Top Locknut Grade 8
831-5020-1.75	1/2"-20 x 1-3/4" Allen Head Cap Bolt
884-5020	1/2"-20 Top Locknut Grade 8
831-5020-2.25-S	1/2"-20 x 1-3/4" Allen head Cap Bolt With Shank
910-0105	120B33 Shear Sprocket Assembly Complete (14 hole)

**STORAGE AFTER USE**

**! WARNING: DISCONNECT PTO DRIVE SHAFT AND HYDRAULIC HOSES BEFORE CLEANING, ADJUSTING, OR SERVICING THIS MACHINE. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

Before storing this spreader for an extended period of time perform the following:

Allow the spreader to completely clean out the last load. Thoroughly hose off all manure from the outside of the spreader and the inside of the box, particularly getting the flow control rear gate mechanism clean. The wash water can be drained into your manure storage pit, or if the gate is left closed, the water can be spread on the field. After cleaning, completely lubricate the entire spreader to exclude moisture from bearings and to prevent condensation from forming during storage. See LUBRICATION on pages 26 - 28.

Apply oil to roller chain drives. It is also a good time to inspect all adjustments and check for parts that need repair or replacement. Performing these tasks now will guarantee that the spreader is ready for use at the beginning of the next season.

# PTO DRIVE LINE

**! WARNING: BEFORE ATTEMPTING TO OPERATE THIS SPREADER, READ AND STUDY ALL SAFETY INFORMATION. IN ADDITION, MAKE SURE THAT EVERY INDIVIDUAL WHO OPERATES OR WORKS WITH THE SPREADER, WHETHER FAMILY MEMBER OR EMPLOYEE, IS FAMILIAR WITH THESE SAFETY PRECAUTIONS.**

**! WARNING: DISCONNECT PTO DRIVE SHAFT AND HYDRAULIC HOSES (RELIEVE HYDRAULIC PRESSURE) BEFORE CLEANING, ADJUSTING, LUBRICATING OR SERVICING THIS SPREADER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

The Meyer V-Force Spreader is equipped with a cutout type clutch on the implement half of the PTO drive line. The clutch is designed to limit the amount of torque transferred to the machine through the drive line. If excessive torque is developed the clutch will disengage. A loud ratcheting sound will be heard and the transfer of power to the machine will be disrupted. To re-engage the machine simply shut down the PTO and allow the drive line to come to a stop. The PTO can then be re-engaged to restart the spreader. The cutout clutch will either re-engage upon shut down of the PTO or just before it comes to a complete stop.

The cutout clutch will disengage if start up is done in an abrupt or reckless manner. It also will disengage from foreign materials entering the spinner area of the spreader. It may also be possible to disengage the clutch by overloading or flooding the spinners with free flowing or liquid manure. If PTO clutch fails to re-engage it will be necessary to remove the foreign object from the spreader before restarting. **THERE IS NO FIELD ADJUSTMENT ON THE CUTOUT CLUTCH.**

**! DANGER: NEVER ENTER THE SPREADER BOX FOR ANY REASON WITHOUT FIRST PERFORMING THESE STEPS:**

- STOP THE TRACTOR, SHUT THE TRACTOR OFF AND REMOVE THE KEY.
- SET THE PARKING BRAKE AND DISCONNECT THE PTO DRIVE LINE FROM THE TRACTOR.
- DO NOT ALLOW OTHERS IN THE BOX.

**ROTATING AUGERS CAN CRUSH AND DISMEMBER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

## DRIVE LINE ATTACHMENT

The cutout clutch end of the PTO drive line must always be attached to the implement. The PTO drive line is equipped with a 1 3/8-6, 1 3/8-21 or 1 3/4-20 spline on the implement half for attaching to the spreader. Remove the M17-hexagon bolt from the splined hub and slide the PTO onto the implement splined input shaft. Install the hexagon bolt through the hub being sure the bolt is falling into the groove on the splined shaft. Torque tight using a metric size M17 6-point socket and torque down to 75 ft. lbs. **A M17 6-POINT METRIC SOCKET MUST BE USED AS ROUNDING OF HEXAGON BOLT AND INACCURACY OF TORQUE SETTINGS COULD OCCUR.**

If removal of the M-17 hexagon bolt is necessary, use the same M-17 6-point socket and loosen bolt 1/2 turn. Insert a 1/4" drift punch in the hole on the opposite side of the hexagon bolt and tap to loosen the seated portion of the bolt from the splined hub. Loosen in 1/2 turn increments while tapping to loosen. After bolt seat has been released, remove the bolt. If bolt is not unseated, damage to the hexagon bolt will occur.

Attach the shield safety chain to a suitable area on the spreader, preferably to the implement PTO steel shield.

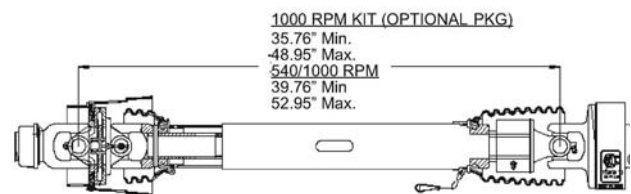


FIGURE 7. PTO DRIVE LINE

**! DANGER: NEVER ENTER THE SPREADER BOX FOR ANY REASON WITHOUT FIRST PERFORMING THESE STEPS:**

- STOP THE TRACTOR, SHUT THE TRACTOR OFF AND REMOVE THE KEY.
- SET THE PARKING BRAKE AND DISCONNECT THE PTO DRIVE LINE FROM THE TRACTOR.
- DO NOT ALLOW OTHERS IN THE BOX.

**ROTATING AUGERS CAN CRUSH AND DISMEMBER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

Adjust the drawbar at 15-22" above the ground. Extend or shorten the drawbar so horizontal distance from end of tractor PTO shaft to center of hitch pin hole is 14" for 540 RPM 1-3/8-6 spline, (16" for optional 1000 RPM 1-3/8-21, 20" for 1000 RPM 1 3/4-20 spline). Secure the drawbar so the hitch pin hole is located directly below the PTO drive line. PTO adapters are not recommended as damage to the drive line may occur. A hitch pin with a minimum diameter of 1" and bottom retaining pin is recommended.

**AN IMPROPERLY LOCATED HITCH POINT MAY CAUSE DAMAGE TO THE UNIVERSAL JOINTS OF THE PTO DRIVE SHAFT. CONFORMING TO THE DRAWBAR AND PTO RELATIONSHIP SHOWN ON FIGURE 1, PAGE 13 WILL ENSURE THAT THE PTO DRIVE SHAFT WILL NOT BECOME OVER EXTENDED. USE THE CORRECT SETTING FOR 14" - 540 RPM 1 3/8-6 or 16" - 1000 RPM 1 3/8-21, or 20" - 1000 RPM 1 3/4- 20. WITH INITIAL HOOK-UP TO YOUR NEW MEYER SPREADER TEST PTO TRAVEL BY TURNING EQUIPMENT IN BOTH DIRECTIONS OBSERVING THE MINIMUM AND MAXIMUM TRAVEL DIMENSIONS AS SHOWN PER DRAWING ON FIGURE 7, PAGE 19.**

**PTO LUBRICATION**

**LUBRICATION**

A high quality Lithium Base Grease should be used.


**PRIOR TO USE**

- A. Using the CV Zerk (Key #2) place 20 pumps of grease into the CV center housing. This should be done with the drive line / CV as straight as possible.
- B. Slowly articulate the double joint through its maximum joint angle several times.
- C. Return the CV joint to its straight position and insert additional grease into the CV Zerk (Key #2) until grease is evident around the housing and center sliding disk.

**NORMAL OPERATION**

- A. Lubricate the following items after every eight (8) hours of operation. If short rows and frequent turning or other demanding conditions exist, lubricate at four (4) hour intervals.
  - 1. Cross and bearings (Key #1)-Add grease until it is purged around the seals.
  - 2. CV center housing (Key #2)-Add grease until it is evident around the center sliding disk. (Grease fitting on CV-some models only)
  - 3. Telescoping members (Key #3)-Add grease until it adequately covers the sliding members. Take apart occasionally to make sure adequate lubrication is being added.

IMPORTANT: GREASE 2 FITTINGS DAILY

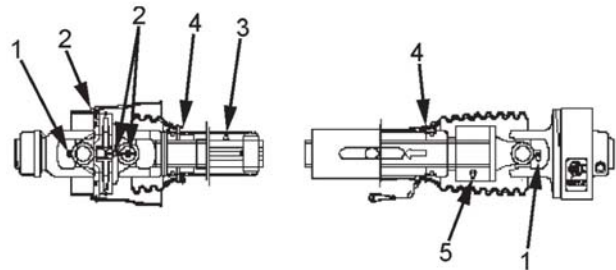

**FIGURE 8. PTO DRIVE LINE**


- 4. Shield bearings (Key #4)-Add 2-3 pumps.
- 5. Over-running clutch (Key #5) Add 10 pumps every 25-30 loads.


**FAILURE TO FREQUENTLY GREASE THE CV CENTER HOUSING AND TELESCOPING MEMBERS WILL REDUCE THE LIFE OF THE CV.**

**MAINTENANCE INFORMATION**

It is extremely important to follow the maintenance guidelines. If telescoping members become hard to slide during normal operation, it is recommended the shaft be taken apart, cleaned with solvent and re-coated with grease before re-assembling. As a minimum it is important this be done after each season of use.

## LUBRICATION FOR OPTIONAL TRUCK MOUNT MECHANICAL DRIVE SYSTEM

 **WARNING: DISENGAGE PTO POWER SOURCE, REMOVE KEY, AND RELIEVE HYDRAULIC PRESSURE BEFORE CLEANING, ADJUSTING, LUBRICATING OR SERVICING THIS MACHINE. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

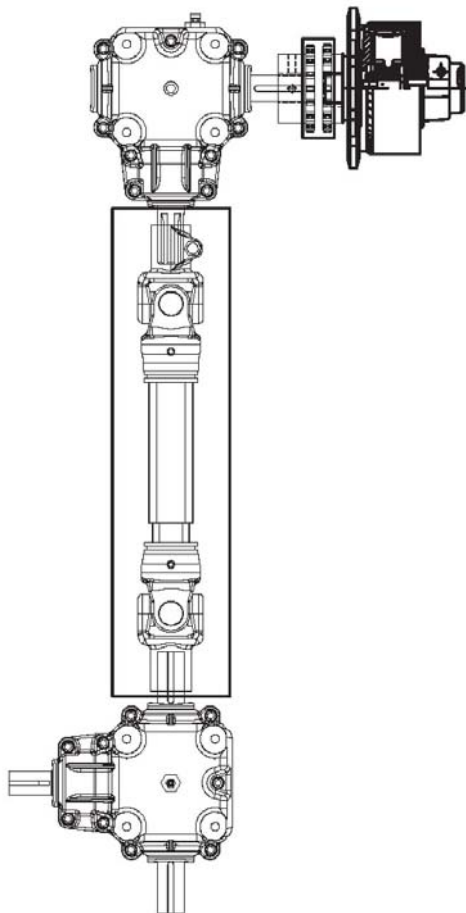

### MONTHLY LUBRICATION

**L1** Keep the upper and lower gearboxes 1/2 full of 75W90 **Synthetic** oil, capacity approximately 30 oz. Check regularly for any observable leakage. If leakage is excessive, replace required input/output shaft seals as needed. **Use only synthetic 75W90 oil.**

### DAILY LUBRICATION

**L2** Grease PTO drive line (2) places with lithium grease every 8 hours.

# ADJUSTMENTS



**WARNING: DISCONNECT PTO DRIVE SHAFT AND HYDRAULIC HOSES (RELIEVE HYDRAULIC PRESSURE) BEFORE CLEANING, ADJUSTING, LUBRICATING OR SERVICING THIS SPREADER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**


## SPINNER MATERIAL GUIDES

Regularly inspect and adjust two spinner material guides located at both the LR and RR of the spreader. Create a 1/8 - 3/8" clearance between material guides and spinner teeth, figure 9. Maintain the recommended clearances for maximum spreading pattern. Adjust to prevent excessive manure build-up on material guide inner surfaces. Adjust to prevent manure chunks or foreign object lodging between material guides and spinner teeth.

**NOTE: Excessive lodging can cause premature spinner tooth wear, "bent-over" or even breakage.**

## SHEAR ARM MATERIAL GUIDE ADJUSTMENT

Adjustment for the 1/8- 3/8" clearance of each material guide to spinner tooth is made by loosening the jam nut on the linkage arm and turning the linkage arm to either move the guide in closer or out farther from the spinner teeth. After adjustment has been made for the 1/8- 3/8" clearance retighten the jam nut to hold the material guide in place. Once recommended clearance is obtained turn spinners over by hand in the direction by which the spreader would turn to check clearance. Do not turn in the opposite direction as front chain tightener damage could occur. If foreign objects enter the spinner area the rear pivot bolt on the shear arm is designed to shear. The 1/2-13 x 3 1/2" grade 5 replacement machine bolts are stored under the rear shield. For replacement install with 1/2" flat washer on top and on bottom of block and tighten nylon locknut firmly.

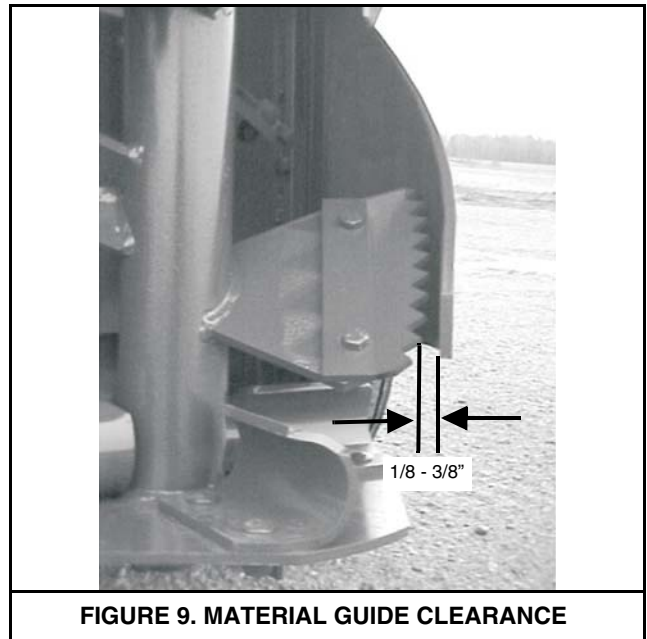




**WARNING: DISCONNECT PTO DRIVE SHAFT AND HYDRAULIC HOSES (RELIEVE HYDRAULIC PRESSURE) BEFORE CLEANING, ADJUSTING, LUBRICATING OR SERVICING THIS SPREADER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

## FRONT DRIVE ROLLER CHAINS

There are five roller chain drives located at the front of the spreader. Regularly check that all tensioning springs are in serviceable condition for automatic roller chain tightening. Manually adjust spring tensioners (as needed) by turning double locknuts on all tensioning bolt/idler assemblies. Proper roller chain tension is when 1/4" to 1/2" deflection occurs on the slack side of the chain. Regularly re-check all roller chain tensions. Keep all roller chains tight at all times! For clarity purposes, the following illustrations detail each roller chain reduction separately.

**NOTE: The side bars of the roller chains will wear into the idler nylon rollers up to the rollers of the roller chain forming grooves. These grooves will serve as a guide when the roller chain loosens due to normal use. From this point on, after tightening, the idler nylon rollers should run for hundreds of hours without any noticeable wear.**

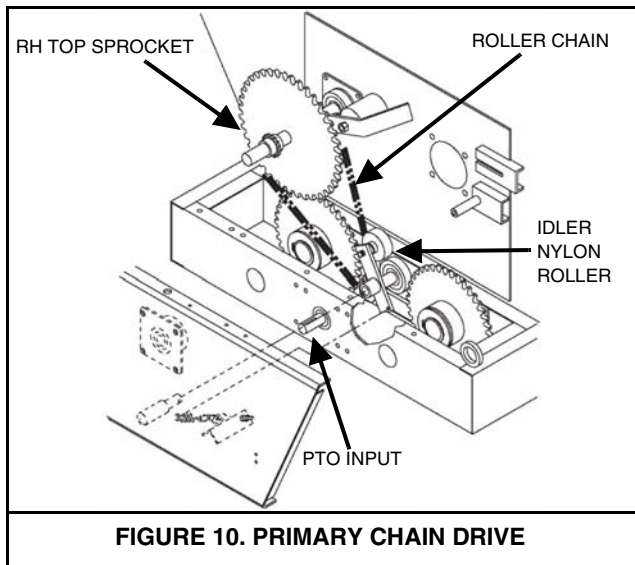


**FIGURE 10. PRIMARY CHAIN DRIVE**

### SPRING LOADED ADJUSTER

The primary chain drive (PTO input shaft to the large RH top sprocket, Figure 10) is automatically tensioned by a spring loaded idler nylon roller. The extension spring should extend 2" from its neutral 5" total length.

Manual adjustment for the automatic tensioning idler, nylon roller assembly is located at the left rear of the spreader's front bearing mounting plate.

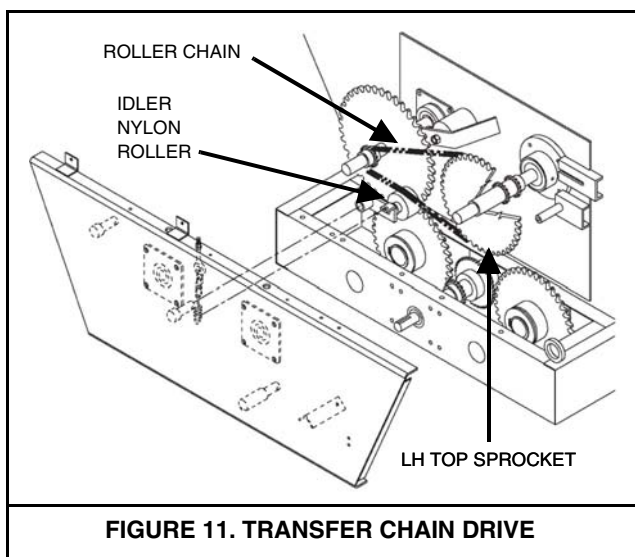


**FIGURE 11. TRANSFER CHAIN DRIVE**

### SPRING LOADED ADJUSTER

The transfer chain drive (large RH top sprocket to the large LH top sprocket, figure 11) is automatically tensioned by a spring loaded idler nylon roller. The extension spring should extend 2" from its neutral 5" total length.

Manual adjustment for the automatic tensioning idler, nylon roller assembly is located at the front center of the spreader's front bearing mounting plate.



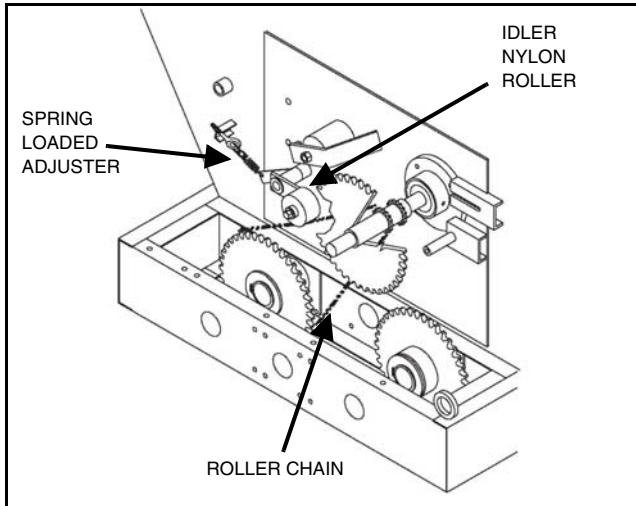


**FIGURE 12. RH AUGER CHAIN DRIVE**

**RH AUGER SPROCKET**

The RH auger chain drive, figure 12, is automatically tensioned by a spring loaded idler NYLON roller. The extension spring should extend 3/4" from its neutral 4" total length.

Manual adjustment for the automatic tensioning idler, NYLON roller assembly is located at the right front lower corner of the spreader tank.

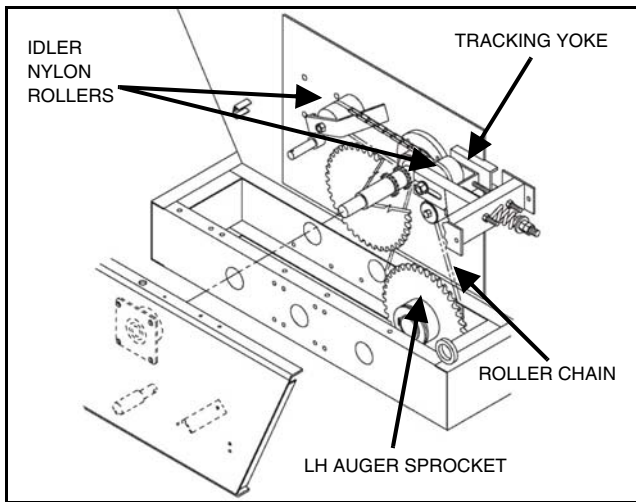


**FIGURE 13. LH AUGER CHAIN DRIVE**

**COMPRESSION SPRING**

The LH auger chain drive is automatically tensioned by a spring loaded heavy compression spring and tracking yoke/idler, NYLON roller assembly, figure 13. The one heavy compression spring should be compressed to 3-1/2" to 4" in length.

Manual adjustment for the automatic tensioning idler, NYLON roller assembly is located at the left front corner of the spreader tank.

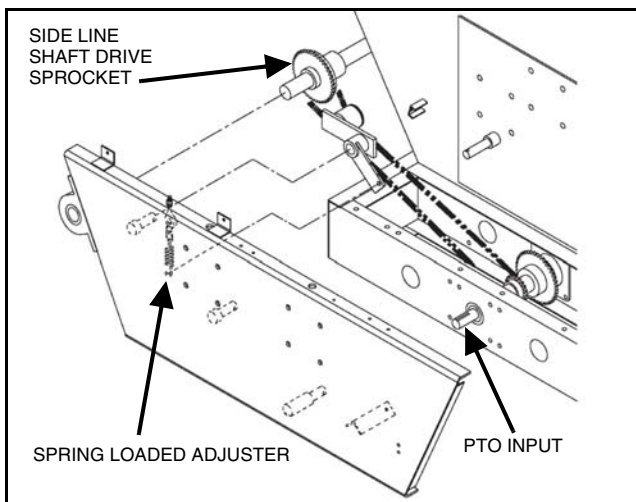

**FIGURE 14. SIDE SHAFT CHAIN DRIVE**

**IDLER NYLON ROLLER**

The side shaft chain drive (PTO input shaft to the side line shaft drive sprocket, figure 14) is automatically tensioned by a spring loaded idler NYLON roller. The extension spring should extend 2" from its neutral 5" total length.

Manual adjustment for the automatic tensioning idler, NYLON roller assembly is located at the right front of the spreader's front bearing mounting plate.

# LUBRICATION



**WARNING: DISCONNECT PTO DRIVE SHAFT AND HYDRAULIC HOSES (RELIEVE HYDRAULIC PRESSURE) BEFORE CLEANING, ADJUSTING, LUBRICATING OR SERVICING THIS MACHINE. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

## DAILY LUBRICATION (every 8-12 loads)

**L1** Grease (2) rear spinner lower bearings. These bearings are grease line fitted to the LR frame channel of the spreader.

**L2** Keep the reservoir tank full of new 30 weight oil for chain lubrication. The automatic chain oiler will lubricate the chains automatically every time the rear gate, hydraulic cylinder is activated. The reservoir is accessible by opening the front steel shield cover.

**L3** Grease PTO Drive line (9) places with Lithium grease every 8 hours. (See PTO LUBRICATION section for further detail.)

**L4** Grease (4) bearings supporting the two large jack shaft reduction sprocket weldments on the front drive. The zerks are accessible by opening the front steel shielding cover and through the front bearing plate.

**L5** Grease (2) auger shaft bushings. These bearings are grease line fitted to the RF shield of the spreader. Grease Daily, Minimum of 10 pumps. Over greasing is not possible.

## WEEKLY LUBRICATION (every 25-30 loads)

**L6** Grease (2) PTO input shaft bearings. These bearings are grease line fitted to the RF shield of the spreader.

**L7** Grease bearings on the RH side line shaft. The front bearing is zerk accessible through the RF steel shielding. The remaining rear bearings are located along the RH side of the spreader tank, zerks accessible through the steel shielding.


**L8** Grease (4) tandem wing pivots. Effectively grease by jacking up the spreader to relieve pressure points on the pivot shaft. Over greasing is not possible.

**L9** (All 7400 Models and 7500 Models prior to 2011) grease (2) flow control rear gate and lifting arm pivot points. Grease gate pivot at center of flow control rear gate. Grease lifting arm pivot support at LR of spreader. Over greasing is not possible. Apply grease to slot in gate lift arm.

**L10** Grease (2) flow control rear gate slide guides. With the flow control gate in the closed position, grease the zerk located on each side of the gate slides.

Grease 4-6 pumps on each side and run gate up and down several times. Repeat the greasing until gate slides are heavily lubricated. In freezing weather dump used motor oil down each slide guide once a week or more often if needed. Over greasing is not possible.

**L11** Grease (1) integral overrunning clutch at rear of the PTO drive line. The zerk is on the yoke of the clutch. Use Shell Super Duty or an equivalent lithium grease.

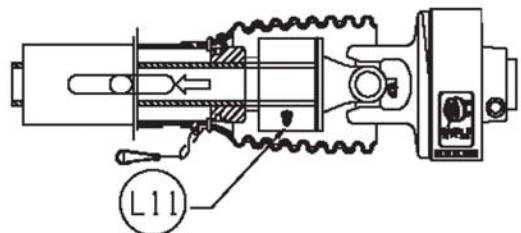


**L12** Check regularly for any observable lube leakage of the (3) gearboxes at the rear of the spreader. See L12 under *MONTHLY LUBRICATION*, page 27.

**MONTHLY LUBRICATION**


**L12** Keep the (3) gearboxes 1/2 full of liquid gear grease at all times, capacity approximately 30 oz. Check regularly for any observable leakage. If leakage is excessive, replace required input/output shaft seals as needed. Lubricate with a “Semi-Fluid, EP Lithium Base, Gear Grease”.

**L13** Clean and repack the wheel hubs with axle grease annually. Grease hub through zerk in hub monthly. Hub from factory has bearings packed but hub is not fully loaded with grease. Be careful not to over grease and force seal out of back side of hub.

(5 ROLLER CHAINS)

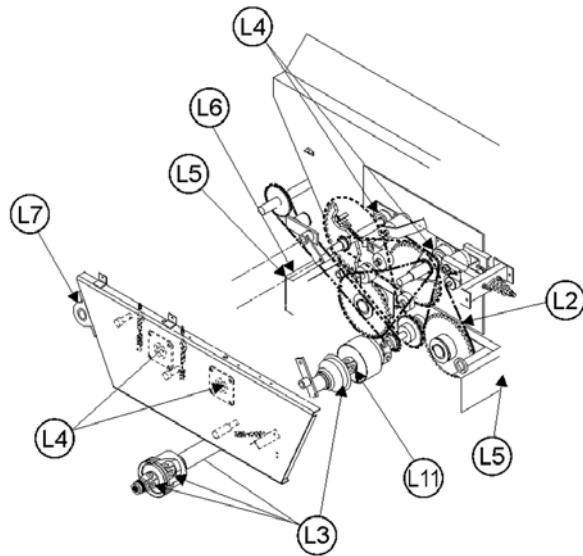

(SHIELDS REMOVED)

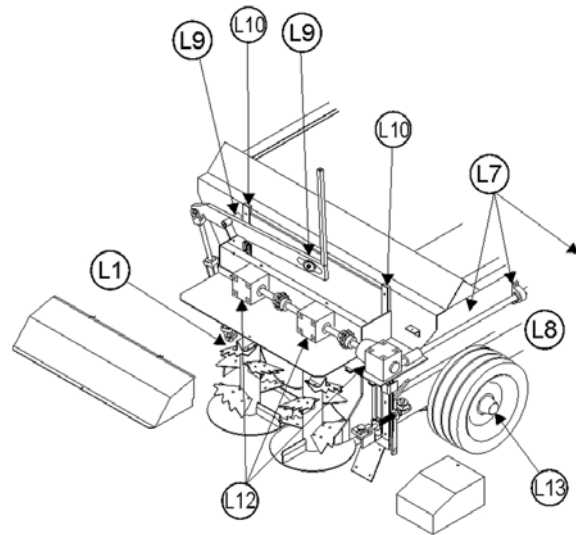


7500-LUBE

**Equivalent Viscosity of ISO-VG Grades at 104°F and SAE Gear Lube Grades**

ISO-VG Grade	SAE Gear Lube Grade
46	75W
100	80W-90
220	90
460	85W-140
1500	250

# LUBRICATION & ADJUSTMENT FOR 3RD AUGER

**! WARNING: DISCONNECT PTO DRIVE SHAFT AND HYDRAULIC HOSES (RELIEVE HYDRAULIC PRESSURE) BEFORE CLEANING, ADJUSTING, LUBRICATING OR SERVICING THIS MACHINE. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

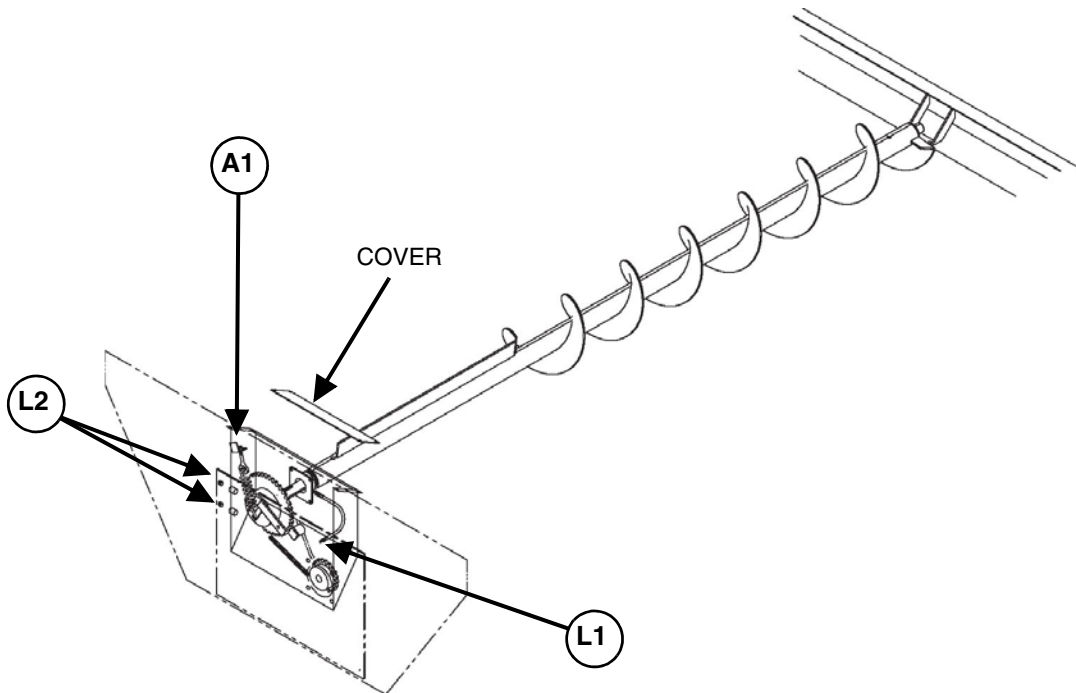

## WEEKLY LUBRICATION (every 25-30 loads)

**L1** Grease (1) bearing supporting the front shaft of the 3rd auger assembly. This bearing is grease line fitted to the spreader front, bearing back plate. The zerk is accessible by opening the front steel shielding cover.

## SEASONAL LUBRICATION

**L2** Maintain oil level in the (1) oil bath enclosure at the top, check plug line level. Check regularly for any observable leakage. If oil leakage is excessive, repair with silicone. Use #80-90 wt. gear lube oil or an equivalent. Lighter weight gear lube oil may be used in temperatures less than 20° F. Change oil in the oil bath enclosure after the first season of use and regularly thereafter. (2.5 gallon capacity) Condensation can occur. Drain out water (bottom plug) as needed.

- Remove lower plug for draining purposes.
- Remove reservoir cover or level plug for filling

purpose. (Seal cover tight with silicone when re-installing.)

## ADJUSTMENTS

**A1** The 3rd auger drive roller chain (large LH top reduction sprocket weldment to the 3rd auger) enclosed in the oil bath is automatically tensioned by a spring loaded idler/slide pipe. The tensioning, extension spring should extend 3/4" from its neutral 4" total length.

Manual adjustment for the automatic tensioning idler assembly is located at the RF, top of the oil bath enclosure just under the cover.

# INSTRUCTIONS FOR AUTOMATIC CHAIN OILER



**WARNING: DISCONNECT PTO DRIVE SHAFT AND HYDRAULIC HOSES (RELIEVE HYDRAULIC PRESSURE) BEFORE CLEANING, ADJUSTING, LUBRICATING OR SERVICING THIS SPREADER. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

The automatic chain oiler attachment gives a squirt of clean oil to all roller chains every time that the spreaders rear gate, hydraulic cylinder is activated. In this way, the spreaders roller chains get oiled in direct proportion to the number of hydraulic cylinder cycles of the rear gate. This assures adequate lubrication.

New 30 weight oil, which is placed in the reservoir tank mounted on the spreader, is all that is needed to properly lubricate all roller chains and sprockets. The automatic chain oiler does not use any oil from the tractors hydraulic system. The hydraulic hose connected to the bottom of the oiler pump only serves to power the piston in the pump every time that the spreaders rear gate is opened.

Should the oil reservoir tank run dry, pour about a 1/2 cup of clean 30 weight oil into the tank. Allow time for the oil to run down into the oiler pump slowly and allow air to escape. After thirty minutes to one hour has passed, finish filling the reservoir tank. Make sure that all fittings and brackets are tight when finished filling the tank.



**WARNING: HYDRAULIC FLUID ESCAPING UNDER PRESSURE CAN HAVE SUFFICIENT FORCE TO PENETRATE SKIN. KEEP ALL HOSES AND CONNECTIONS IN GOOD SERVICEABLE CONDITION. FAILURE TO HEED MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

While running the tractors hydraulics only, open and close the spreaders rear gate several times. This will cycle the hydraulic cylinder leading to the oiler pump. Keep cycling until oil can be seen in all of the oil lines leading to the oiler brushes. (If you experience problems priming the oiler pump, you may need to bleed air out of the hydraulic hose where it is connected to the pump. Crack the fitting until oil comes out then re-tighten.) The hydraulic cylinder that the oiler pump is tied into is double acting and must reach 300 PSI of pressure to actuate the pump.

When replacing oiler brushes into brush holders, use regular 1/2"-20 nuts. Tighten nut finger tight initially as some adjustment may be needed later. For best results, place brush holders over top of roller chains and directly on top of sprockets. Adjust brush holders so oiler brushes are pushed down into the roller chain approximately 1/2". Carefully tighten up the 1/2"-20 nuts on the oiler brushes. DO NOT over tighten as damage to the brush will occur. The plastic threads of the oiler brush will crack and then break off from the brush body.


**IMPORTANT! The 5/32" oil line tubing can only be removed from an oiler brush by pushing in on the red plastic ring and pulling the tubing out while holding the ring down.**

The oiler pump is set at the factory to deliver the maximum amount of oil per cycle. If less oil is desired, loosen the jam nut on the bottom of the pump and screw in the adjusting shaft 1/4" or approximately 5 turns. It is not recommended to screw the shaft into the bottom of the oiler pump more than 15 turns as this may not allow for proper lubrication of the roller chains.

**IMPORTANT! Always use new 30 weight oil. In cold weather, use a SAE 10 or a mixture of two parts of 30 weight oil to one part diesel fuel.**

# REPAIR PARTS


## FRONT SHIELD & SIDE SHAFT DRIVE

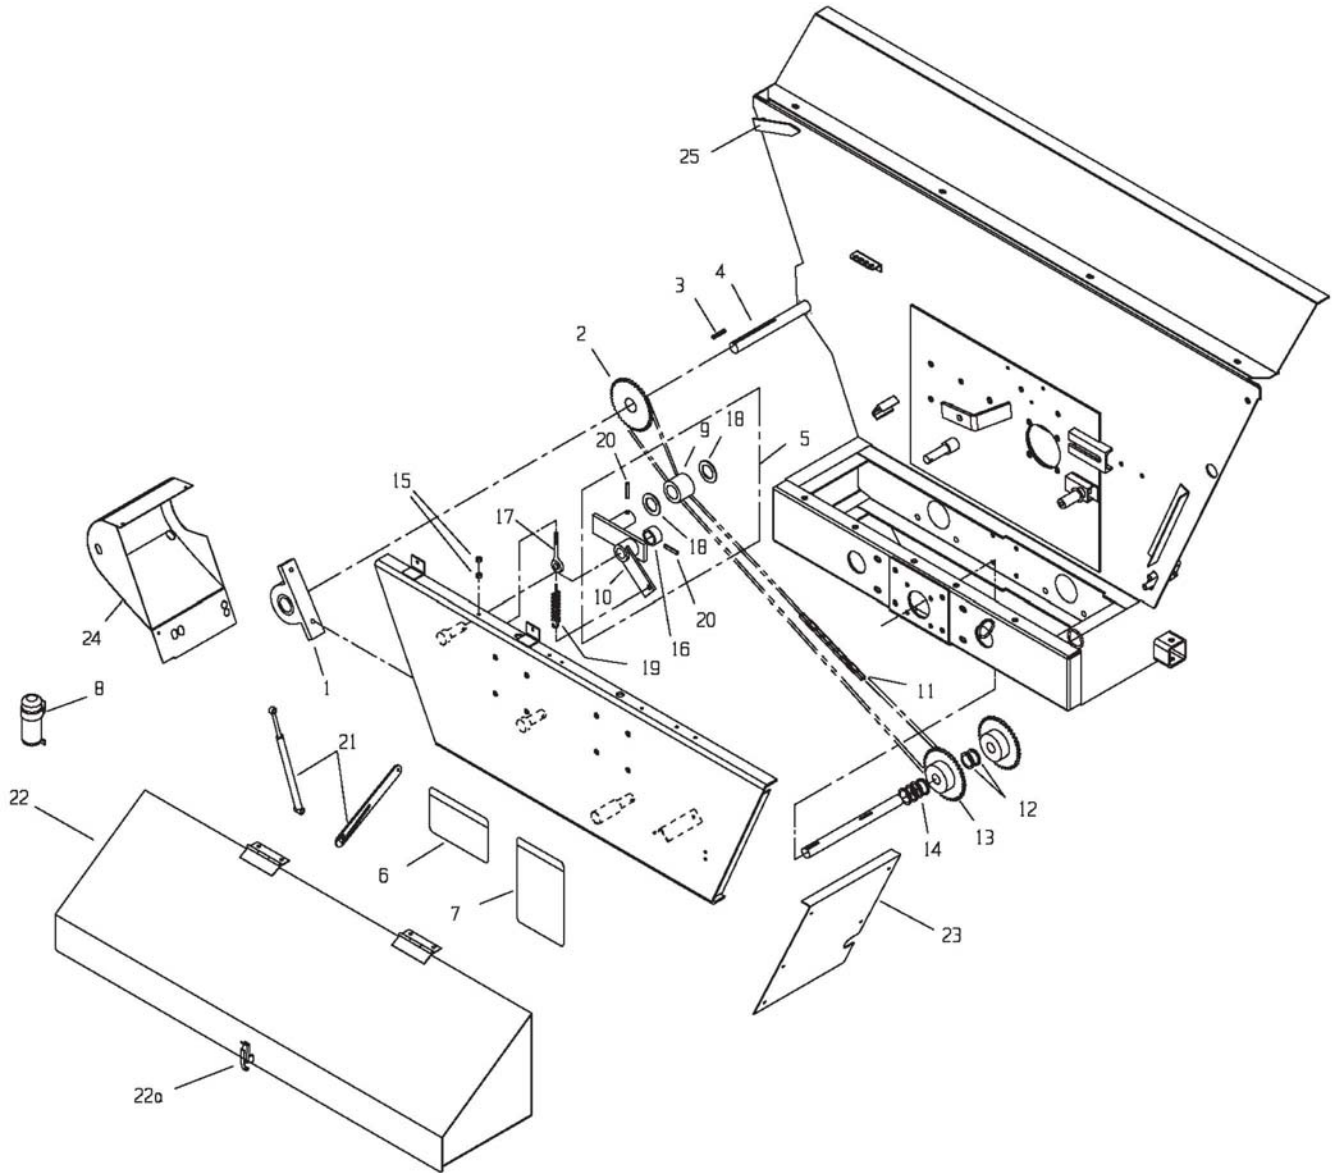

## FRONT SHIELD & SIDE SHAFT DRIVE

KEY	PART NO.	DESCRIPTION
1	914-3801	1-3/8" Pillow Block Bearing
2	910-0013	80B18 Sprocket 1-3/8" Bore, 5/16" Keyway
3	935-0002	5/16 x 5/16 x 2-1/4" Hardened Key
4	923-3837	SV7500 Front Side Shaft
5	925-3882	Side Shaft Tightener Assy. Complete
6	46-3600-12	Operating Procedure Decal
7	46-3600-14	Maintenance Warning Decal
8	33-0044	Manual Holder W/Cap
9	912-0001	Nylon Roller
10	925-3882-1	Side Shaft Chain Tightener Weldment
11	911-0070	#80-97 Link Roller Chain (540 RPM/1000 RPM Kit)
	911-0001	#80-98 Link Roller Chain (Gin Trash-540 RPM/1000 RPM Kit)
	911-0035	#80-95 Link Roller Chain (Gin Trash-1000 RPM)
	911-0054	#80-94 Link Roller Chain (1000 RPM)
12	808-150-300-10	10 Ga. Machine Bushing (As Required)
13	910-0039	80B22 Sprocket 1-1/2" Bore, 3/8" Keyway (660 RPM Standard On 540 RPM Model Or With Optional 1000 RPM Kit)
	910-0069	80B22 Split Sprocket 1-1/2" Bore, 3/8" Keyway (660 RPM On 540 RPM Model Or With Optional 1000 RPM Kit)(Weld Seams)
	910-0036	80B24 Sprocket 1-1/2" Bore, 3/8" Keyway (718 RPM On Gin Trash 540 RPM Model or Gin Trash with Optional 1000 RPM Kit)
	910-0015	80B18 Sprocket 1-1/2" Bore, 3/8" Keyway (740 RPM On Gin Trash 1000 RPM Model)
	910-0078	80B16 Sprocket 1-1/2" Bore, 3/8" Keyway (660 RPM On 1000 RPM Model)
14	808-1.5-2.25-10	10 Ga. Machine Bushing (As Required)
15	813-3118-Z	5/16-16 Nut Zinc
16	808-1-1.5-18	18 Ga. Machine Bushing (As Required)
17	933-3804	5/16-18 x 4" Eye Bolt Fully Threaded
18	808-1.25-1.875-14	1-1/4 ID x 1-7/8 OD x 14 Ga. Machine Bushing
19	929-0003	Tightener Spring
20	38-0013	5/16 x 1-3/4" Roll Pin
21	955-3703	Gas Assist Spring (Prior to 08 serial #'s)
	925-5006-1	Shield Support Arm (08 Serial #'s & Later)
22	924-3821	Main Front Shield Assy. (Prior to 08 serial #'s)
	924-3827	Main Front Shield Assy. (08 Serial #'s & Later)(540 RPM, 1000 RPM Kit)
	924-3827-RPM	Main Front Shield Assy. (1000 RPM)
22a	32-0018-1	Heavy Duty Latch
23	924-3826	Left Front Shield
24	924-5001	Right Front Shield Welded Assy.
25	925-3762	Gate Indicator Pointer Assy. (Model 7500 Only)

# AUGER DRIVE, PRIMARY REDUCTION

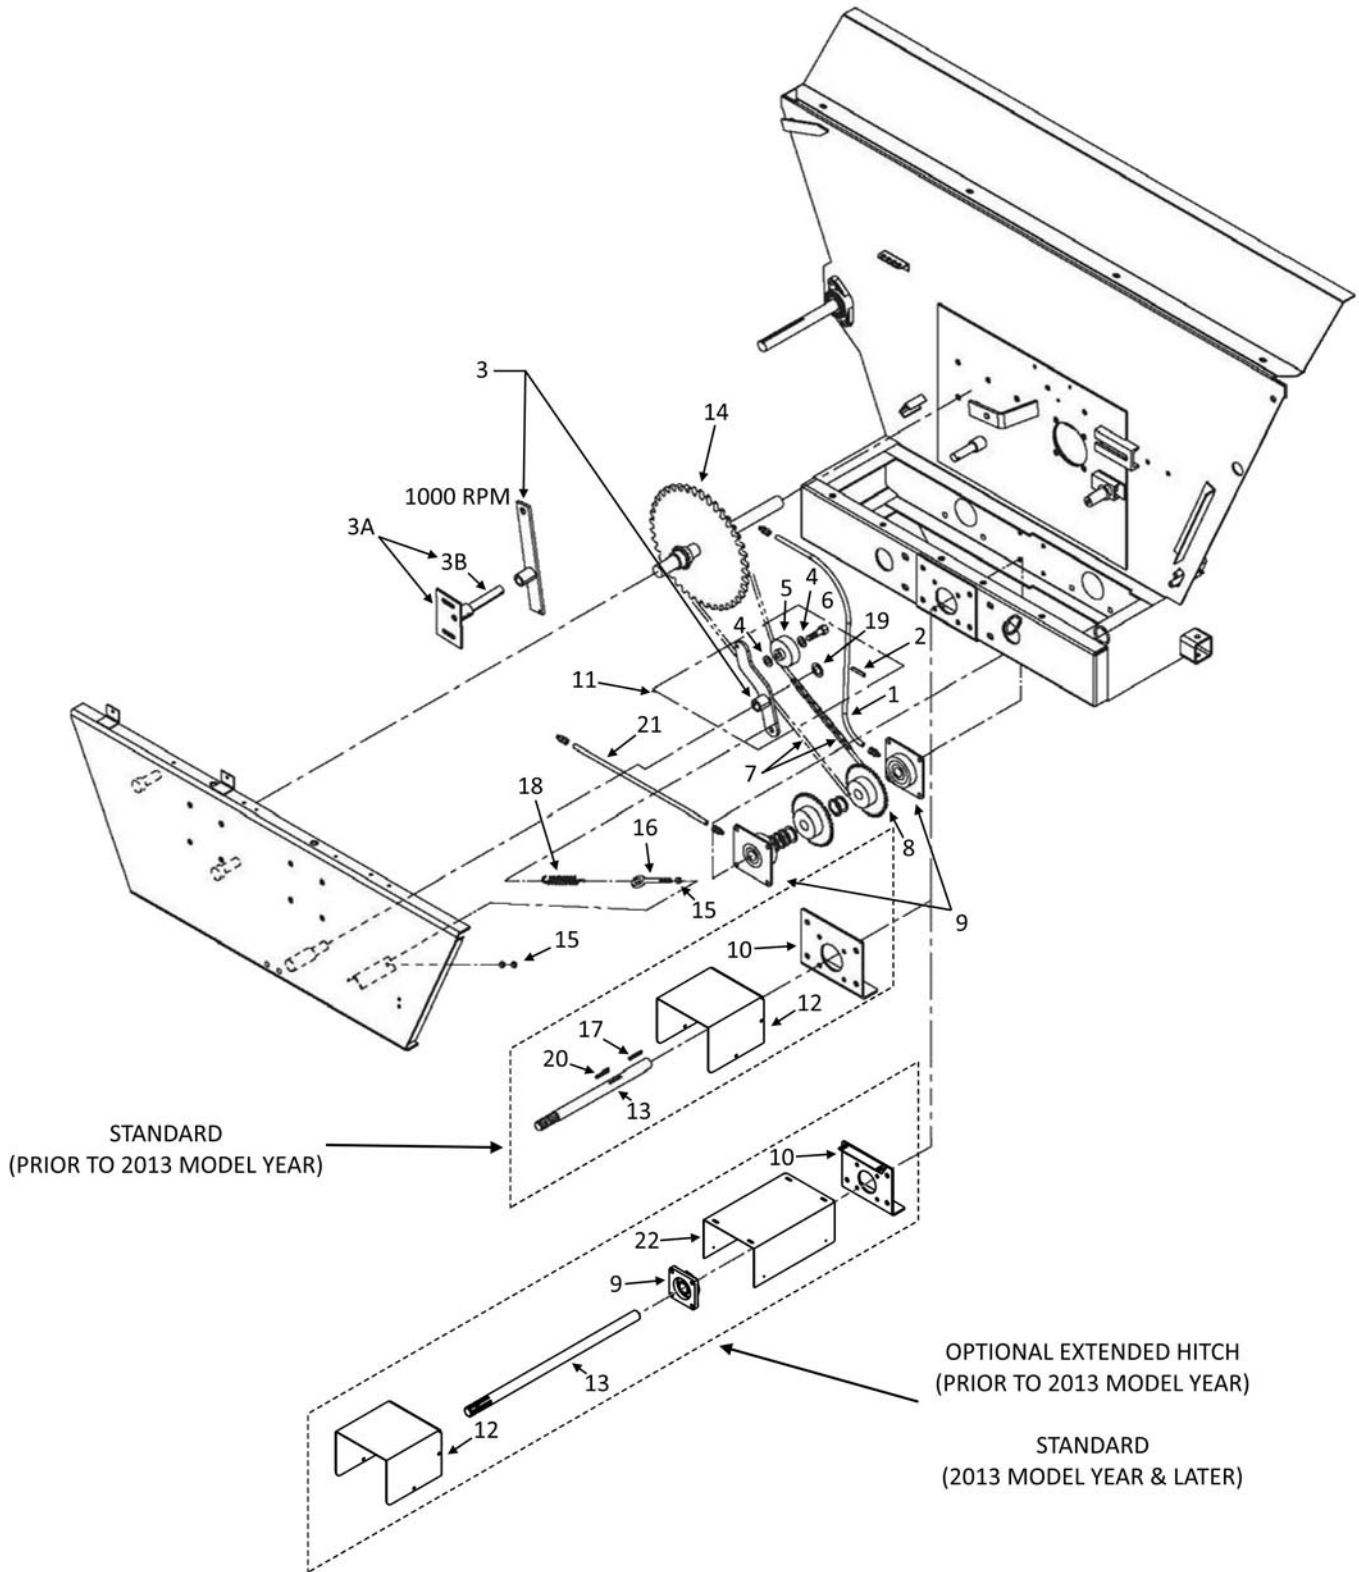




## AUGER DRIVE, PRIMARY REDUCTION

KEY	PART NO.	DESCRIPTION
1	933-3628	Copper Tube Grease Line 25" (includes zerk, fittings)
2	38-0013	Roll Pin, 5/16" x 1-3/4"
3	925-3883-1	First Reduction Tightener Assembly Arm Weldment (540, Optional 1000 RPM Kit)
	925-5015-1	First Reduction Tightener Assembly Arm Weldment (1000 RPM)
3A	925-5017	Pivot Mount Plate Assy. (1000 RPM)
3B	925-5017-3	Pivot Shaft Only (1000 RPM)
4	808-.75-1.25-14	Machine Bushing, 14GA
5	912-0012	Tightener Roller 1-3/8" Nylon Complete
5A	912-0012-1	Nylon Roller Only
5B	912-0012-2	Inner Sleeve
6	851-7510-2Z	3/4"-10 x 2" Bolt, GR5
	925-3717-3	3/4"-10 x 2-1/4" Bolt, GR5 Machined - Special (1000 RPM)
7	911-0032	Chain #80x87 Pitches (540 RPM/1000 RPM Kit)
	911-0071	#80-94 (84+10) Roller Chain (Gin Trash)(540 RPM/1000 RPM Kit)
	911-0072	#80-99 Link Roller Chain (1000 RPM)
	911-0074	#80-106 Link Roller Chain (1000 RPM Gin Trash)
8	910-0069	Split Sprocket 80B22 1-1/2" Bore, 3/8" Keyway (10 RPM on Augers -Standard)
	910-0005	Sprocket 80B12 1-1/2" Bore, 3/8" Keyway (5 RPM on Augers) (Poultry)
	910-0092	Sprocket 80SK15H 1-1/2" Bore, 3/8" Keyway (7 RPM on Augers) (Poultry)
	910-0068	Split Sprocket 80B16 1-1/2" Bore, 3/8" Keyway (7.3 RPM on Augers) (Poultry)
	910-0079	Split Sprocket 80B32 1-1/2" Bore, 3/8" Keyway (16 RPM Augers)(Gin Trash Only Prior to Ser#SV087500360)
	910-0096	Split Sprocket 80B40, 3/8" Keyway, (20 RPM Augers) (Gin Trash Only Ser.#SV087500360 & Later)
	831-5013-1.5	1/2-13 x 1-1/2" Allen Head Cap Bolts (Split Sprockets)
9	914-3602	Bearing 4 Bolt Flange, 1-1/2" Bore
	851-5013-2Z	1/2-13 x 2" Machine Bolt
	810-5013-Z	1/2" Spin Lock Nut
10	925-3606	Front Bearing Plate Bent (Standard Length Hitch)
	925-3607	Front Bearing Plate Weldment (Extended Length Hitch Package)
11	925-3883	Tightener Assembly Complete
	925-5015	1000 RPM 1st Reduction Tightener Arm Assy
12	931-3810	CV/OR PTO Shied Assembly
13	923-3833	CV/OR Input Drive Shaft-Splined 16-3/4" Long (Standard Length Hitch)
	923-3833-XL	CV/OR Input Drive Shaft-Splined 33-3/4" Long (Extended Length Hitch Package)
14	910-0063	Welded Sprocket Assy, RH, 80A60x80A12 (540 RPM, 1000 RPM Kit)
	910-0063-RPM	Welded Sprocket Assy, RH, 80A80x80A12 (1000 RPM)
15	813-3118-Z	5/16" Regular Nut
16	933-3804	5/16" x 4" Full Thread Eye Bolt
17	935-0001	3/8 x 3/8 x 2" Hardened Key
18	929-0003	Spring
19	808-1-1.5-18	Machine Bushing, 18GA (AR)
20	35-0010	3/8" x 3/8" x 1-1/2" Square Key (1000 RPM)
	35-0026	3/8" x 3/8" x 1-3/4" Square Key (540 RPM)
21	933-3632	Copper Tube Grease Line 37" (includes zerk fittings)
22	901-3960-4	Extended Hitch Center Shaft Shield

## AUGER DRIVE, SECONDARY REDUCTION

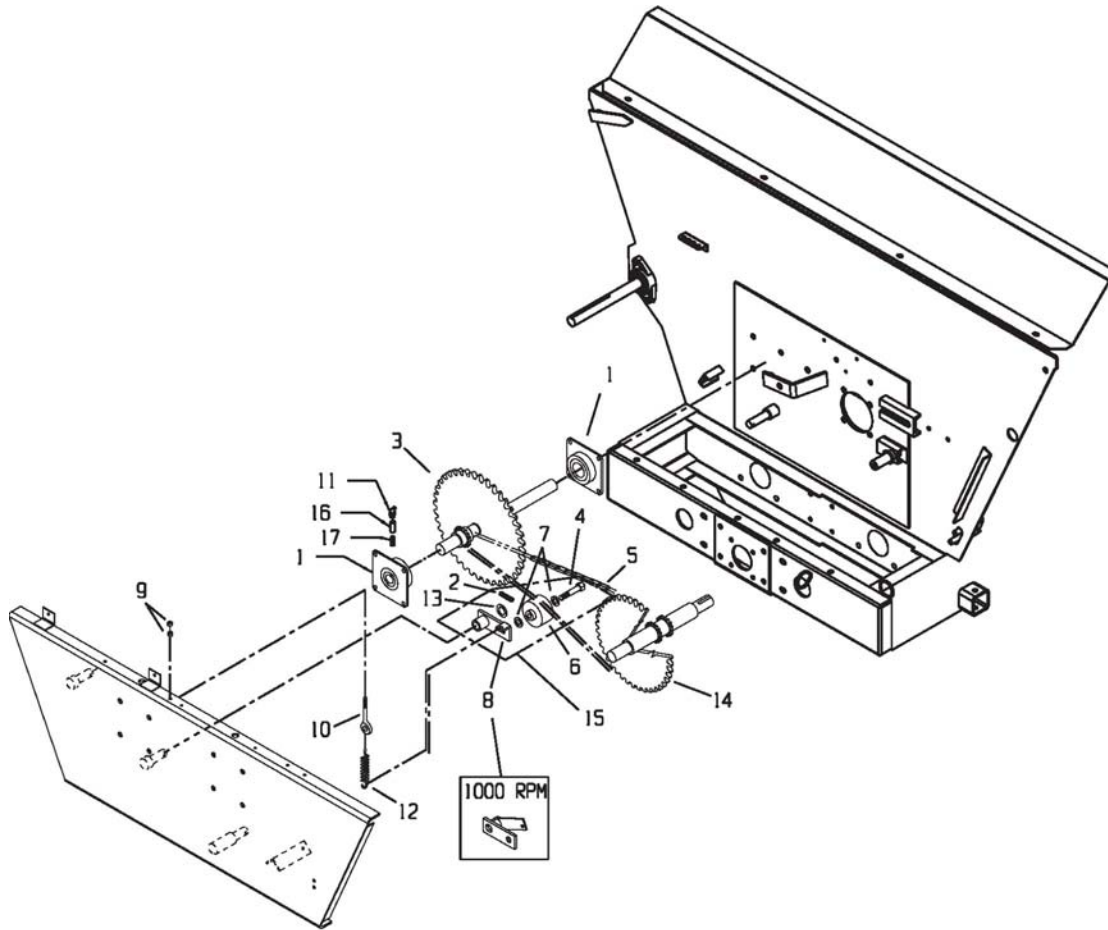


KEY	PART NO.	DESCRIPTION
1	14-0031	Bearing, 4 Bolt, 2" Bore
2	38-0013	Roll Pin, 5/16" x 1-3/4"
3	910-0063	Welded Sprocket Assy, RH, 80A60 x 80A12 (540 RPM, 1000 RPM Kit)
	910-0063-RPM	Welded Sprocket Assy, RH, 80A80 x 80A12 (1000 RPM)
4	851-7510-3Z	3/4"-10x3" Bolt, GR5
5	911-0018	Chain #80 x 73 pitches (540 RPM, 1000 RPM Kit)
	911-0073	Chain #80 x 87 pitches (1000 RPM)
6	912-0013	Tightener Roller 2" Nylon Complete
6A	912-0013-1	Nylon Roller Only
6B	912-0013-2	Inner sleeve
7	808-.75-1.25-14	Machine Bushing, 14GA
8	925-3884-1	Second Reduction Tightner Arm Weldment (540 RPM)
	925-3884-1-RPM	Second Reduction Tightener Arm Weldment (1000 RPM)
9	813-3118-Z	5/16" Regular Nut
10	933-3804	5/16" x 4" Full Thread Eye Bolt
11	30-0002	1/8" NPT Zerk
12	929-0003	Spring
13	808-1-1.5-18	Machine Bushing, 18GA
14	910-0064	Welded Sprocket Assy, LH, 80/60 x 120/9
15	925-3884	Tightener Assembly Complete
16	30-0009	1/8" NPT Coupler
17	30-0014	1/8" NPT x 3 1/2" Nipple

This Page Intentionally Blank

## RH AUGER DRIVE, FINAL REDUCTION

Install (#120-56) Roller Chain, Key #13 W/Connector Link Cotter Pins Facing Towards Front Of Spreader.

Auger Drive Shear Sprockets (Key #3) are Standard on all 7500 Models; Optional on 7400 Models prior to SV117400201, and Standard SV117400201 and Later.

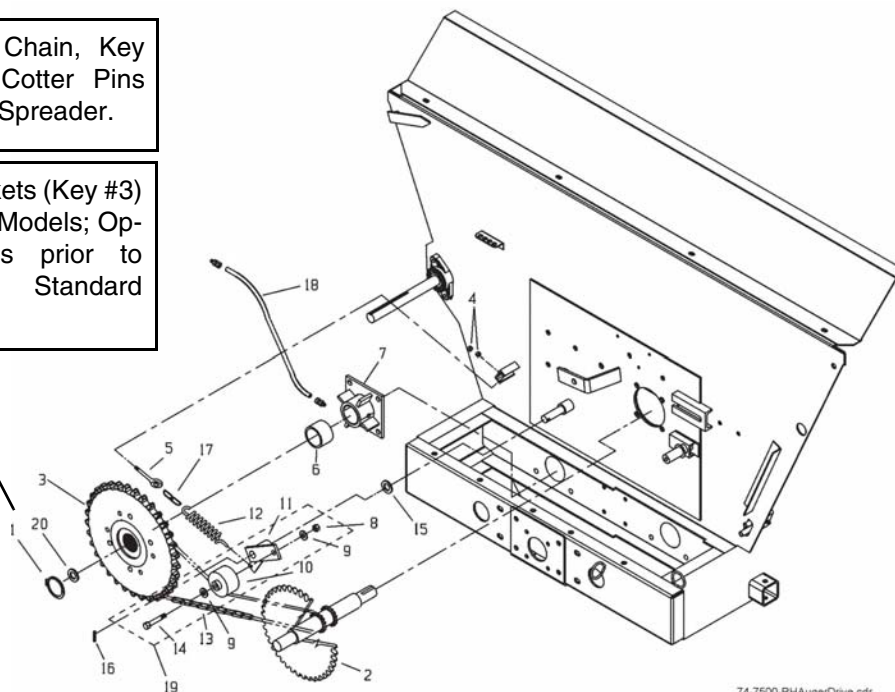

74-7500-RHAugerDrive.cdr


KEY	PART NO.	DESCRIPTION
1	33-0025	2-1/2" Retaining Ring
2	910-0064	Welded Sprocket Assy, LH, 80A60 x 120A9 (540 RPM, 1000 RPM Kit)
	910-0064-RPM	Welded Sprocket Assy, LH, 80A80 x 120A9 (1000 RPM)
3	910-0028	120B33 Spline Sprocket (Standard 7400 Prior to SV117400201)
	910-0101	Shear Sprocket Assy. 120B33 (Prior to SN SV112636402 and SV127500243 & Later)
	831-5020-1.75	1/2-20 x 1-3/4" Allen Head Cap Screw Grade 8 (Standard Protection with 910-0101 Sprocket)
	884-5020	1/2-20 Top Locknut Grade 8
	831-5618-1.75	9/16-18 x 1-3/4" Allen Head Cap Screw Grade 8 (Less Protection with 910-0101 Sprocket)
	831-5618-1.75-SL	9/16-18 x 1-3/4" Allen Head Cap Screw With Solid Shank Grade 8 (Least Protection with 910-0101 Sprocket)
	884-5618	9/16-18 Top Locknut Grade 8
	910-0105	Shear Sprocket Assy. 120B33, 14 Hole (SN 112636402 Thru SV127500242)
	831-5013-1.75	1/2-13 x 1-3/4" Allen Head Cap Screw Grade 8 (Standard Protection with 910-0105 Sprocket)
	884-5013	1/2-13 Top Locknut Grade 8

KEY	PART NO.	DESCRIPTION
3	831-5020-1.75	1/2-20 x 1-3/4" Allen Head Cap Screw Grade 8 (Less Protection with 910-0105 Sprocket)
	831-5020-2.25-S	1/2-20 x 1-3/4" Allen Head Cap Screw With Solid Shank Grade 8 (Least Protection with 910-0105 Sprocket)
	884-5020	1/2-20 Top Locknut Grade 8
4	813-3118-Z	5/16" Regular Nut

## RH AUGER DRIVE, FINAL REDUCTION (CONT'D)

Install (#120-56) Roller Chain, Key #13 W/Connector Link Cotter Pins Facing Towards Front Of Spreader.

Auger Drive Shear Sprockets (Key #3) are Standard on all 7500 Models; Optional on 7400 Models prior to SV117400201, and Standard SV117400201 and Later.

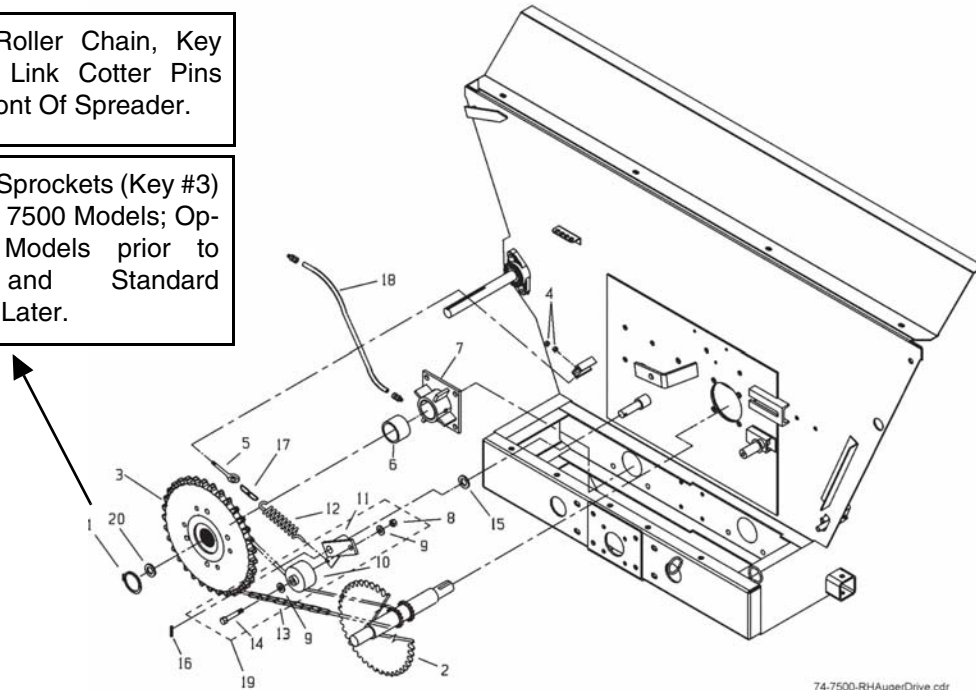


74-7500-RHAugerDrive.cdr

KEY	PART NO.	DESCRIPTION
5	933-3804	5/16" x 4" Full Thread Eye Bolt
6	925-5011	Front Auger Bearing Plate Assy w/ Bushing, RH Prior to SN SV147400355
	913-3705	Nylatron Auger Bushing 2.525 ID x 3.258 OD x 2.75"; SN SV147400355 & Later
7	925-3834	Front Auger Bearing Plate Assy w/ Bushing, RH (Prior to SN SV147400355)
	925-5011	Front Auger Bearing Plate Assy w/ Bushing, RH (SN SV147400355 & Later)
8	933-3621	3/4" Jam Nut
9	808-.75-1.25-14	Machine Bushing, 14GA
10	912-0013	Tightener Roller, 2" Nylon Complete
10A	912-0013-1	Nylon Roller Only
10B	912-0013-2	Inner Sleeve
11	925-3848-7	Tightener Arm Welded Assy
12	929-3601	Spring
13	911-0023	Chain #120 x 56 pitches
14	851-7510-3.5Z	3/4"-10 x 3 1/2" Bolt, GR5
15	805-0010-Z	1" Flat Washer
16	38-0013	5/16" x 1-3/4" Roll Pin
17	925-3822-6	2 Links 3/16" Proof Coil Chain
18	933-3619	Copper Tube Grease Line 28" (includes zerk, fittings)

KEY	PART NO.	DESCRIPTION
19	925-3848	Tightener Arm Assembly Complete
20	808-2.5-3.5-14	2-1/2" ID x 3-1/2" OD 14GA Machine Bushing

## LH AUGER DRIVE, FINAL REDUCTION

Install (#120-72) Roller Chain, Key #21 W/Connector Link Cotter Pins Facing Towards Rear Of Spreader.

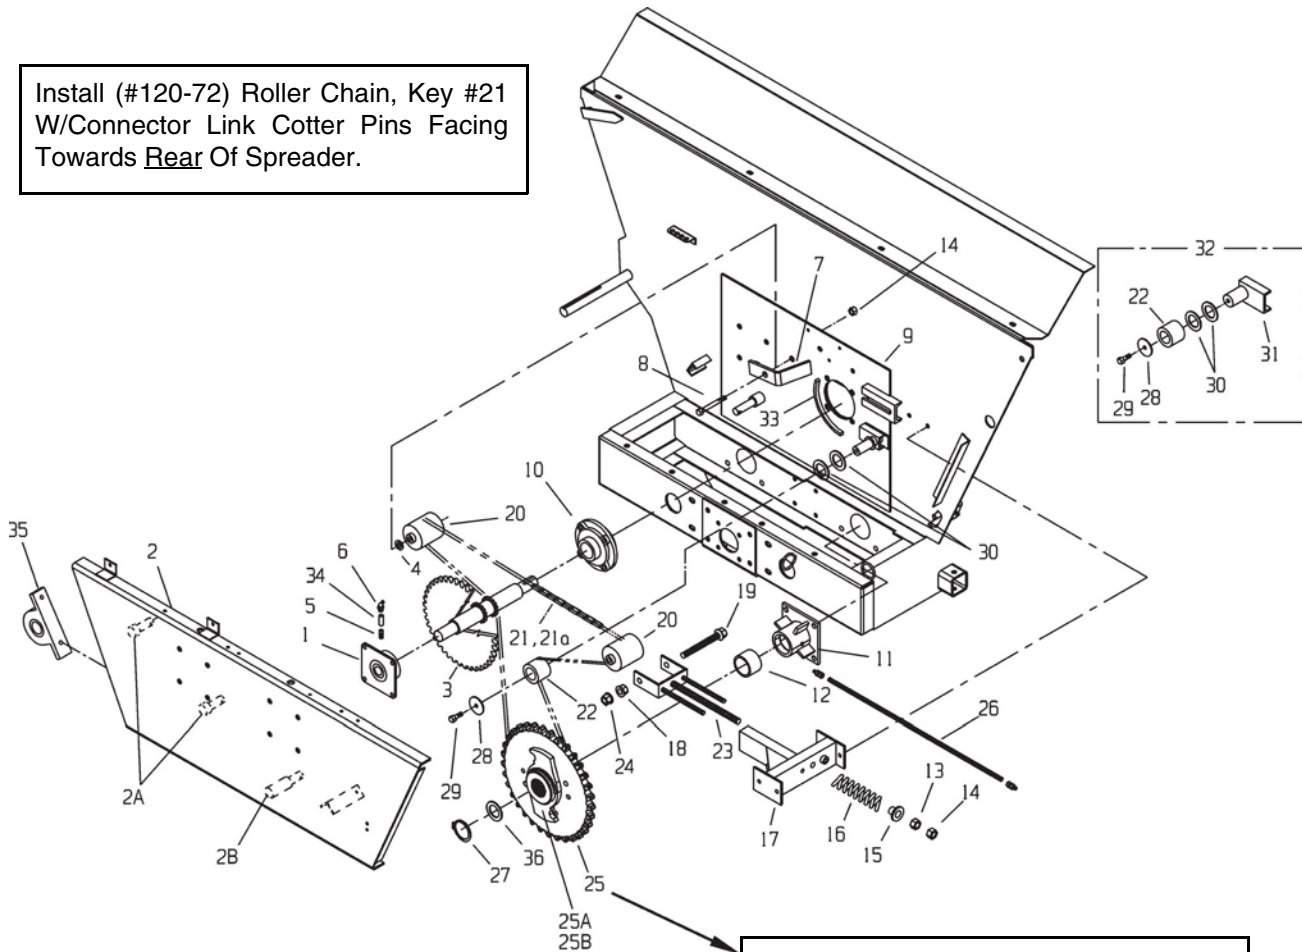

Auger Drive Shear Sprockets (Key #25) are Standard on all 7500 Models; Optional on 7400 Models prior to SV117400201, and Standard SV117400201 and Later.


74-7500-LHAugerDrive.cdr

## LH AUGER DRIVE, FINAL REDUCTION

KEY	PART NO.	DESCRIPTION
1	14-0031	Bearing, 4 Bolt Flange, 2" Bore
2	925-3873	Front Bearing Mounting Plate (540 RPM, 1000 RPM Kit)
	925-3873-RPM	Front Bearing Mounting Plate (1000 RPM)
2A	925-3881-1	Tightener Pivot Shaft Weldment (Welded to Front Plate)

KEY	PART NO.	DESCRIPTION
2B	925-3880-1	Tightener Pivot Shaft Weldment (Welded to Front Plate)
3	910-0064	Welded Sprocket Assy, LH, 80A60 x 120A9 (540 RPM, 1000 RPM Kit)
	910-0064-RPM	Welded Sprocket Assy, LH, 80A80 x 120A9 (1000 RPM)
4	808-.75-1.25-14	Machine Bushing, 14GA
5	30-0014	1/8" NPT x 3 1/2" Nipple
6	30-0002	1/8" NPT Zerk
7	925-3846-2	4" Snugulator Support Arm Assy
8	851-7510-6Z	3/4"-10 x 6" Bolt, GR5
9	925-3870-1	Bearing Back Plate
10	914-3807A	Bearing, 4-Bolt, 2-1/2" Bore
11	925-5010	Front Auger Bearing Plate Assy. with Bushing, LH
12	925-5010	Front Auger Bearing Complete (Prior to SN SV147400355)
	913-3705	Nylatron Auger Bushing 2.525 ID x 3.258 OD x 2.75" (SN SV147400355 & Later)
13	813-7510-Z	3/4" Nut, Regular
14	933-3621	3/4" Jam Nut
15	925-3841	Spring Tightener Guide
16	29-0009	Spring, Compression
17	925-3885-1	Main Tightener Channel
18	925-3843	Inner Slide Nut Assembly
19	925-3839	3/4" x 8 1/2" Bolt Assy
20	912-0014	Tightener Roller, 4" Nylon Complete
20A	912-0014-1	Nylon Roller Only
20B	912-0014-2	Inner Sleeve
21	911-0024	Chain #120 x 72 pitches
21A	911-0026	#120 Connector Link Only
22	912-0001	Nylon Roller
23	925-3838	Tightener Weldment Yoke
24	925-3842	Outer Slide Nut Assembly
25	910-0028	120B33 Splined Sprocket (Standard 7400 Prior to SV117400201)
	910-0101	Shear Sprocket Assy. 120B33 (Prior to SN SV112636402 and SV127500243 & Later)
	831-5020-1.75	1/2-20 x 1-3/4" Allen Head Cap Screw Grade 8 (Standard Protection with 910-0101 Sprocket)
	884-5020	1/2-20 Top Locknut Grade 8
	831-5618-1.75	9/16-18 x 1-3/4" Allen Head Cap Screw Grade 8 (Less Protection with 910-0101 Sprocket)
	831-5618-1.75-SL	9/16-18 x 1-3/4" Allen Head Cap Screw With Solid Shank Grade 8 (Least Protection with 910-0101 Sprocket)
	884-5618	9/16-18 Top Locknut Grade 8
	910-0105	Shear Sprocket Assy. 120B33, 14 Hole (SN 112636402 Thru SV127500242)
	831-5013-1.75	1/2-13 x 1-3/4" Allen Head Cap Screw Grade 8 (Standard Protection with 910-0105 Sprocket)
	884-5013	1/2-13 Top Locknut Grade 8
	831-5020-1.75	1/2-20 x 1-3/4" Allen Head Cap Screw Grade 8 (Less Protection with 910-0105 Sprocket)
	831-5020-2.25-S	1/2-20 x 1-3/4" Allen Head Cap Screw With Solid Shank Grade 8 (Least Protection with 910-0105 Sprocket)
884-5020	1/2-20 Top Locknut Grade 8	
25A	910-0101-1	Shear Plate With Splined Hub Weldment
25B	910-0101-2	Shear Plate Washer
26	933-3637	Copper Tube Grease Line 51" (includes zerk, fittings)
27	33-0025	2-1/2" Retaining Ring
28	925-3807-3	Nylon Roller Retaining Washer
29	851-5013-1.25Z	1/2"-13 x 1.25" Bolt, GR5
30	808-1.25-1.875-10	Machine Bushing, 10GA
31	925-3816-2	Chain Hold Down Bracket
32	925-3816	Roller Assembly Complete
33	925-3869	Support For Bearing
34	30-0009	1/8" NPT Coupler
35	914-3801	1-3/8" Pillow Block Bearing
36	808-2.5-3.5-14-Z	2-1/2" ID x 3-1/2" OD 14GA Machine Bushing

# BOX, AUGERS & SIDE SHAFT

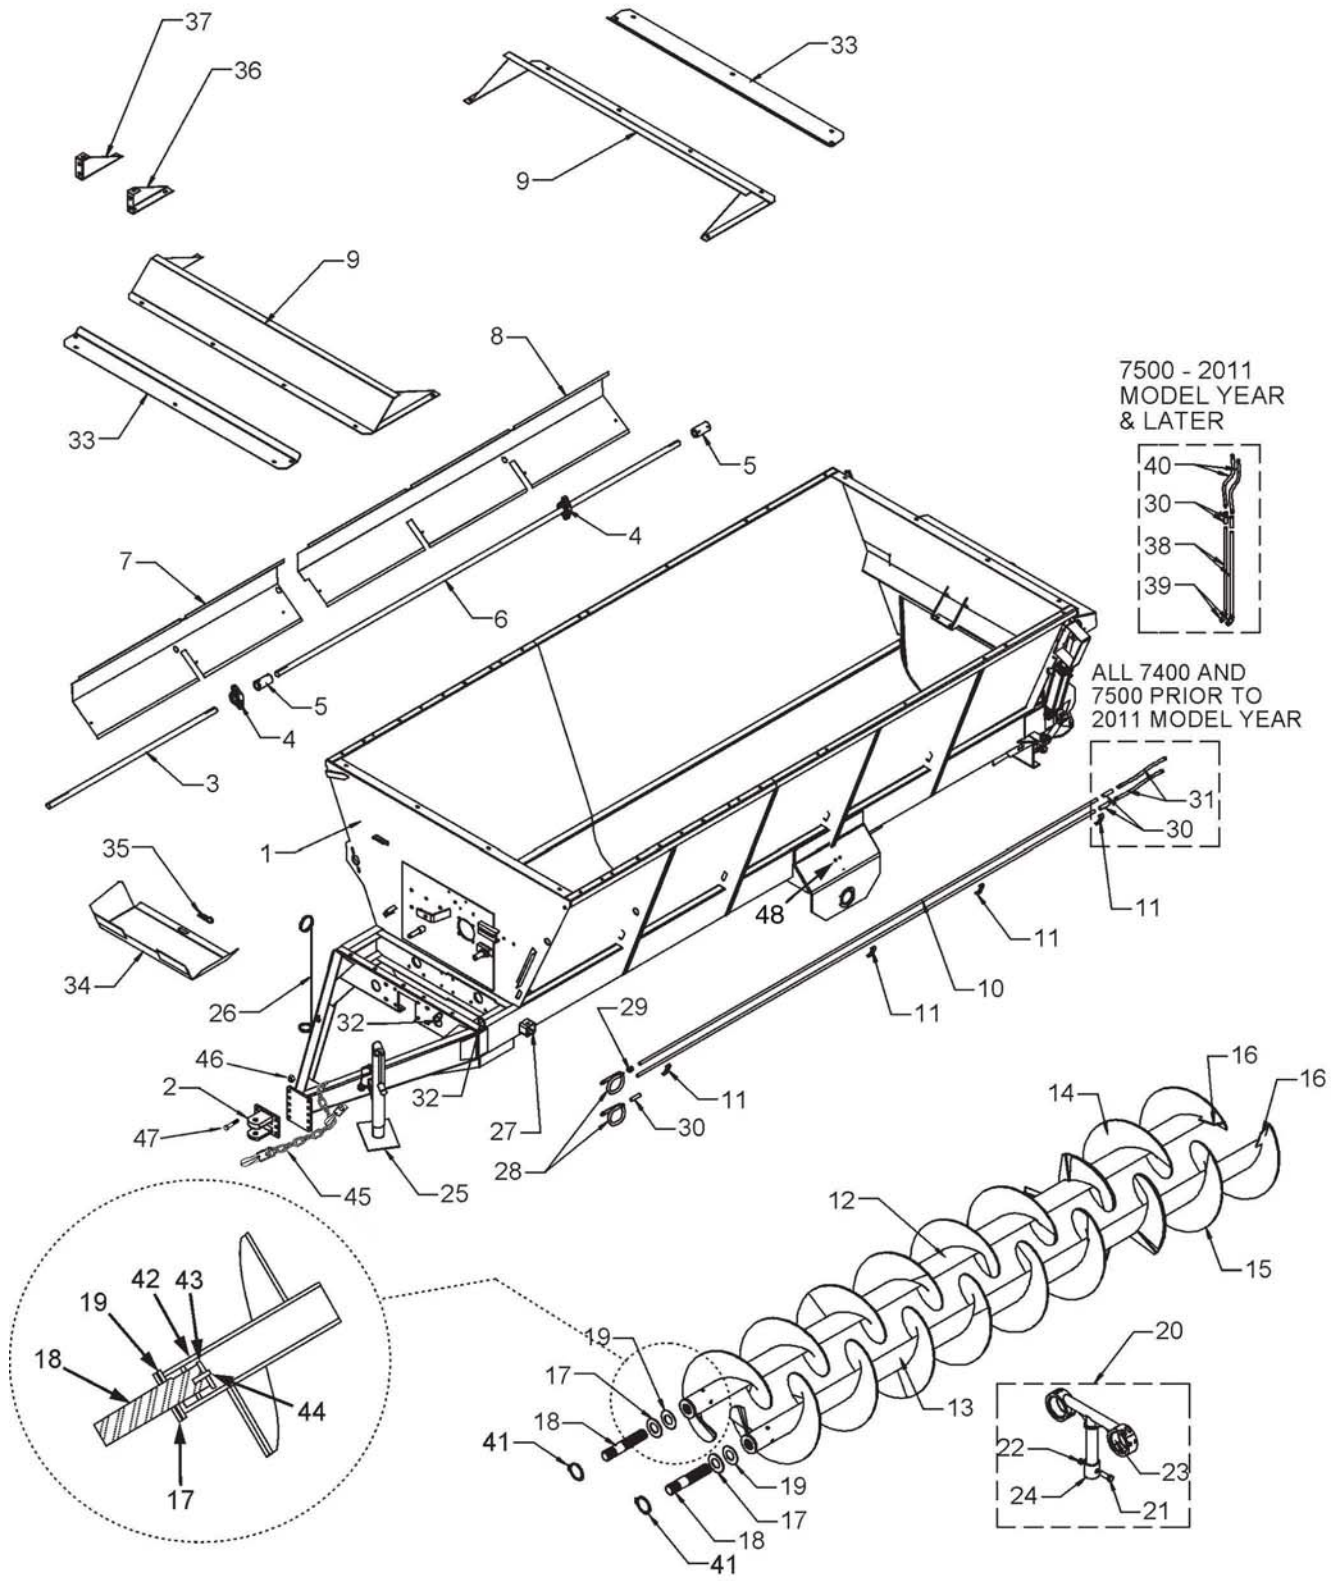



74-7500-Box.cdr



## BOX, AUGERS & SIDE SHAFT

KEY	PART NO.	DESCRIPTION
1	901-3903	Main Welded Body, 7500
	901-3915	Main Welded Body, 7400
2	901-3801-82	Adj. Hitch Plate, 1" Pin
3	923-3837	SV7000 Front Side Shaft
4	14-0049	1-3/8" 2-Bolt Bearing
5	937-0002	Shaft Coupler 1-3/8"
6	923-3827	Rear Side Shaft 141"
7	924-5000-F	SV74/7500 Front Side Shield
8	924-5000-R	SV74/7500 Rear Side Shield
9	901-3909	SV7500 Splash Guard Welded Assy.
	901-3934	SV7400 Splash Guard Welded Assy (Optional)
10	955-3806	Side Hydraulic Pipe 159-1/2" (All 7400 Models, 7500 Models Prior to 2011 Model Year)
	955-3740	7500 Side Hydraulic Pipe 177-1/2" (7500 Models 2011 Model Year and Later)
	955-3741	7500 Side Hydraulic Pipe 175-3/4" (7500 Models 2011 Model Year and Later)
11	933-3602	Hydraulic Pipe Bracket Clamp
	810-3816-Z	3/8" Spinlock Nut
12	926-3829	SV75/7400 RH T-Post Auger Assy
	926-3817-2	19 Tooth Front Splined Sleeve
	926-3817-2-1	Rear Splined Sleeve w/Cap Washer
	807-0050-Z	1/2" Split Lock Washer
	881-5013-1.5Z	1/2-13 x 1-1/2" Grade 8 Machine Bolt
13	926-3828	SV75/7400 LH T-Post Auger Assy
	926-3817-2	19 Tooth Front Splined Sleeve
	926-3817-2-1	Rear Splined Sleeve w/Cap Washer
	807-0050-Z	1/2" Split Lock Washer
	881-5013-1.5Z	1/2-13 x 1-1/2" Grade 8 Machine Bolt
14	926-3802-2	3/8" Sectional Flighting x 20" RH
15	926-3801-2	3/8" Sectional Flighting x 20" LH
16	926-3801-8	Auger Flighting Support Gusset
17	933-3802	Front Auger Washer - Steel (Prior to Serial #SV097500211)
18	926-3801-5	Splined Shaft
	33-0025	2-1/2" Retaining Ring
19	933-3801	Bronze Washer (Prior to Serial #SV097500211)
	933-3801-NSM-09	Nylon Thrust Bearing 2-1/2 x 5 x 13/16" (Serial #SV097500211 & Later)
20	925-5000	SV7500 T-Post Hold-down Assy W/Nylon-Wide
	901-3893	SV7400 T-Post Hold-down Assy W/Nylon-Narrow
	831-5013-1.5	1/2-13 x 1-1/2" Grade 8 Allen Head Cap Bolt
21	881-1008-5Z	1-08 x 5" M.B. Grade 8
22	884-1008	1-08 Top Locknut Grade 8
23	901-3840-1	7400 Nylon Bearing (2 per Auger, 4-per Spreader)
	SI-TNUK-KIT	7500 Nylon Bearing Kit (1 per Auger, 2-per Spreader) (Prior to SN SV147500414)
	925-3864-1	7500 Nylon Bearing (2 per Auger, 4-per Spreader) (SN SV147500414 & Later)
24	925-3771-4	Holdown Collar
25	956-3803	Side Wind Jack
26	929-3801	Hose Holder Spring
27	956-3803-1	Square Jack Mount Tube
28	955-3611	Hydraulic Hose 108"
	955-3701	Hydraulic Hose 132" (Extended Hitch Package)
28A	55-0013	Male Hydraulic Tip
29	955-3803	3/8" Black T-Fitting
30	155-5000-06-06	Coupler 3/8" NPT
31	955-3833	3/8" x 27" Hyd. Hose w/Swivel (All 7400 Models, 7500 Models Prior to 2011 Model Year)
32	901-3801-40	Scraper Holder Ring
33	901-3918-1	7400 Flat Splash Guard
34	924-5012-1	Lower Sprocket Shield w/ Hinges
35	823-.25-5Z	1/4 x 5" Hair Pin
36	901-3916	7400 L. Splash Guard Gusset
36A	901-3941	7400 R/L Splash Guard Gusset (Required w/optional front 45 degree Splash- 2 required)
37	901-3917	7400 R. Splash Guard Gusset
38	55-0067	7500 Hydraulic Pipe Extension 14" (7500 - 2011 Model Year and Later)
39	955-3605	7500 90 Degree 3/8" Pipe Elbow (7500 - 2011 Model Year and Later)
40	955-3825	7500 3/8" x 56" Hydraulic Hose w/Swivel (7500 - 2011 Model Year and Later)
41	33-0025	2-1/2" Retaining Ring
42	926-3817-2	Front Splined Sleeve
43	926-3801-3	Washer (To Hold In Splined Shaft)
44	881-5013-1.5Z	1/2"-13 x 1-1/2" Grade 8 Bolt
45	52-0050	7400 Safety Chain, 30,000 # Capacity
	52-0051	7500 Safety Chain, 40,000 # Capacity
46	881-6311-Z	5/8"-11 Grade 8 Locknut
47	881-6311-2Z	5/8"-11 x 2" Grade 8 Bolt
48	30-0002	1/8" NPT Straight Grease Fitting
NS	SV-7400-PTR-K	1" x 3" 7400 Poly Board Kit






# 7400/7500 UNLOADING GATE & MATERIAL GUIDES (7500 PRIOR TO 2011 MODEL YEAR)

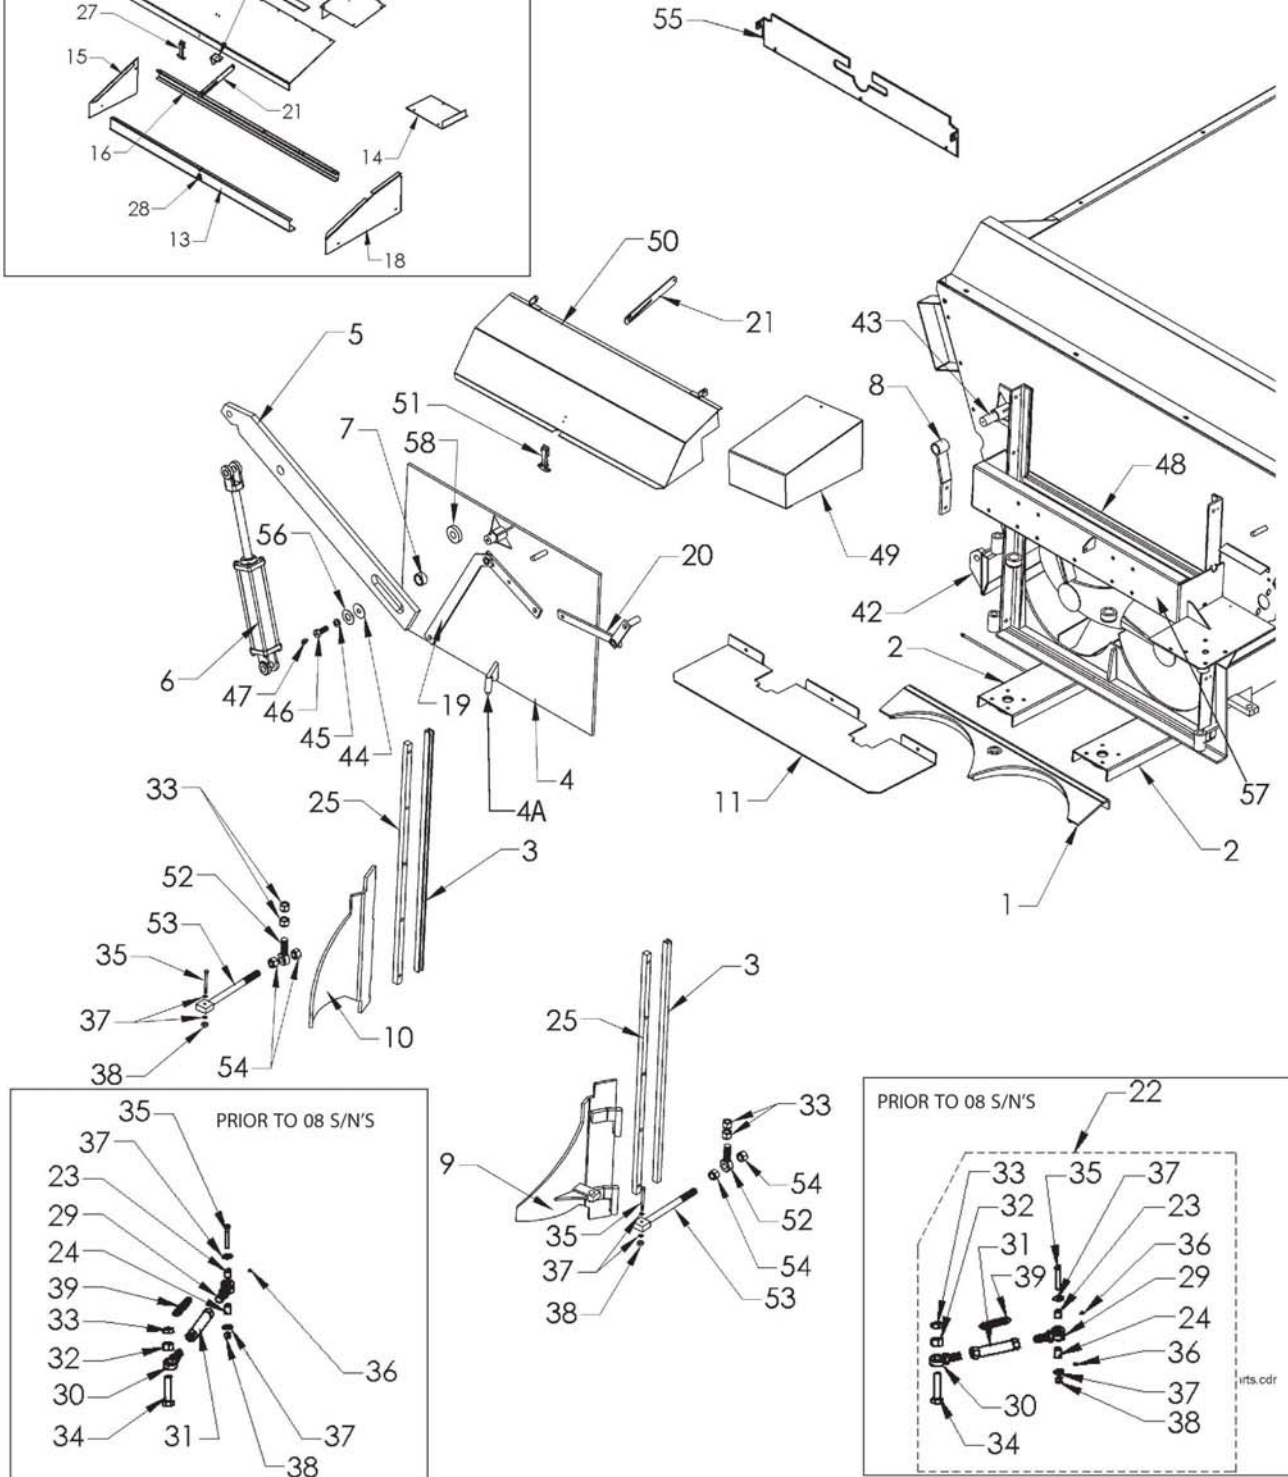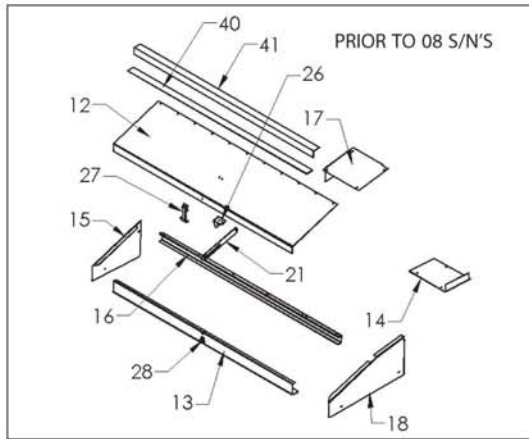

## 7400/7500 UNLOADING GATE & MATERIAL GUIDES (7500 PRIOR TO 2011 MODEL YEAR)

KEY	PART NO.	DESCRIPTION	QTY
1	925-5005	Spinner Deflector Welded Assy.	1
2	901-3903-34	Spinner Mount Channel	2
3	949-3753	Poly Gate Slides	2
	803-2520-1.25Z	1/4-20 x 1-1/4" Flat Socket Head Screw	10
	815-2520-Z	1/4-20 Nylon Insert Lock Nut	10
4	901-3908	Back Gate Welded Assy.	1
4A	901-3908-6	Back Gate Pin & Tab Weldment	1
5	901-3912	7500 Gate Lifting Arm (Prior to 2011 Model Year)	1
	901-3929	Gate Lifting Arm W/tube 7400 Only	1
6	955-3804-1	3X12" Hydraulic Cylinder	1
	955-3802-3	Cylinder Seal Kit (7400 Prior to SN SV187400289)(7500 Prior to 2011 Model Year)	1
	955-3802-3-MAXIM	Cylinder Seal Kit (7400 SN SV187400289 & Later)	1
7	913-3808	1.504 ID x 2.000 OD x 1" Bronze Bushing	1
8	925-5001	Pivot Shaft Support Assy.	1
9	925-13901	R. Material Guide Assy. (Prior to 08 serial #'s)	1
	925-13905	R. Material Guide Assy. (08 serial #'s & later)	1
10	925-13900	L. Material Guide Assy. (Prior to 08 serial #'s)	1
	925-13904	L. Material Guide Assy. (08 serial #'s & later)	1
11	901-3845-1	Rear Shield Mount Plate	1
12	924-5003	Stainless Steel Rear Shield (Prior to 08 serial #'s)	1
13	924-5004	Rear Shield Formed Channel (Prior to 08 serial #'s)	1
14	924-5005	Right Lower Shield (Prior to 08 serial #'s)	1
15	924-5006	Left Shield End Cap (Prior to 08 serial #'s)	1
16	924-5007	Belting Hinge Mount Channel (Prior to 08 serial #'s)	1
17	924-5009	Right Rear Top Shield (Prior to 08 serial #'s)	1
18	924-5008	Right Shield End Cap (Prior to 08 serial #'s)	1
19	925-5003	Gate Indicator Arm Linkage Assy. (7500 Prior to 2011 Model Year)	1
20	925-5002	Indicator Arm Linkage Assy. (7500 Prior to 2011 Model Year)	1
21	925-5006-1	Rear Shield Support Arm	1
22	925-13803-KIT	Material Guide Linkage Arm (One Side Only)(Prior to 08 serial #'s)	2
23	925-13804-1	Shear Bolt Sleeve 1" Long (Prior to 08 serial #'s)	2
24	925-13903	Shear Bolt Sleeve 1-3/8" Long (Prior to 08 serial #'s)	2
25	901-5000-1	Rear Gate Slide Guide	2
	851-5013-2Z	1/2-13 x 2" Machine Bolt	10
	815-5013-Z	1/2-13 Nylon Lock Nut	10
26	925-5006-2	Support Arm Upper Bracket	1
27	32-0032-2	3-1/2" Rubber T-Latch	1
28	32-0032-3	Sheared Lower T-Catch	1
29	925-13902	RH Tie Rod Eyelet Welded Assy. W/Jam Nut (Prior to 08 serial #'s)	2
30	75-0304	LH Tie Rod Eyelet W/Jam Nut (Prior to 08 serial #'s)	2
31	925-13803	Material Guide Linkage Arm Assy. (Prior to 08 serial #'s)	2
32	884-1014-Z	Top Locknut 1-14	2
33	75-0305-2	Jam Nut 1-14	2

# 7400/7500 UNLOADING GATE & MATERIAL GUIDES (CONT'D) (7500 PRIOR TO 2011 MODEL YEAR)

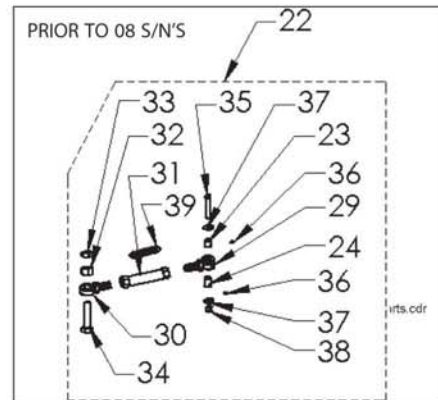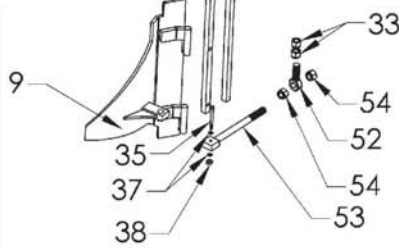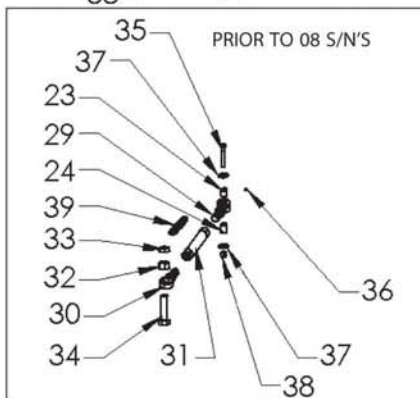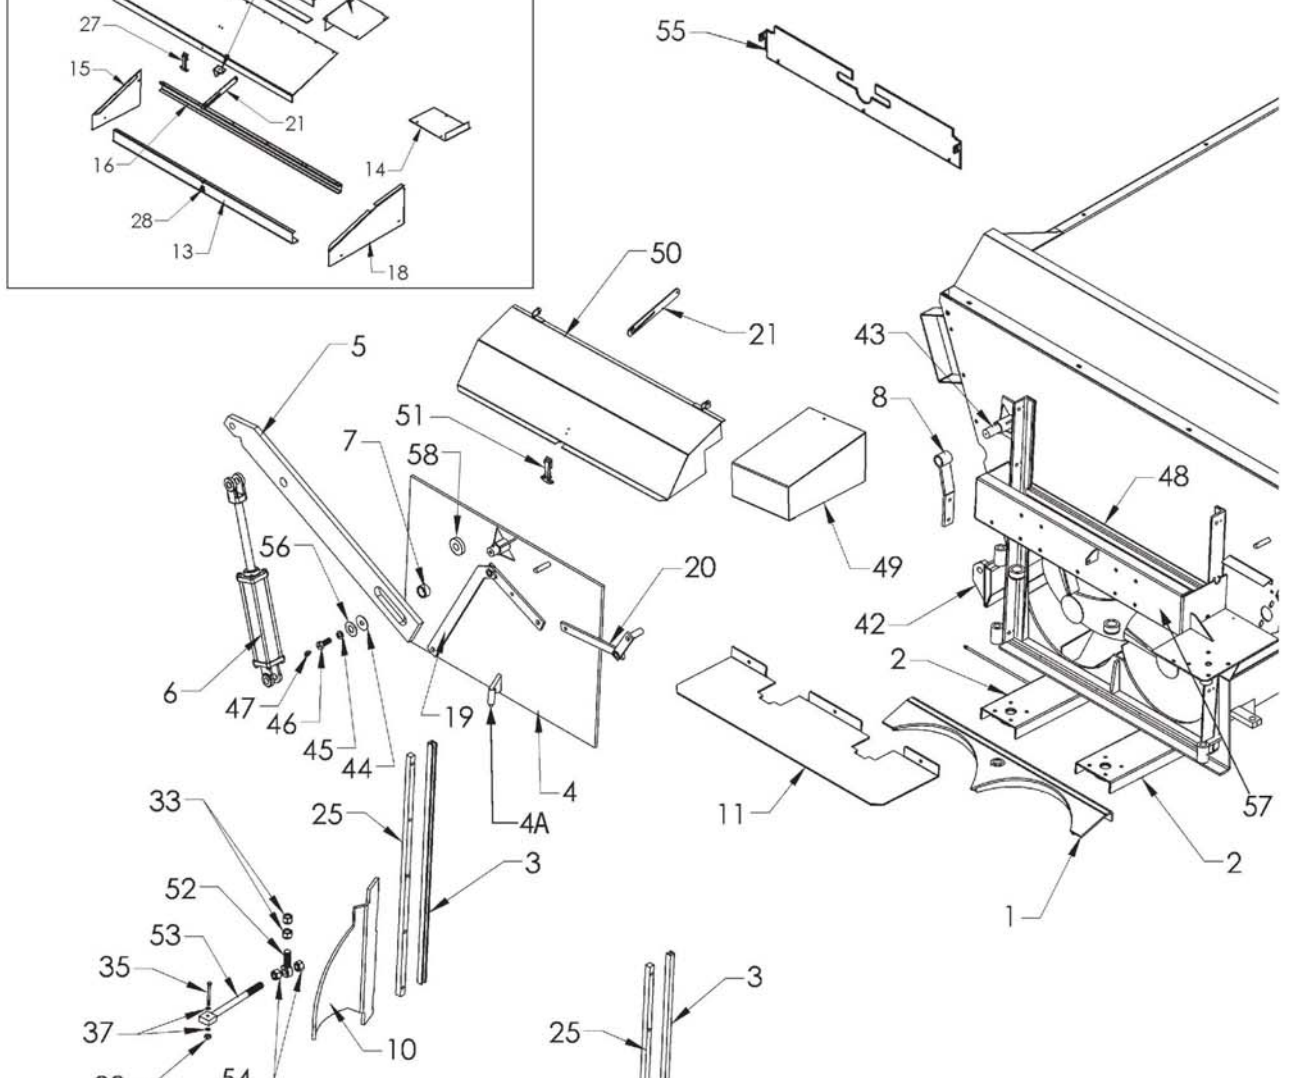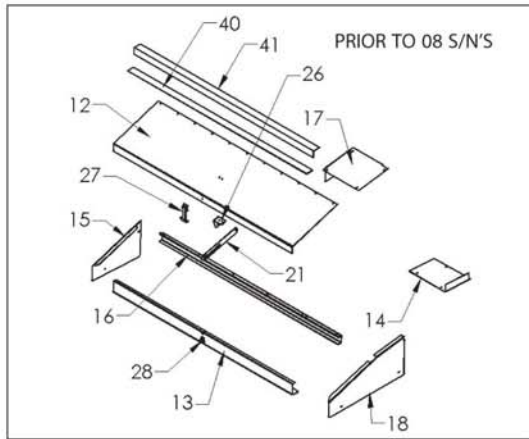


irfs.cdr

**7400/7500 UNLOADING GATE & MATERIAL GUIDES (CONT'D)  
(7500 PRIOR TO 2011 MODEL YEAR)**

KEY	PART NO.	DESCRIPTION	QTY
34	75-0413-1A	1-14 x 4" Grade 5 Machine Bolt (Prior to 08 serial #'s)	2
35	851-5013-3.5Z	1/2-13 x 3-1/2" Grade 5 Machine Bolt (Prior to 08 serial #'s)	2
	851-3816-3Z	3/8-16 x 3" Gr 5 Machine Bolt (08 Serial #'s & Later)	2
36	827-2528-.38	1/4-28 x 3/8" Set Screw (Prior to 08 serial #'s)	4
37	805-0050-Z	1/2" Flat Washer (Prior to 08 serial #'s)	12
	805-0038-Z	3/8" Flat Washer (08 Serial #'s & Later)	4
38	815-5013-Z	1/2-13 Nylon Insert Locknut (Prior to 08 serial #'s)	6
	815-3816-Z	3/8-16 Nylon Insert Locknut (08 Serial #'s & Later)	2
39	929-0003	Extension Spring (Prior to 08 serial #'s)	2
40	49-0099	Belting Hinge (Prior to 08 serial #'s)	1
41	924-5010-1	Stainless Steel Belting Hinge Top Strip (Prior to 08 serial #'s)	1
42	901-3913-OS	Lower Cylinder Pivot plate Welded Assy. (Prior to 08 serial #'s)	1
	901-3913	Lower Cylinder Pivot plate Welded Assy. (08 Serial #'s & Later)	1
43	901-3914	Gate Lift Arm Pivot Shaft Assy.	1
44	808-150-300-10	Machine Bushing	1
45	822-0050-Z	1/2" Split Lock washer	1
46	33-0030-RH	1/2 x 3/4" Drilled Grease Bolt	1
47	30-0001	1/4-28 Straight Grease Fitting	1
48	949-3704	Poly Top Gate Seal	1
49	924-5002	Right Rear Corner Shield (08 serial #'s & later)	1
50	924-5011	Rear Main Shield Assy. (08 Serial #'s & Later)	1
51	32-0032	3-1/2" Rubber T-Latch w/Catch	1
52	75-0305-1	Right Hand Tie Rod Eye	2
53	925-5016	Shear Arm Welded Assy.	2
54	826-1008	1-08 Jam Nut	4
55	925-3915	Optional Rear Channel to Body Seal	1
56	925-3807-3	Retaining Washer	1
57	901-3910	Gearbox Mount Channel	1
58	808-150-300-10	1-1/2" ID x 3" OD x 10 GA Spacer	1

# 7500 UNLOADING GATE & MATERIAL GUIDES (2011 MODEL YEAR & LATER)


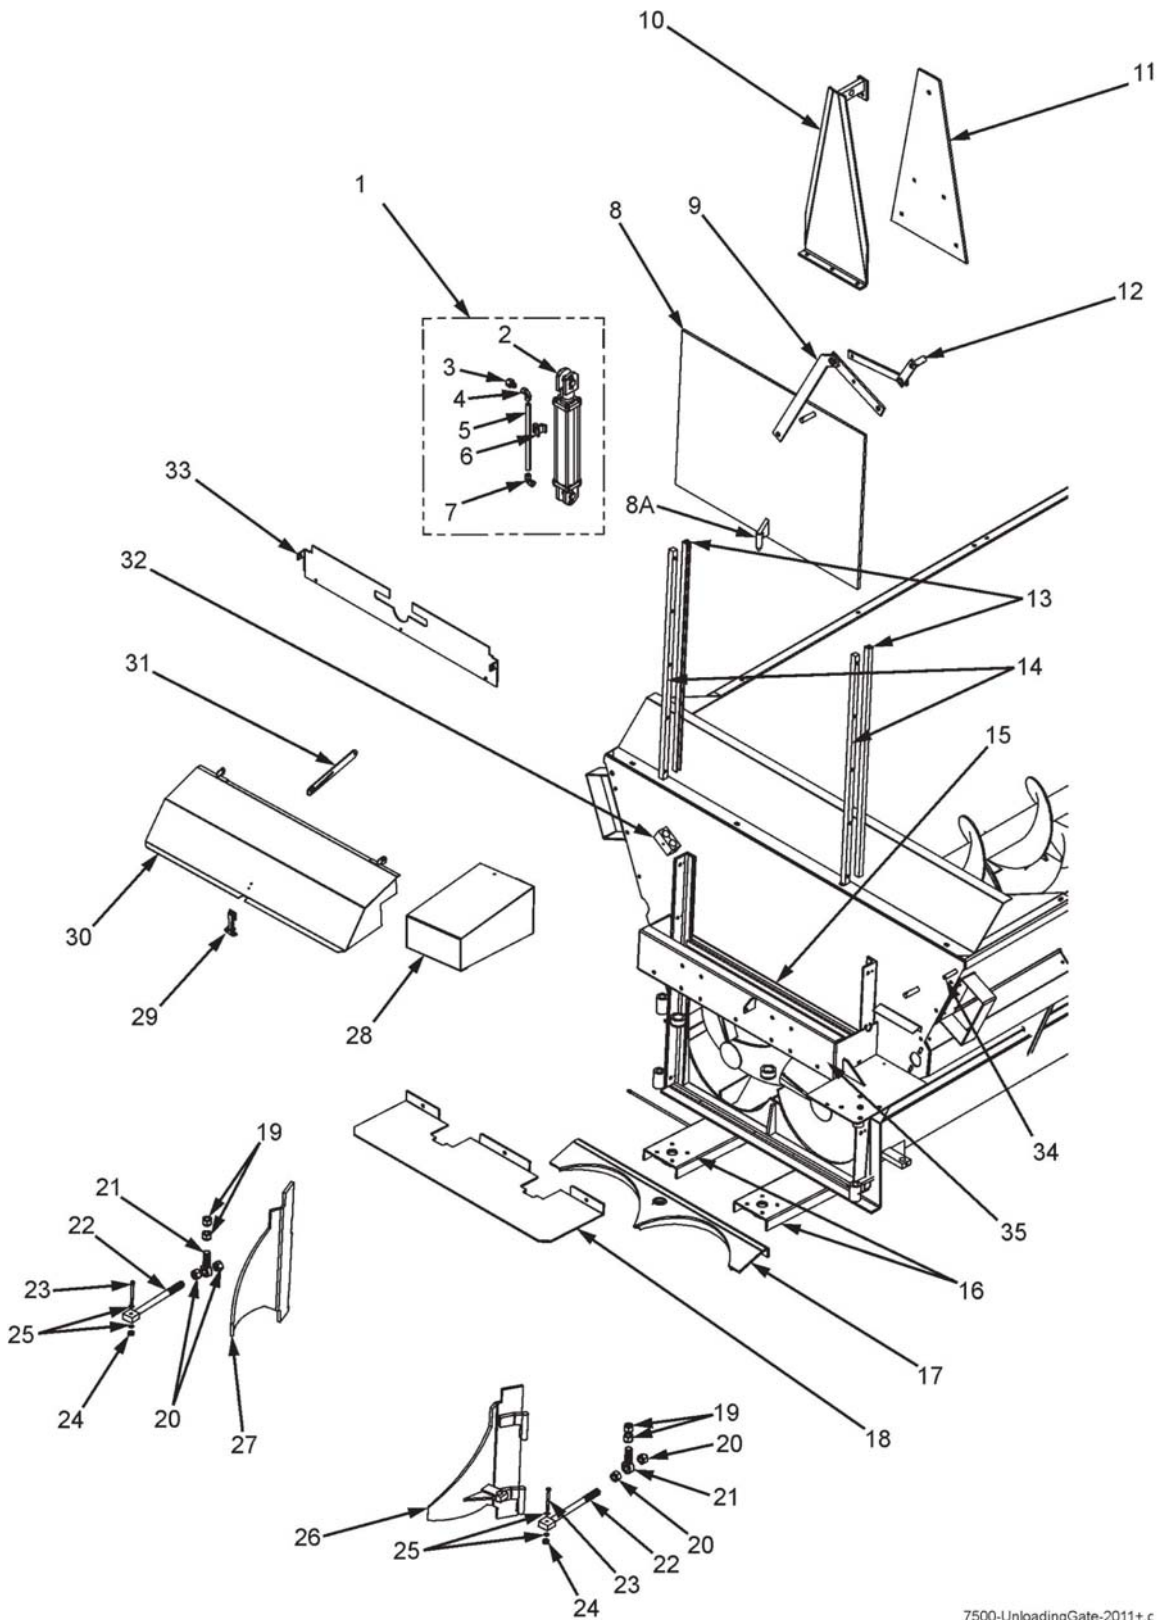


7500-UnloadingGate-2011+.c

## 7500 UNLOADING GATE & MATERIAL GUIDES (2011 MODEL YEAR & LATER)

KEY	PART NO.	DESCRIPTION	QTY
1	955-0202-ASSY	Cylinder w/Bracket and Pipe	1
2	955-0202	2-1/2 x 28Hydraulic Cylinder	1
3	955-0204	1/2"M x 3/8"F Straight Fitting	1
4	955-3605	3/8" 90 Degree Elbow	1
5	955-3841	7500 Center Gate Lift Pipe 29"	1
6	925-3754	Hydraulic Pipe Holder Weldment	1
7	955-0203	1/2" Adjustable O-Ring Boss to 3/8" Female NPT Elbow	1
8	901-3908-CGL	Back Gate Welded Assy for Center Gate Lift	1
8A	901-3908-5	Back Gate Pin & Tab Weldment	1
9	925-5003	Gate Indicator Arm Linkage Assy.	1
10	925-13906	Center Gate Lift Rear Cylinder Plate Weldment	1
11	925-3758-1	Center Gate Lift Front Cylinder Mount Plate	1
12	925-5002	Indicator Arm Linkage Assy.	1
13	949-3753	Poly Gate Slides	2
14	901-5000-1	Rear Gate Slide Guide	2
	803-2520-1.25Z	1/4" x 1-1/4" Tapered Bolt	10
	815-2520-Z	1/4" Nyloc Nut	10
15	949-3704	Poly Top Gate Seal	1
16	901-3903-34	Spinner Mount Channel	2
17	925-5005	Spinner Deflector Welded Assy	1
18	901-3845-1	Rear Shield Mount Plate	1
19	75-0305-2	Jam Nut 1"-14	4
20	826-1008	1-08 Jam Nut	4
21	75-0305-1	Right Hand Tie Rod Eye	2
22	925-5016	Shear Arm Welded Assy.	2
23	851-3816-3Z	3/8-16 x 3" Gr 5 Machine Bolt	2
24	815-3816-Z	3/8-16 Nylon Insert Locknut	2
25	805-0038-Z	3/8" Flat Washer	4
26	925-13905	R. Material Guide Assy	1
27	925-13904	L. Material Guide Assy	1
28	924-5002	Right Rear Corner Shield	1
29	32-0032	3-1/2" Rubber T-Latch w/Catch	1
30	924-5011	Rear Main Shield Assy.	1
31	925-5006-1	Rear Shield Support Arm	1
32	955-3754	3/4" Tube Clamp (Prior to SN SV167500297)	1
	55-0324	Stauff Twin Series Clamp (SN SV167500297 & Later)	1
	850-3118-2.5Z	5/16"-18 x 2-1/2" Carriage Bolt (SN SV167500297 & Later)	2
	805-0031-Z	5/16" Flat Washer (SN SV167500297 & Later)	1
	815-3118-Z	5/16"-18 Nylon Insert Locknut (SN SV167500297 & Later)	1
33	925-3915	Optional Rear Channel to Body Seal	1
34	925-5004-1	Gate Indicator Pipe	1
35	901-3910	Gearbox Mount Channel	1

# SPINNERS & GEARBOX SHAFT DRIVE

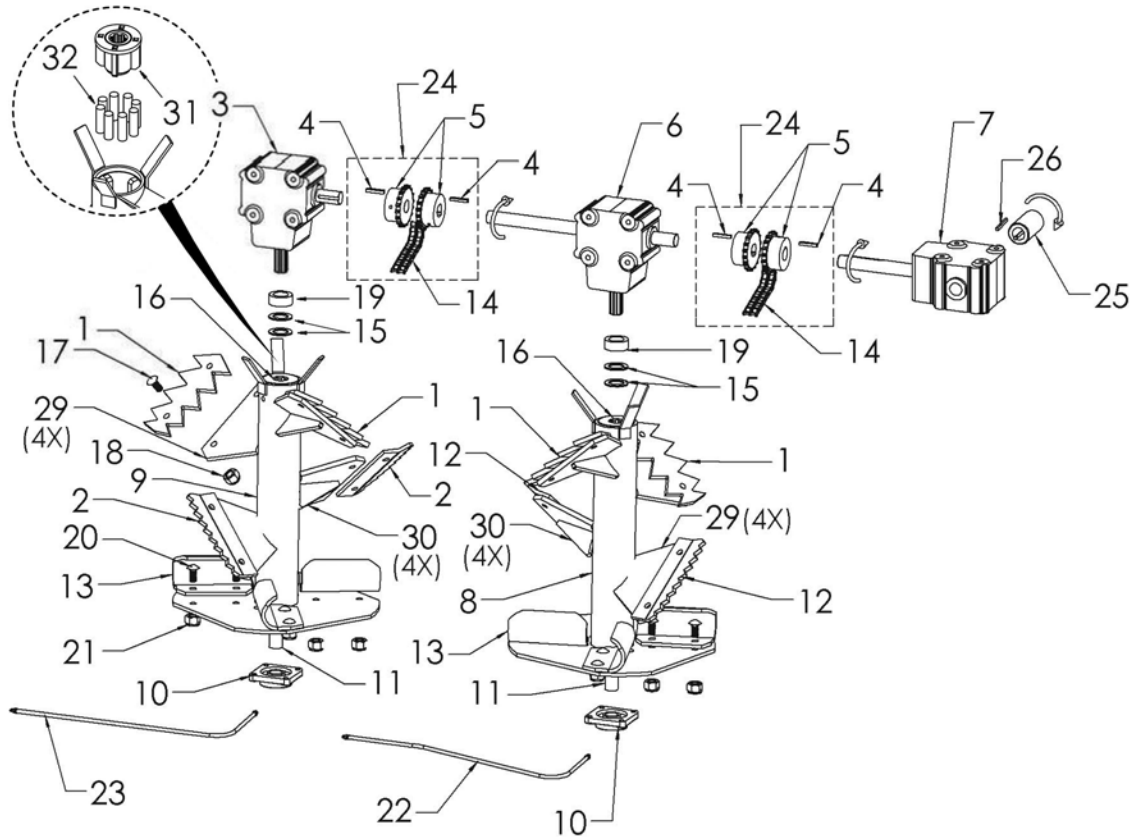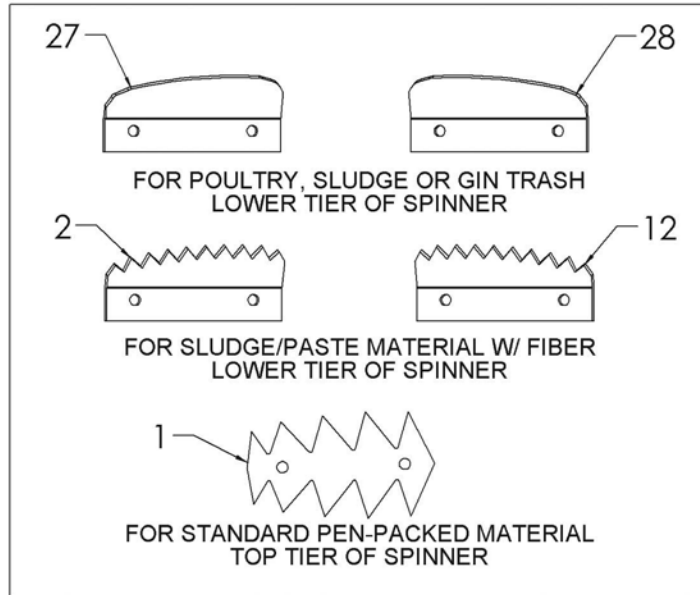




## SPINNERS & GEARBOX SHAFT DRIVE


KEY	PART NO.	DESCRIPTION
1	901-3753-10	Spinner Paddle, 2 Per Spinner
2	901-3753-19	8865/7000 LH Aggressive Spinner Paddle
3	19-0041	Gearbox, Left, Cast
	851-5013-1.5Z	1/2-13 x 1-1/2" Grade 5 M.B. Mount Bolts
	828-0050-Z	1/2" SAE Washer (2-per bolt)
	806-0050-Z	1/2" Internal Tooth Lockwasher
4	935-0002	5/16 x 5/16 x 2-1/4" Hardened Key
5	937-0014-1	Shaft Coupler, 1-3/8" Bore (4 Required)
6	19-0042	Gearbox, Center w/Thru Shaft, Cast
7	19-0043	Gearbox, Right, Cast (540 RPM, 1000 RPM Kit) 1:1 Ratio
	19-0048	Gearbox, Right, Cast (1000 RPM) 1:1.35 Ratio
	851-5013-1.5Z	1/2-13 x 1-1/2" Grade 5 M.B. Mount Bolts
	828-0050-Z	1/2" SAE Washer (2-per bolt)
	806-0050-Z	1/2" Internal Tooth Lockwasher
8	901-3971	Right Spinner Assembly With Shock Load Coupler, Less Paddles
9	901-3972	Left Spinner Assembly With Shock Load Coupler, Less Paddles
10	914-3604	Bearing 4 Bolt Flange 1-3/8" Bore-Ductile
11	901-3906-6	SV7000 Spinner Shaft (Prior to SN SV167400368)
	901-3962-2-4	Spinner Shaft Sleeve (SN SV167400368 & Later)
12	901-3753-20	8865/7000 RH Aggressive Spinner Paddle
13	901-3907-1	SV7000 Spinner Sand Paddle, (Reversible)
14	111-0060-18-CC	Chain & Attachment Link
15	808-1.38-2.5-14	Machine Bushing, 14GA
	808-1.38-2.5-18	Machine Bushing, 18GA
	808-1.38-2.5-10	Machine Bushing, 10GA
16	901-3855-4	Splined Hub (Prior to SN SV177400296)
17	851-6311-2Z	5/8"-11 x 2" Bolt, GR5
18	815-6311-Z	5/8"-11 Nylon Insert Lock Nut
19	921-0001	1-3/8" One Piece Set Collar
20	850-6311-1.5Z	5/8-11 x 1-1/2" Grade 5 Carriage Bolt
21	814-6311-Z	5/8-11 Center Locknut Zinc
22	933-3625	Copper Tube Grease Line 57" (Includes zerk, fittings)
23	933-3626	Copper Tube Grease Line 31" (Includes zerk, fittings)
24	937-0014	1-3/8" Coupler Assy. Kit w/Chain & Keys
25	937-0002	Shaft Coupler, 1-3/8" Bore, 5/16" Keyway w/4 Set Screws
26	35-0017	5/16 x 5/16 x 4-1/2" Key
27	901-3754-2	LH Poultry/Sludge/Gin Trash Paddle
28	901-3753-13	RH Poultry/Sludge/Gin Trash Paddle
29	901-3906-4	Spinner Paddle Mount Bracket
30	901-3906-5	Spinner Paddle Mount Bracket Gusset
31	901-3964	Lower Coupling Hub Weldment (SN SV177400296 & Later)
32	937-0021	Polyurethane Coupling Rod (SN SV177400296 & Later)

# SPINNER GEAR REDUCERS

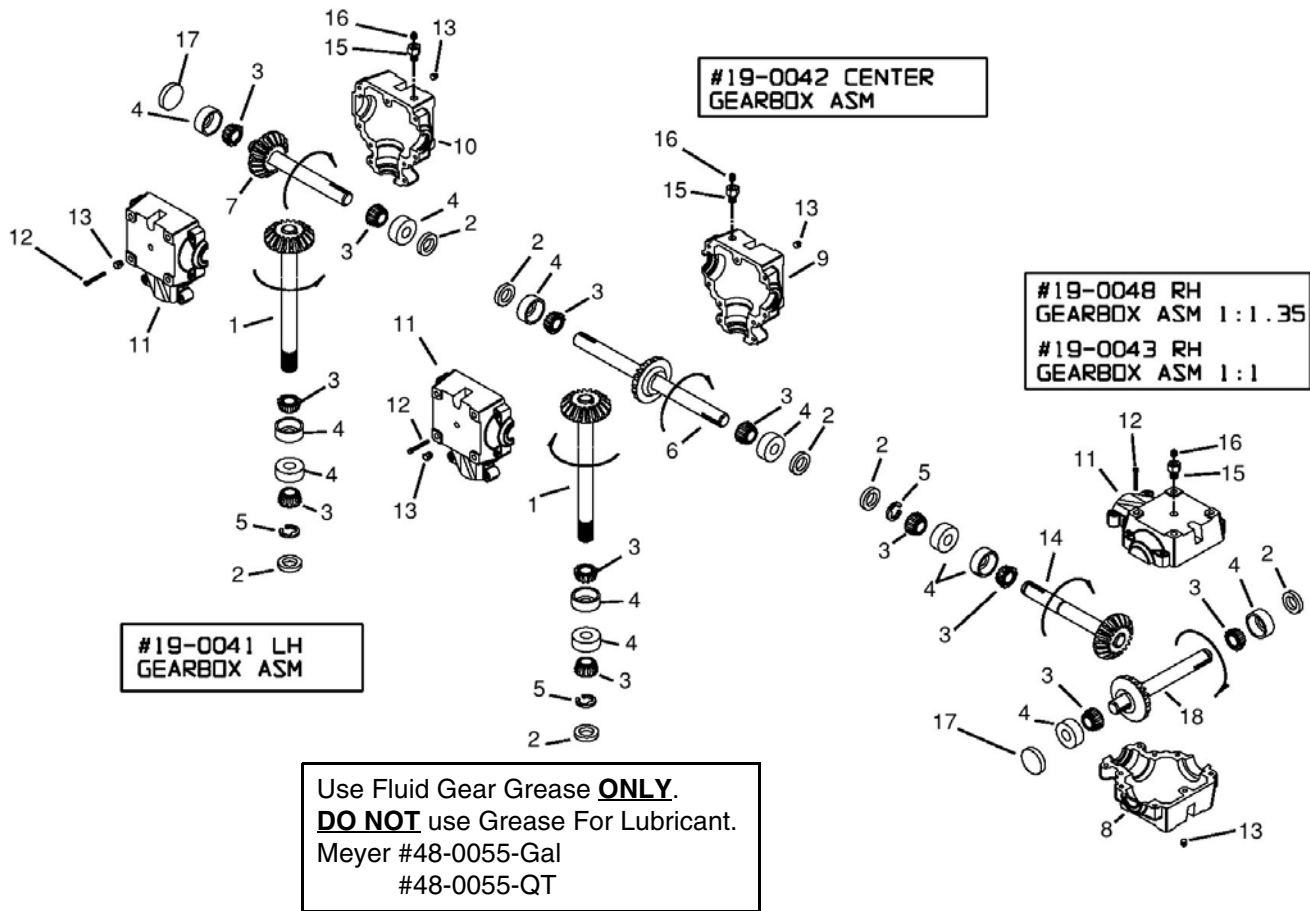

KEY	PART NO.	DESCRIPTION
1	19-0022-1-PF	Splined Pinion Output Shaft/Gear Assy
2	19-0018-2	Seal
3	19-0018-3	Bearing Cone
4	19-0016-3	Bearing Cup
5	19-0018-4	Retaining Ring
6	19-0022-2-PF	Center Gearbox Cross Thru Shaft/Gear Assy
7	19-0018-7-PF	RH/LH Gearbox Cross Input Shaft/Gear Assy (540 RPM, 1000 RPM Kit) 1:1 Ratio
	19-0048-1-PF	RH/LH Gearbox Cross Input Shaft/Gear Assy (1000 RPM) 1:1.35 Ratio
8	19-0043-1	Corner Gearbox Casting (tapped holes) Cast
9	19-0042-1	Center Gearbox Casting (tapped holes) Cast
10	19-0041-1	LH Gearbox Casting (tapped holes) Cast
11	19-0041-2	RH/LH/Center Gearbox Casting (thru holes) Cast
12	19-0024-20	Bolt 1 1/2" SHCS
13	19-0016-5	Plug 1/2" NPT Plain
14	19-0023-1-PF	RH Gearbox Pinion Output Shaft/Gear Assy (540 RPM, 1000 RPM Kit) 1:1 Ratio
	19-0048-2-PF	RH Gearbox Pinion Output Shaft/Gear Assy (1000 RPM) 1:1.35 Ratio
15	19-0023-2	3/8" Drilled Fill Plug Bolt
16	55-0107	Breather Plug
17	19-0041-3	Gearbox End Cap
18	19-0018-7-PF	RH/LH Gearbox Cross Input Shaft/Gear Assy (540 RPM) 1:1 Ratio
	19-0048-1-PF	RH/LH Gearbox Cross Input Shaft/Gear Assy (1000 RPM) 1:1.35 Ratio

## 19-0047 UPPER GEARBOX - TRUCK

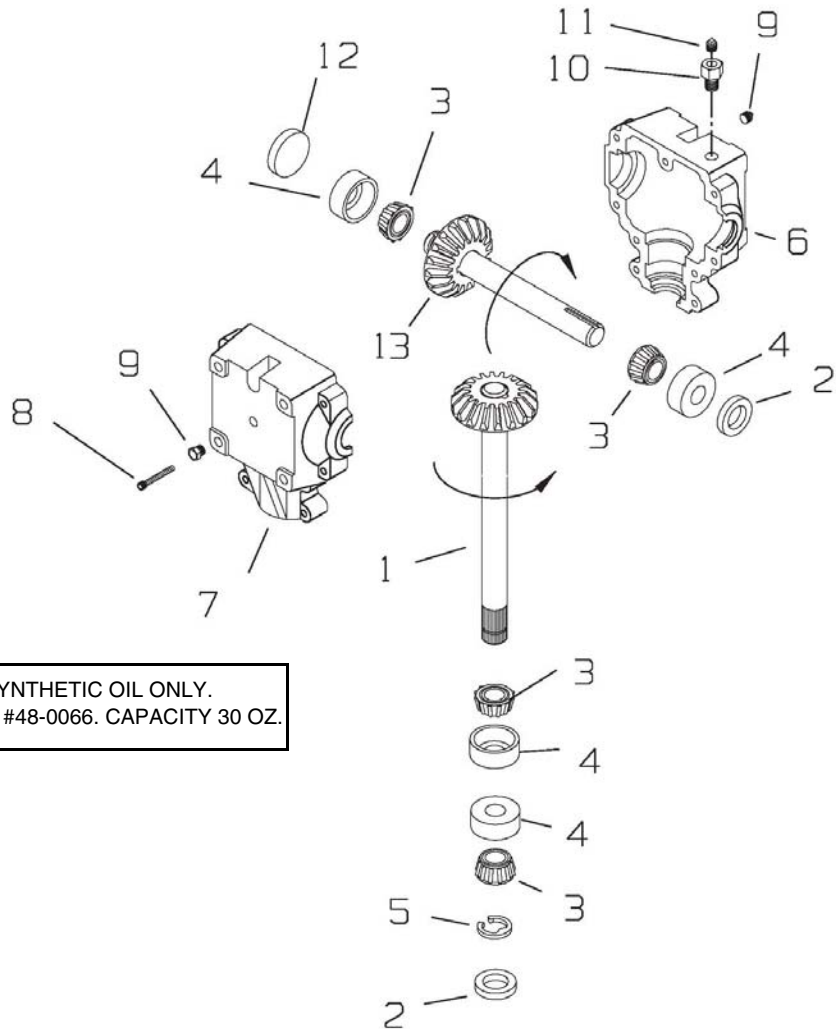


USE 75W90 SYNTHETIC OIL ONLY.  
MEYER PART #48-0066. CAPACITY 30 OZ.

KEY	PART NO.	DESCRIPTION
1	19-0047-1-PF	Splined Pinion Output Shaft/Gear Assy. W/Groove
2	19-0018-2	Seal
3	19-0018-3	Bearing Cone
4	19-0016-3	Bearing Cup
5	19-0018-4	Retaining Ring
6	19-0041-1	LH Gearbox Casting (tapped holes) Cast
7	19-0041-2	Gearbox Casting (thru holes) Cast
8	19-0024-20	Bolt 1 1/2" SHCS
9	19-0016-5	Plug 1/2" NPT Plain
10	19-0023-2	3/8" Drilled Fill Plug Bolt
11	55-0107	Breather Plug
12	19-0041-3	Gearbox End Cap
13	19-0018-7-PF	Gearbox Cross Input Shaft Gear Assembly 1:1 Ratio

# #19-0038-SYN 2:1 RATIO GEARBOX

## LOWER GEARBOX - TRUCK


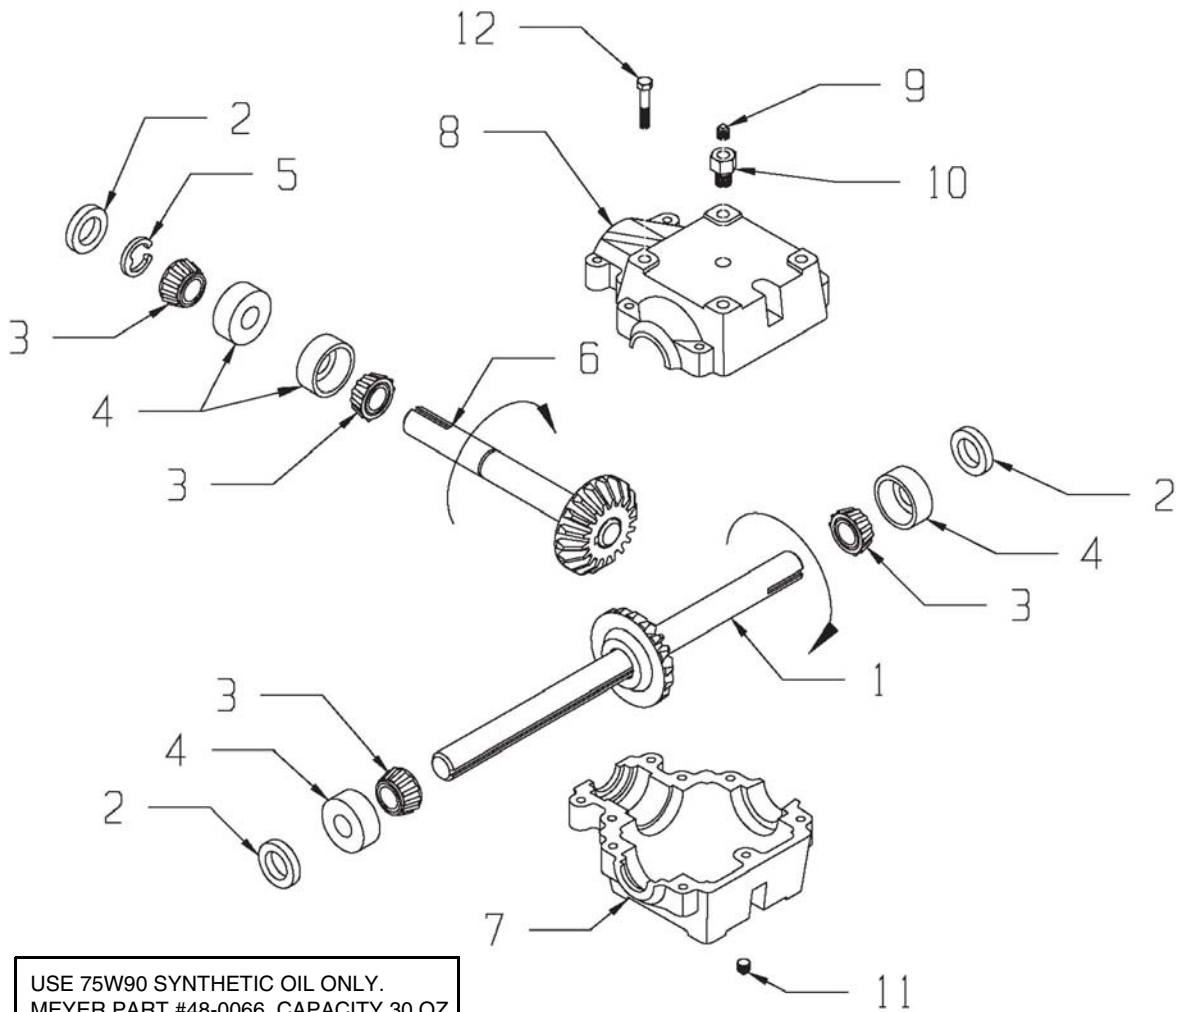


USE 75W90 SYNTHETIC OIL ONLY.  
MEYER PART #48-0066. CAPACITY 30 OZ.

KEY	PART NO.	DESCRIPTION
1	19-0034-4	Output Shaft/Gear Assembly
2	19-0018-2	Seal
3	19-0018-3	Bearing Cone
4	19-0016-3	Bearing Cup
5	19-0018-4	Retaining Ring
6	19-0034-3	Input Shaft/Gear Assembly
7	19-0043-1	Gearbox Casting (Tapped Holes)
8	19-0041-2	Gearbox Casting (Thru Holes)
9	19-0002-17	Vent Plug, 5 PSI
10	19-0023-2	Bushing, 1/2-14 NPT
11	19-0016-5	Plug, 1/2-14 NPT
12	19-0016-11	Bolt, 3/8-16 x 1.50 SHCS

This Page Intentionally Blank


# HUBS, AXLE & TANDEM AXLE ASSEMBLY

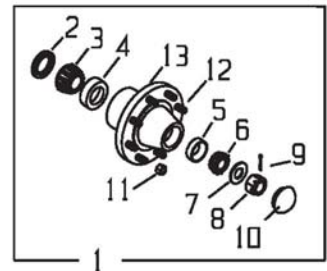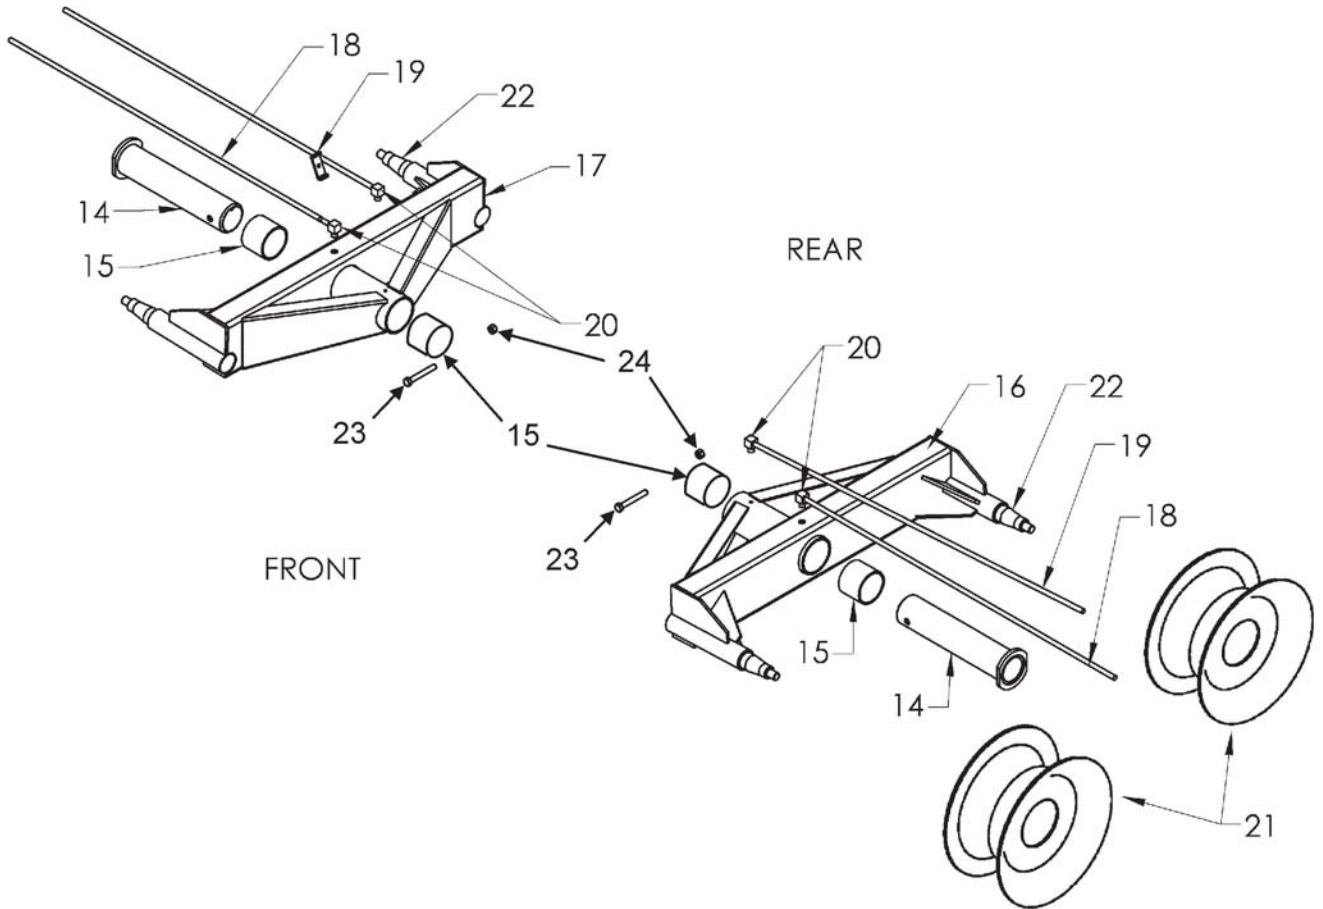

## HUBS, AXLE & TANDEM AXLE ASSEMBLY

KEY	PART NO. 7500	PART NO. 7400	DESCRIPTION
1	75-0207	75-0205	Hub Assembly Complete
2	75-0207-2	75-0205-2	Seal
3	75-0207-3	75-0205-3	Bearing Cone
4	75-0207-4	75-0205-4	Bearing Cup
5	75-0202-4	75-0202-4	Bearing Cup
6	75-0202-3	75-0202-3	Bearing Cone
7	75-0205-7-H	75-0205-7-H	Washer
8	75-0205-8	75-0205-8	Nut
9	75-0205-9	75-0205-9	Cotter Pin
10	75-0205-10	75-0205-10	Hub Cap
11	75-0205-11-H	75-0205-11-H	5/8"-18 Lug Nut Grade 5
12	75-0207-12	75-0205-12	5/8"-18 Stud Bolt
13	75-0207-1	75-0205-1	Hub Only w/Races & Studs
14	901-3905	901-3905	Axle Pivot Sleeve Welded Assy.
15	901-3904-1-3	901-3904-1-3	Nylon Pivot Sleeve
16	901-3904	901-3921-HD	Left O-Beam Welded Assy Less Hubs
	901-7500-1	901-7400-1	Left O-Beam Welded Assy With Hubs
	901-3927		Left O-Beam Welded Assy Less Hubs-(Gin Trash)
17	901-3911	901-3922-HD	Right O-Beam Welded Assy Less Hubs
	901-7500-2	901-7400-2	Right O-Beam Welded Assy With Hubs
	901-3926		Right O-Beam Welded Assy Less Hubs-(Gin Trash)
18	955-3761	955-3761	3/16 x 10" Grease Hose
19	955-3762	955-3762	3/16 x 16" Grease Hose
20	30-0020	30-0020	1/8" NPT Street L
21	75-0253	75-0253	Wheel Rim, W11C x 16.1(14L x 16.1 Tire)
	53-1653	53-1653	14L x 16.1 Tire/Wheel Assembly
	75-0262-HD	75-0262-HD	Wheel Rim, W14Cx16.1 (16.5L x 16.1 Tire)
	53-3862	53-3862	16.5L x 16.1 Tire/Wheel Assembly
	75-0268-HD	75-0268-HD	Wheel Rim, 22.5 x 8.25 (11R x 22.5 Used Tire)
	53-2768-H	53-2768-H	Used 11R22.5 Tire/Wheel Assembly
	75-0260-HD	75-0260-HD	Wheel Rim, 22.5 x 13.5 (425/65/R22.5 Used Tire)
	53-2860-HD	53-2860-HD	Used 425/65/R22.5 Tire/Wheel Assembly
	75-0263-HD	NA	Wheel Rim, W16C x 16.1 (19L x 16.1 Tire)
53-3763	NA	19Lx16.1 Tire/Wheel Assembly	
22	75-0107	NA	3x18-1/2" Spindle Only
	NA	75-0104	2-3/4 x 18-1/4" Spindle Only
23	881-7510-6Z	881-7510-6Z	Bolt, 3/4-10 x 6" Grade 8 Hex Head
24	815-7510-Z	815-7510-Z	Nut, 3/4-10 Nylon Lock

# THIRD AUGER

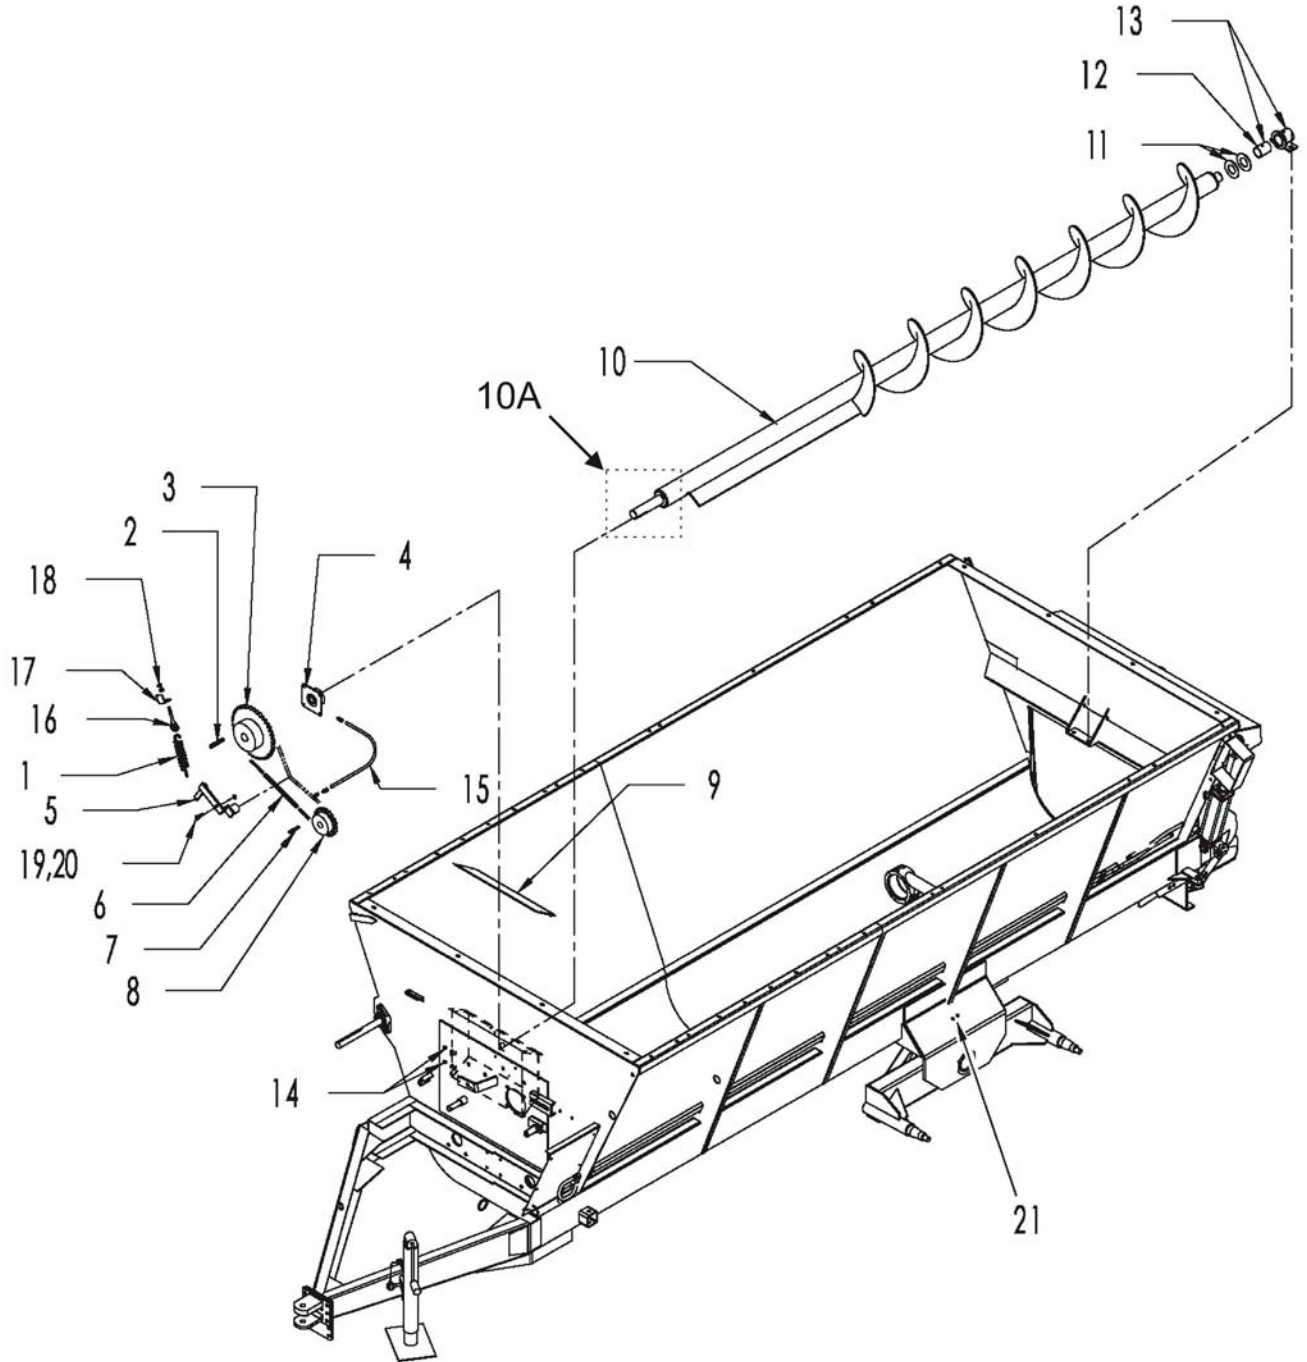




## THIRD AUGER

KEY	PART NO	DESCRIPTION
1	929-3601	Extension Spring
2	35-0008	1/2" x 1/2" x 2" Square Key
3	910-0050	80B26 Sprocket 2" Bore, 1/2" Keyway
4	14-0031	Bearing, 4-Bolt Flange, 2" B
5	925-3866	Chain Tightener Bracket Weldment
6	911-0033	#80-36 Roller Chain w/Connector
7	35-0026	3/8" x 3/8" x 1-3/4" Square Key
8	910-0005	80B12, 1-1/2"B, 3/8" Keyway
9	925-3861	Oil Bath Cover
10	926-5000	74/7500 3rd Auger Welded Assembly
10A	926-5000-1	74/7500 Front Shaft w/Sleeves
11	933-3606	Bronze Washer
12	13-0023	2.032 I.D. x 2.252 O.D. x 2-3/4 Al Bronze Bushing (Prior to 08 Models)
	913-3809	2.031 I.D. x 2.75 O.D. x 3 Nylon Bushing (08 Models and Later)
13	925-3865	3rd Auger Rear Shaft Support Sleeve w/Bushing
14	955-3809	3/8" Square Head Steel Pipe Plug
15	933-3627	Copper Tube Grease Line 14-1/2" (includes zerk, fittings)
16	933-3804	Eyebolt, Full Thread
17	925-3825	Tightener Angle Clip
18	813-3118-Z	5/16-18 Nut Zinc
19	851-6311-2Z	5/8"-11 x 2" Gr. 5 Machine Bolt
20	814-6311-Z	5/8"-11 Center Lock Nut
21	30-0002	Straight Grease Zerk

# OIL-KIT


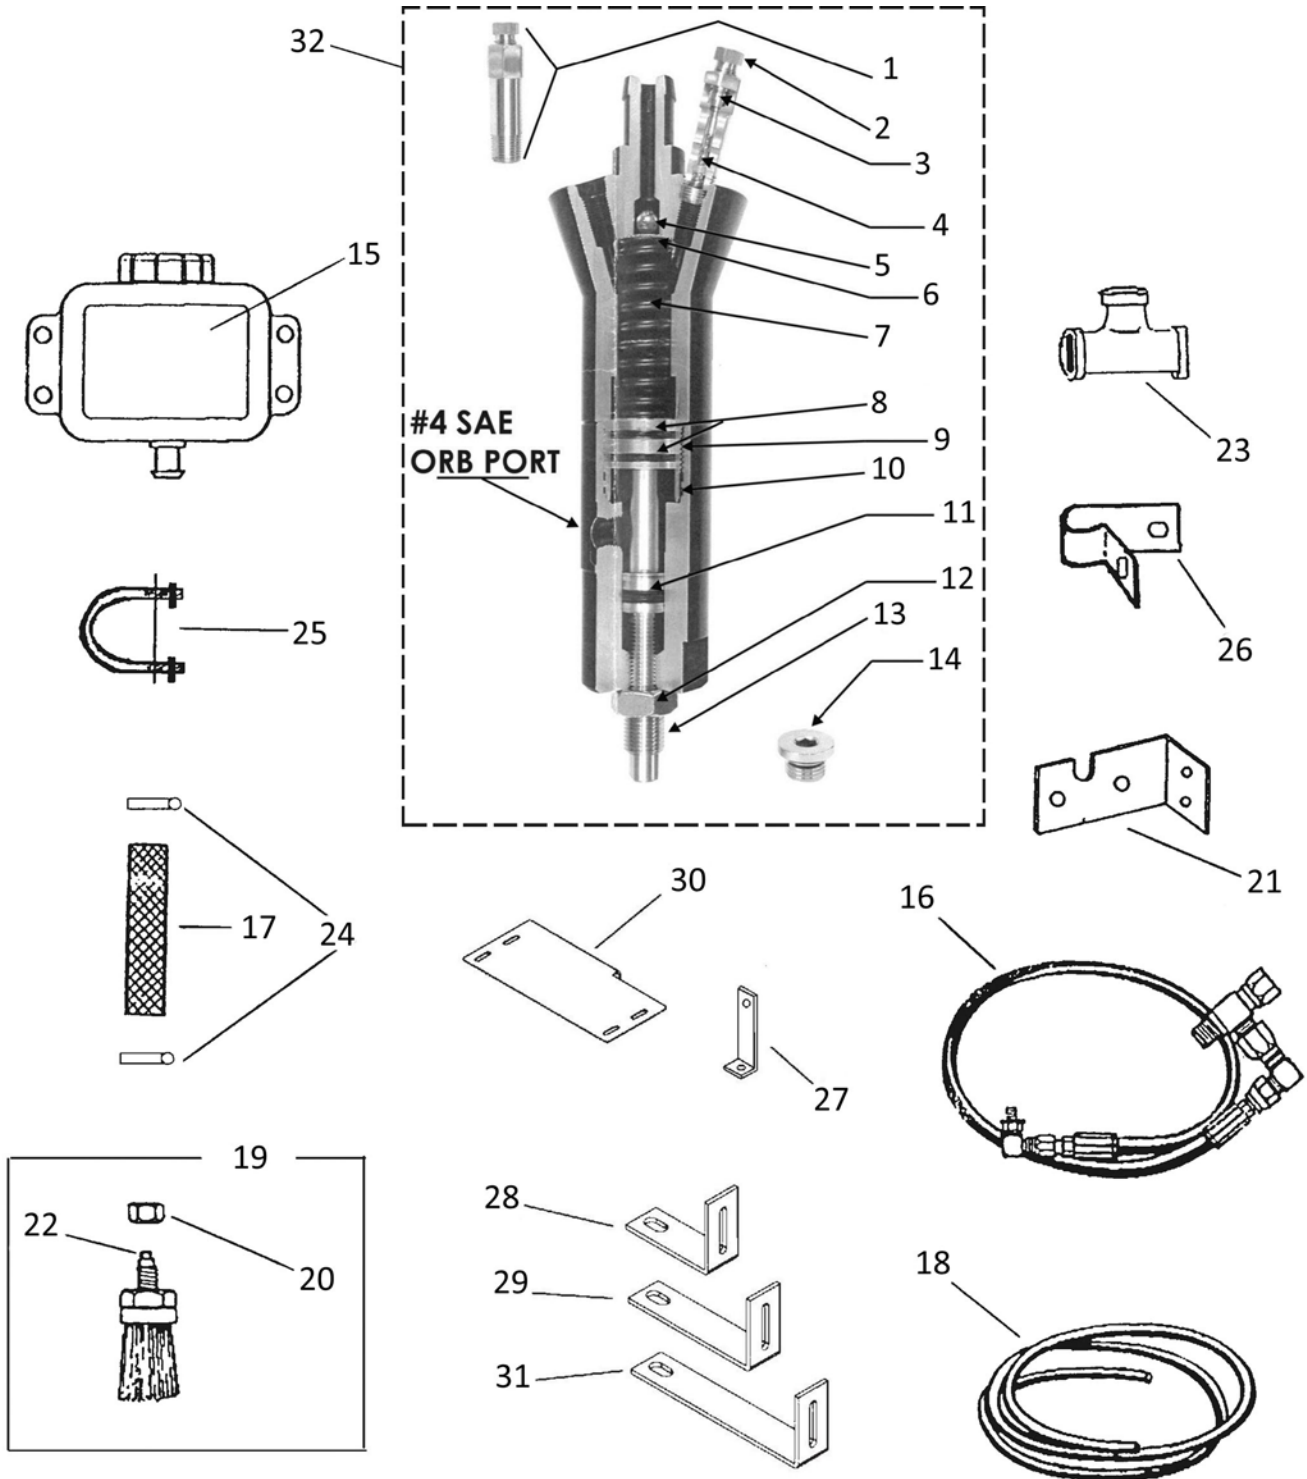


## OIL-KIT


KEY	PART NO	DESCRIPTION
1	952-0001-1-33	Holder, Manifold Valve Assembly
2	952-0001-1-27	Sleeve Nut Brass
3	952-0001-1-28	5/32 Brass Ferrule
4	952-0001-1-9	One Way Valve (Schrader Valve)
5	952-0001-1-11	Bearing, 7/16" Stainless
6	952-0001-1-10	Screen Flat Oiler .906 Dia
7	952-0001-1-5	Spring, Oiler
8	952-0001-1-8	O Ring, Oiler Piston 2-022 90 Dur
9	952-0001-1-4	Piston, 2 Groove Alum, Short
10	952-0001-1-6	Washer, Rubber Lube Minder
11	952-0001-1-7	O Ring, Adj End Cap Plunger
12	952-0001-1-16	1/2-20 Jam Nut
13	952-0001-1-3	Plunger, Brass Adj End Cap
14	952-0001-1-32	1/8" Hex Head Pipe Plug
15	952-0001-1-18	Reservoir Two Quart Tank
	952-0001-1-35	Tank, Cap Only
16	952-0001-1-19	Hydraulic Hose Assembly Meyer Mfg.
17	952-0001-1-20	Tubing 5/8" ID Clear Polybraid
18	952-0001-1-21	Tubing 5/32" Nylon (Feet)
19	952-0001-1-25	Brush Assembly No 5/32 Insert
20	813-5020-Z	1/2-20 Plated Nut
21	952-0001-1-17	Bracket Oiler Mtg Pump
22	952-0001-1-14	5/32 Push In Insert (Nycoil)
23	955-3803	BM Pipe Tee 3/8 x 3/8 x 3/8
24	952-0001-1-30	1" Hose Clamp
25	952-0001-1-31	U-Bolt Assembly #13
26	08-0050	5/16" Closed "J" Clip
27	952-0001-2	#80 Brush Holder
28	952-0001-3	Left #120 Auger Chain Brush Holder
29	952-0001-4	Right #120 Auger Chain Brush Holder
30	952-0001-5	Oiler Tank Mount Plate
31	952-0001-6	#80 Center Shaft Chain Brush Holder
32	952-0001-1-36	Oiler Body Pump Assy, Complete

# V-FORCE LIGHTING



PRIOR TO SERIAL # SV117400439

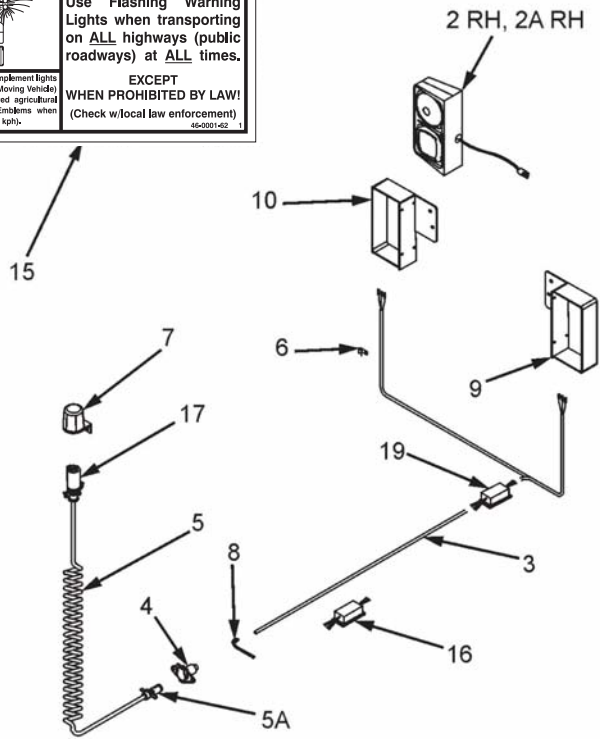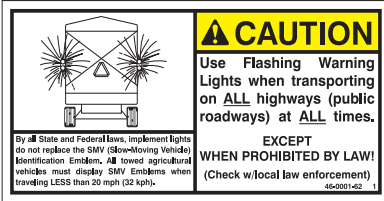

TRUCK MOUNTS USE RED LENSES IN BOTH TOP AND BOTTOM REAR FACING POSITIONS

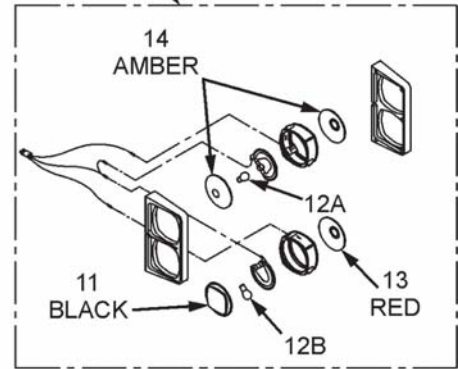

SERIAL # SV117400439 AND LATER

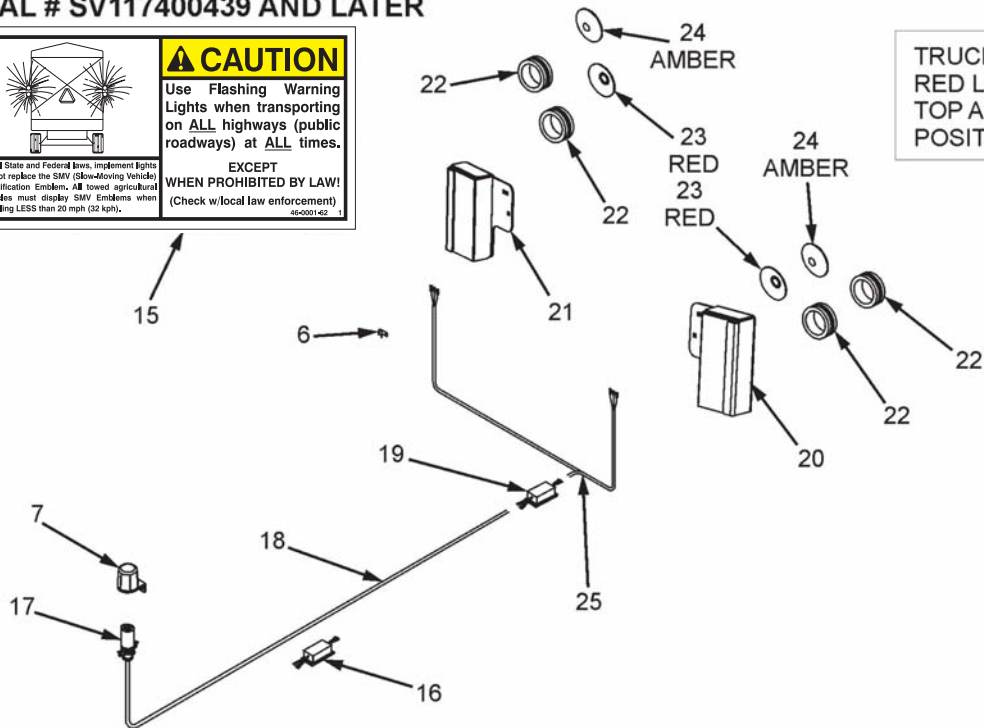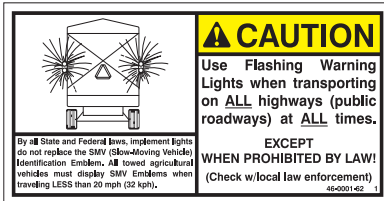



TRUCK MOUNTS USE RED LAMPS IN BOTH TOP AND BOTTOM POSITIONS

VForce-HighwayLighting.cdr

## V-FORCE LIGHTING

KEY	PART NO.	DESCRIPTION
1	56-0030	Dual Light LH w/4-Plug
1A	56-0030-TR	Truck Mount Dual Light LH w/4-Plug
2	56-0031	Dual Light RH w/4-Plug
2A	56-0031-TR	Truck Mount Dual Light RH w/4-Plug
3	52-0032-LED-PKG	Ag Light Harness W/Module LED Update
4	56-0004	#1232 4-Way Socket 4-Pin
5	56-0005	Coil Cable Assy.
5A	56-0005-1	4-Hole Plug (End Only)
6	56-0008	Harness Frame Clip
7	56-0009	Store-A-Way Plug Holder
8	65-0006-5	Nylon Tie Straps
9	925-3876	L.H. Light Mount Bracket (7400)
	925-3793	L/R Light Mount Bracket (7500)
10	925-3877	R.H. Light Mount Bracket (7400)
	925-3793	L/R Light Mount Bracket (7500)
11	56-0001-3	Bezel Blank, Black (Fit Inside Housing)
	56-0030-3	Bezel Blank, Black (Fit Over Housing)
12A	56-0001-5	#1156 Single Filament Bulb
12B	56-0001-4	#1157 Dual Filament Bulb
13	56-0001-2	Red Lens (Fit Inside Housing) (Prior to SN SV097400387)
	56-0030-2	Red Lens (Fit Over Housing) (SN SV097400387 thru SV117400439)
14	56-0001-1	Amber Lens (Fit Inside Housing) (Prior to SN SV097400387)
	56-0030-1	Amber Lens (Fit Over Housing) (SN SV097400387 thru SV117400439)
15	46-0001-62	Caution Tail Light Decal
16	56-0028	Tail Light Converter (Truck Mount Only)
17	56-0005-4	7-Way Plug w/Spring Male
18	56-0094	7400/7500 LED Light Cord with 7-Pin AG Plug & 6 Pin Connector
19	56-0032-1	Ag Enhancer Module w/Connectors (Use w/Incandescent Light Harness)
	56-0084	LED Ag Enhancer Module w/Connectors (Use w/LED Light Harness)
20	925-0015-1	7400 LH LED Light Mount Weldment
	925-0011-1	7500 LH LED Light Mount Weldment
21	925-0014-1	7400 RH LED Light Mount Weldment
	925-0012-1	7500 RH LED Light Mount Weldment
22	56-0092	4" Round Grommet
23	56-0090	4" Red Stop/Tail/Turn
24	56-0091	4" Amber Turn/Warning
25	56-0130	LED Light Y-Harness Less Module with Plugs
	56-0130-1	LED Light Y-Harness Less Light Plug Leads
	56-0130-2	LED Light Pigtail

**918-0312 PTO DRIVE SHAFT ASSEMBLY**  
 540 RPM 1-3/8 - 6 SPLINE YOKE  
 WWE2480 (80 DEGREE C.V.)  
 (Prior to SN SV177400202)  
 (SN SV177400271 Through SN SV177400292)

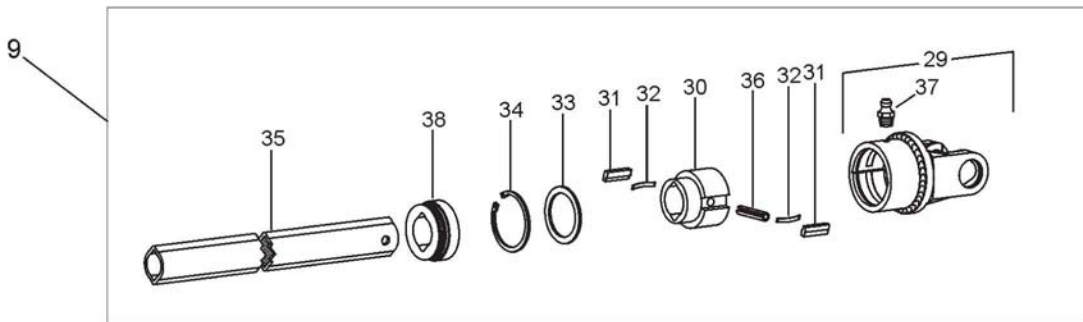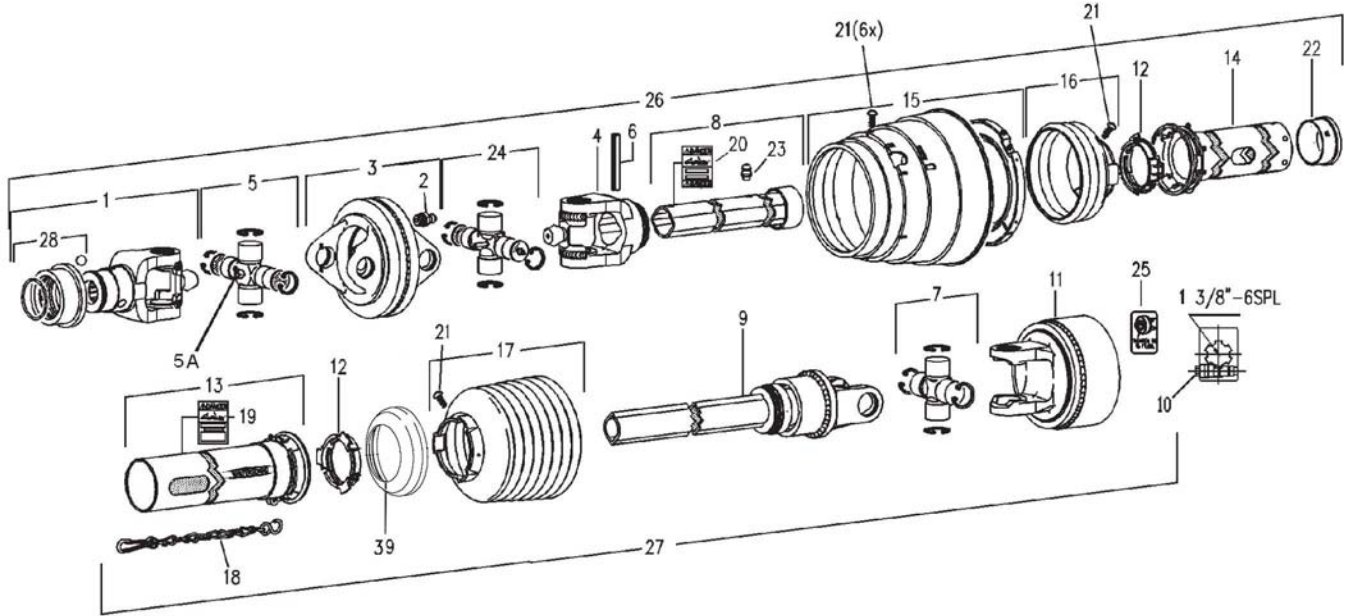

74-7500-918-0312-PTODriveShaftAssembly.cdr

## 918-0312 PTO DRIVE SHAFT ASSEMBLY

540 RPM 1-3/8 - 6 SPLINE YOKE

WWE2480 (80 DEGREE C.V.)



(Prior to SN SV177400202)

(SN SV177400271 Through SN SV177400292)

KEY	PART NO.	DESCRIPTION
1	918-0212-1-1	Yoke 1-3/8"-6 Splined Assembly
2	918-0208-1-2	Grease Zerk in item 3
3	918-0208-1-3	Double Yoke
4	918-0208-1-4	Inboard Yoke
5	918-0208-1-5	Cross and Bearing Kit
5A	918-0208-1-5-1	M8x1 67.5° Zerk In Cross & Bearing Kit
6	918-0308-1-5	Spring Pin 10 x 75
7	918-0208-2-1	Cross and Bearing Kit
8	918-0208-1-14	Profile and Sleeve Wa
9	918-0208-2-2	Overrunning Clutch & 1bGA Profile Assy.
10	918-0208-2-3-1	Clamping Cone Bolt (Included in Item 11)
11	918-0312-1-1	Cut Out Clutch 1900NM
12	918-0208-2-4	Bearing Ring SC25
13	918-0208-2-5	Outer Shield Tube OVL
14	918-0208-1-7	Inner Shield Tube Round
15	918-0208-1-8	CV Cone & Bearing Assy.
16	918-0208-1-9	Shield Cone 3 Rib
17	918-0208-2-6	Shield Cone 8 Rib
18	918-0208-2-7	Safety Chain
19	918-0208-2-8	Decal Out-In Item 13
20	918-0208-1-10	Decal In-In Item 8
21	918-0208-2-9	Screw-In Item 15,16 & 17
22	918-0208-1-11	Support Bearing
23	918-0208-1-12	Zerk-In Item 8
24	918-0208-1-13	Cross and Bearing Kit
25	918-0208-2-10	Decal-K64
26	918-0212-1	1-3/8-6 Spline Tractor Half Assembly
27	918-0312-1	540 RPM Implement Half Assembly
28	18-0117-1-1-1	AS-Lock Kit For Item 1 (Inc. Ring, Collar & Balls)
29	918-0208-2-2-2	Over-running Clutch Housing
30	918-0208-2-2-3	Over-running Clutch Hub
31	18-0119-1-1-2	Over-running Clutch Key
32	18-0119-1-1-1	Over-running Clutch Leaf Spring
33	918-0308-2-1-3	Over-running Clutch Supporting Ring
34	18-0119-1-1-6	Over-running Clutch Retaining Ring
35	918-0208-2-2-1	Profile Tube - 1bGA
36	918-0308-2-1-12	Spring Pin, 10 x 55
37	918-0208-1-2	Grease Zerk
38	918-0208-2-2-4	Bearing Ring
39	918-0308-2-5-1	Reinforcing Collar

See Page 66 For Cut Out Clutch

**918-0312 PTO DRIVE SHAFT ASSEMBLY**  
 540 RPM 1-3/8" - 6 SPLINE YOKE  
 WWE2480 (80 DEGREE C.V.)  
 (SN SV177400202 Through SN SV177400270)  
 (SN SV177400293 & Later)

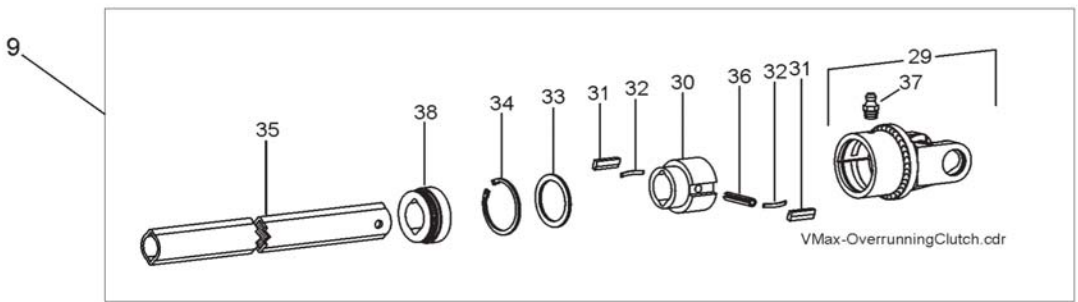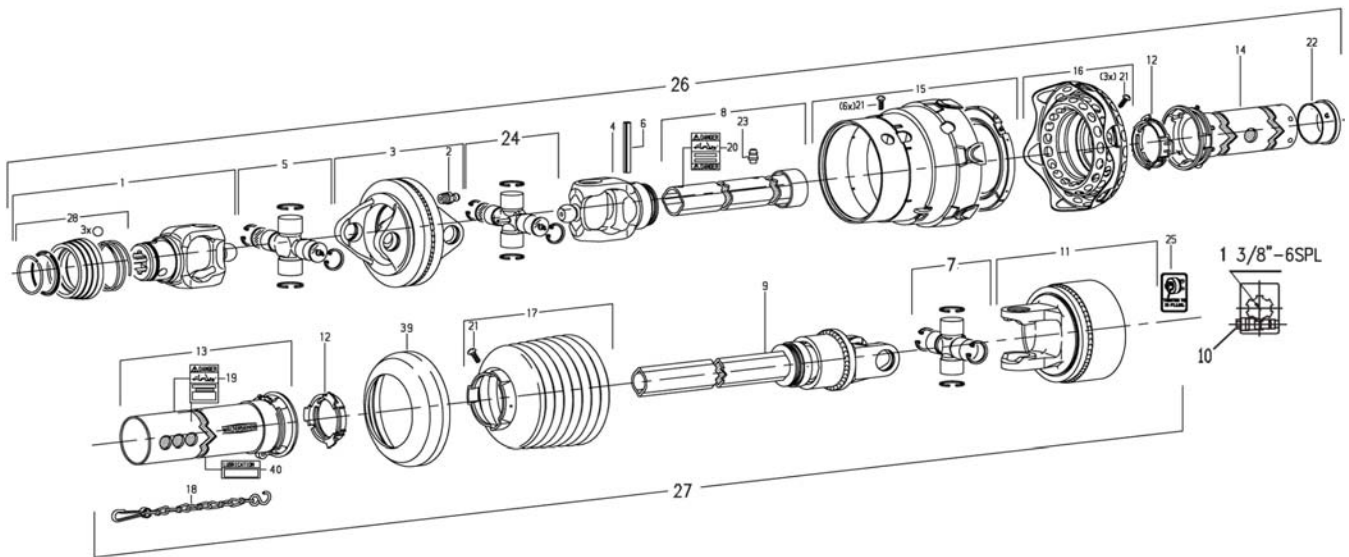



## 918-0312 PTO DRIVE SHAFT ASSEMBLY

540 RPM 1-3/8 - 6 SPLINE YOKE

WWE2480 (80 DEGREE C.V.)


(SN SV177400202 Through SN SV177400270)

(SN SV177400293 & Later)

KEY	PART NO.	DESCRIPTION
1	918-0212-1-1	Yoke 1-3/8"-6 Splined Assembly
2	918-0208-1-2	Grease Zerk in item 3
3	918-0208-1-3	Double Yoke
4	918-0208-1-4	Inboard Yoke
5	918-0212-1-2	Cross and Bearing Kit
5A	918-0208-1-5-1	M8x1 67.5° Zerk In Cross & Bearing Kit
6	918-0308-1-5	Spring Pin 10 x 75
7	918-0208-2-1	Cross and Bearing Kit
8	918-0208-1-14	Profile and Sleeve Wa
9	918-0208-2-2	Overrunning Clutch & 1bGA Profile Assy.
10	918-0208-2-3-1	Clamping Cone Bolt (Included in Item 11)
11	918-0312-1-1	Cut Out Clutch 1900NM
12	918-0208-2-4	Bearing Ring SC25
13	918-0312-1-2	Guard Tube Outer
14	918-0212-1-3	Guard Tube Inner
15	918-0212-1-4	CV Guard And Bearing Assembly
16	918-0212-1-5	Flex Net And Guard Assembly
17	918-0208-2-6	Shield Cone 8 Rib
18	918-0208-2-7	Safety Chain
19	918-0208-2-8	Decal Out-In Item 13
20	918-0208-1-10	Decal In-In Item 8
21	918-0208-2-9	Screw-In Item 15,16 & 17
22	918-0208-1-11	Support Bearing
23	918-0208-1-12	Zerk-In Item 8
24	918-0208-1-13	Cross and Bearing Kit
25	918-0208-2-10	Decal-K64
26	918-0212-1	1-3/8-6 Spline Tractor Half Assembly
27	918-0312-1	540 RPM Implement Half Assembly
28	18-0117-1-1-1	AS-Lock Kit For Item 1 (Inc. Ring, Collar & Balls)
29	918-0208-2-2-2	Over-running Clutch Housing
30	918-0208-2-2-3	Over-running Clutch Hub
31	18-0119-1-1-2	Over-running Clutch Key
32	18-0119-1-1-1	Over-running Clutch Leaf Spring
33	918-0308-2-1-3	Over-running Clutch Supporting Ring
34	18-0119-1-1-6	Over-running Clutch Retaining Ring
35	918-0208-2-2-1	Profile Tube - 1bGA
36	918-0308-2-1-12	Spring Pin, 10 x 55
37	918-0208-1-2	Grease Zerk
38	918-0208-2-2-4	Bearing Ring
39	918-0308-2-5-1	Reinforcing Collar
40	918-0308-2-6	Lubrication Decal


See Page 66 For Cut Out Clutch

**540 RPM 1-3/8 - 6 SPLINE YOKE**  
WWE2480 ( 80 DEGREE C.V.)  
(PRIOR TO SERIAL #SV087500201)

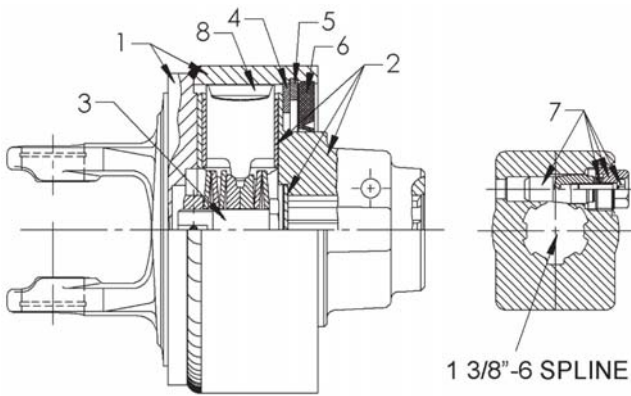


KEY	MEYER PART NO.	DESCRIPTION
1	918-0308-2-2-1	Housing
2	918-0208-2-3-3	Hub
3	918-0208-2-3-4	Spring Pack 1900NM
4	918-0208-2-3-5	Washer
5	918-0208-2-3-6	Retaining Ring
6	918-0208-2-3-7	Sealing Ring
7	918-0208-2-3-1	Clamp Cone Assembly
8	918-0208-2-3-8	Cam
NS	918-0208-2-3-9	Bushing-In Item #2
NS	918-0208-2-3-11	Shim Kit

**540 RPM 1-3/8 - 6 SPLINE YOKE**  
WWE2480 ( 80 DEGREE C.V.)  
(SERIAL #SV087500201 & LATER)

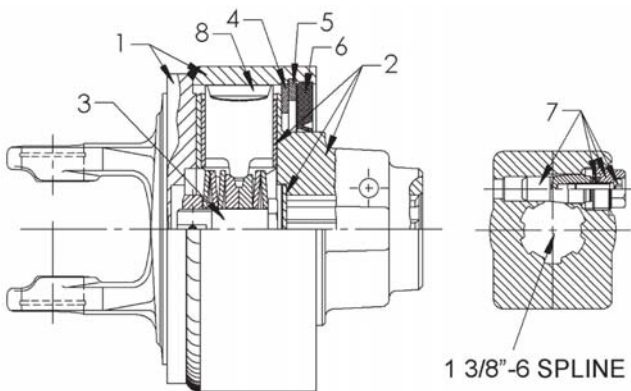

KEY	MEYER PART NO.	DESCRIPTION
1	918-0308-2-2-1	Housing
2	918-0308-2-2-2	Hub
3	918-0312-1-1-1	Spring Pack 1900NM
4	918-0208-2-3-5	Washer
5	918-0208-2-3-6	Retaining Ring
6	918-0208-2-3-7	Sealing Ring
7	918-0208-2-3-1	Clamp Cone Assembly
8	918-0308-2-2-4	Cam
NS	918-0312-1-1-2	Bushing-In Item #2
NS	918-0208-2-3-11	Shim Kit

## 1000 RPM KIT SVS-RPM-KIT

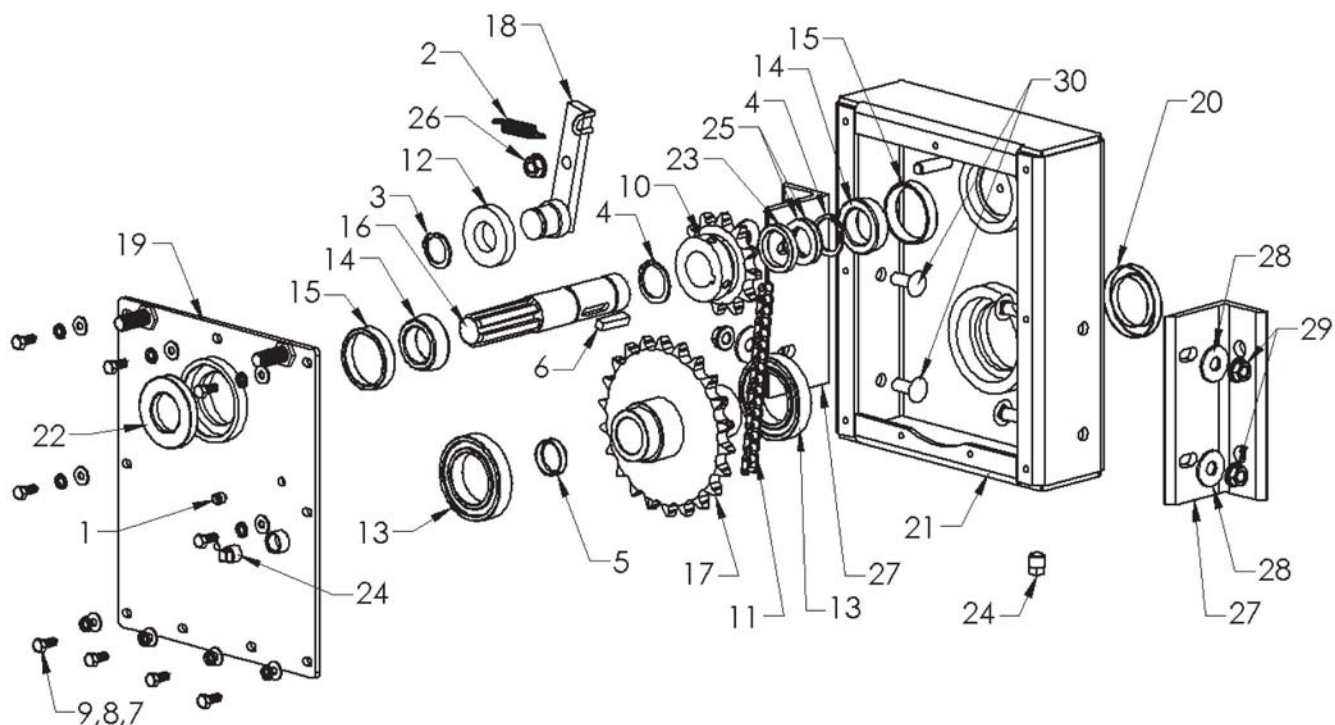


KEY	PART NO.	DESCRIPTION	QTY.
1	19-0002-17	Vent Plug	1
2	29-0015	Tightener Spring	1
3	33-0012	Retaining Ring 1-1/4"	1
4	33-0021	Retaining Ring 1-1/2"	2
5	33-0039	Expansion Plug	1
6	35-0010	3/8 x 3/8 x 1-1/2" Key	1
7	805-0031-Z	5/16" Flat Washers	9
8	806-0031-Z	5/16" Internal Tooth Lock Washers	9
9	851-3118-.75Z	5/16-18 x 3/4" GR5 Machine Bolt	9
10	910-0005	80B12 1-1/2" Bore Sprocket	1
11	911-0045-HD	#80 Heavy Duty-30 Pitch Roller Chain	1
12	912-0010	Chain Tightener Roller	1
13	914-3809	Output Quill Bearing	2
14	914-3816	Input Shaft Bearing	2
15	914-3817	Input Shaft Bearing Race	2
16	923-3834	Splined Input Shaft	1
17	923-3835	Output Quill	1

KEY	PART NO.	DESCRIPTION	QTY.
18	925-3890-1	Chain Tightener Weldment Less Roller	1
19	925-3891-1	Front Cover Plate Welded Assembly	1
20	925-3892-10	2-1/8" Seal	1
21	925-3892-1	Main Tube Weldment	1
22	925-3892-9	1-1/2" Seal	1
23	933-3812	Input Shaft Spacer	1
24	955-3809	3/8" NPT Square Plug	2
25	808-1.5-2.25-14	1-1/2 ID x 2-1/4 OD x 14 Ga. Machine Bushing	AR
26	814-5013-Z	1/2-13 Center Locknut	1
27	925-3892-7	RPM Tube Mount Angles	2
28	805-0050-Z	1/2" Flat Washer	4
29	810-5013-Z	1/2" Spin Locknut	4
30	850-5013-1.25Z	1/2" -13 x 1-1/4" GR5 Bolt	4
NS	48-0044	85W140 Lube Oil	3.5 Qts
NS	46-0001-23	Oil Decal	1
NS	46-2636-11	1000 RPM Decal	1


**918-0209 PTO DRIVE SHAFT ASSEMBLY**  
 1000 RPM 1-3/8" 21 SPLINE (STANDARD)

**918-0211 PTO DRIVE SHAFT**  
 1000 RPM 1-3/4" 20 SPLINE (OPTIONAL)  
 WWE2480 (80 DEGREE C.V.)

PRIOR TO 08 SERIAL NUMBERS WITH 1000 RPM ADD-ON KIT

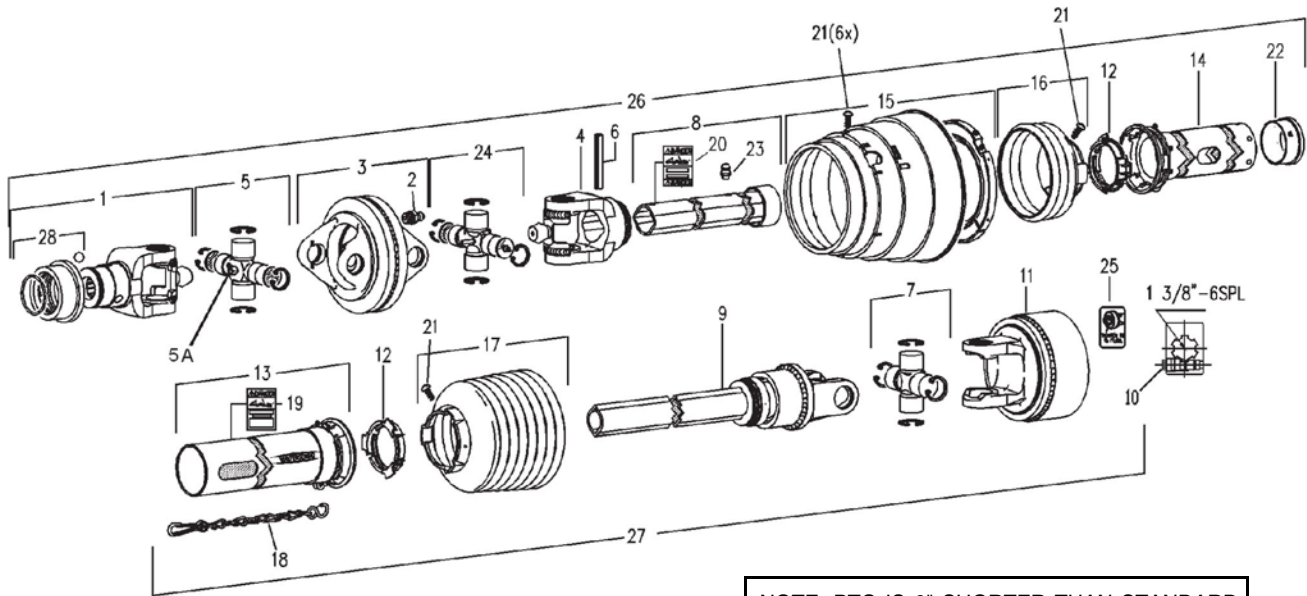

NOTE: PTO IS 6" SHORTER THAN STANDARD 540 OR 1000 RPM PTO.

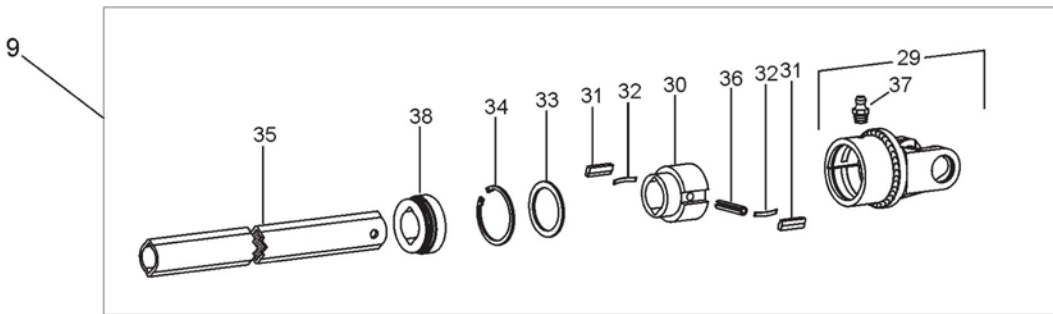

74-7500-918-0312-PTODriveShaftAssembly.cdr

## 918-0209 PTO DRIVE SHAFT ASSEMBLY

1000 RPM 1-3/8" 21 SPLINE (STANDARD)

## 918-0211 PTO DRIVE SHAFT

1000 RPM 1-3/4" 20 SPLINE (OPTIONAL)

WWE2480 (80 DEGREE C.V.)

PRIOR TO 08 SERIAL NUMBERS WITH 1000 RPM ADD-ON KIT

KEY	MEYER PART NO.	DESCRIPTION
1	918-0208-1-1	Yoke 1-3/8"-21 Splined Assembly-Standard
	918-0210-1-1	Yoke 1-3/4"-20 Splined Assembly-Optional
2	918-0208-1-2	Grease Zerk in item 3
3	918-0208-1-3	Double Yoke
4	918-0208-1-4	Inboard Yoke
5	918-0208-1-5	Cross and Bearing Kit
5A	918-0208-1-5-1	M8x1 67.5° Zerk In Cross & Bearing Kit
6	918-0208-1-6	Spring Pin 10 x 75
7	918-0208-2-1	Cross and Bearing Kit
8	918-0209-1-2	Profile and Sleeve Welded As. 6" Shorter
9	918-0209-2-2	Overrunning Clutch & 1bGA Profile Assy. 6" Shorter
10	918-0208-2-3-1	Clamping Cone Bolt (Included in Item 11)
11	918-0208-2-3	Cut Out Clutch 2100NM
12	918-0208-2-4	Bearing Ring SC25
13	918-0209-2-1	Outer Shield Tube OVL 6" Shorter
14	918-0209-1-1	Inner shield Tube Round 6" Shorter
15	918-0208-1-8	CV Cone & Bearing Assy.
16	918-0208-1-9	Shield Cone 3 Rib
17	918-0208-2-6	Shield Cone 8 Rib
18	918-0208-2-7	Safety Chain
19	918-0208-2-8	Decal Out-In Item 13
20	918-0208-1-10	Decal In-In Item 8
21	918-0208-2-9	Screw-In Item 15,16 & 17
22	918-0208-1-11	Support Bearing
23	918-0208-1-12	Zerk-In Item 8
24	918-0208-1-13	Cross and Bearing Kit
25	918-0208-2-10	Decal-K64
26	918-0209-1	1-3/8-21 (Std) Spline Tractor 1/2 Assembly-6" Shorter
	918-0211-1	1-3/4-20 (Optional) Spline Tractor 1/2 Assembly-6" Shorter
27	918-0209-2	1000 RPM Cutout Clutch Implement 1/2 Assy. 6" Shorter
28	918-0208-1-1-1	AS-Lock Kit For Item 1 (Inc. Ring, Collar & Balls) 1-3/8 21 Spline
	918-0210-1-1-1	AS-Lock Kit For Item 1 (Inc. Ring, Collar & Balls) 1-3/4 20 Spline
29	918-0208-2-2-2	Over-running Clutch Housing
30	918-0208-2-2-3	Over-running Clutch Hub
31	18-0119-1-1-2	Over-running Clutch Key
32	18-0119-1-1-1	Over-running Clutch Leaf Spring
33	918-0308-2-1-3	Over-running Clutch Supporting Ring
34	18-0119-1-1-6	Over-running Clutch Retaining Ring
35	918-0209-2-2-1	Profile Tube - 1bGA 6" Shorter
36	918-0308-2-1-12	Spring Pin, 10 x 55
37	918-0208-1-2	Grease Zerk
38	918-0208-2-2-4	Bearing Ring


SEE NEXT PAGE FOR CUTOUT CLUTCH

**918-0209 PTO DRIVE SHAFT ASSEMBLY**  
 1000 RPM 1-3/8" 21 SPLINE (STANDARD)

**918-0211 PTO DRIVE SHAFT**  
 1000 RPM 1-3/4" 20 SPLINE (OPTIONAL)

**CUTOUT CLUTCH**

PRIOR TO 08 SERIAL NUMBERS WITH 1000 RPM ADD-ON KIT

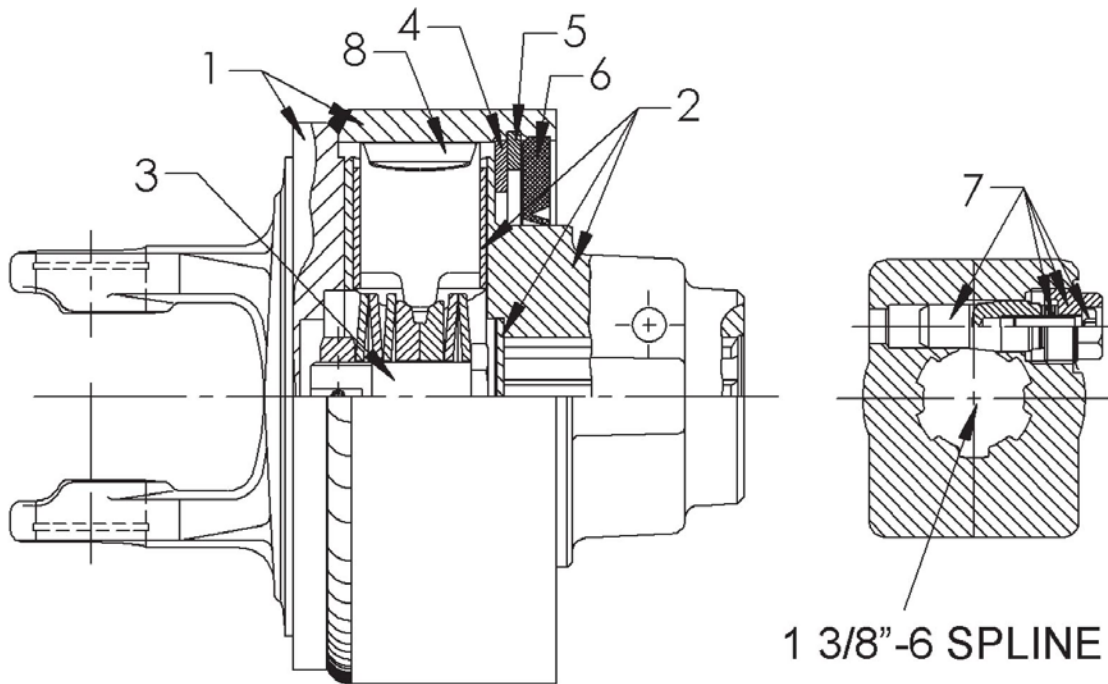

KEY	MEYER PART NO.	DESCRIPTION
1	918-0208-2-3-2	Housing
2	918-0208-2-3-3	Hub
3	918-0208-2-3-10	Spring Pack 2100NM
4	918-0208-2-3-5	Washer
5	918-0208-2-3-6	Retaining Ring
6	918-0208-2-3-7	Sealing Ring
7	918-0208-2-3-1	Clamp Cone Assembly
8	918-0208-2-3-8	Cam
NS	918-0208-2-3-9	Bushing-In Item #2
NS	918-0208-2-3-11	Cutout Clutch Shim Kit

This Page Intentionally Blank

# 918-0309 PTO DRIVE SHAFT ASSEMBLY


1000 RPM 1-3/8" 21 SPLINE S.P. (STANDARD)

# 918-0311 PTO DRIVE SHAFT ASSEMBLY

1000 RPM 1-3/4" 20 SPLINE (OPTIONAL)


WWE2480 (80 DEGREE C.V.)

SERIAL NUMBERS 08 AND LATER WITH 1000 RPM ADD-ON KIT

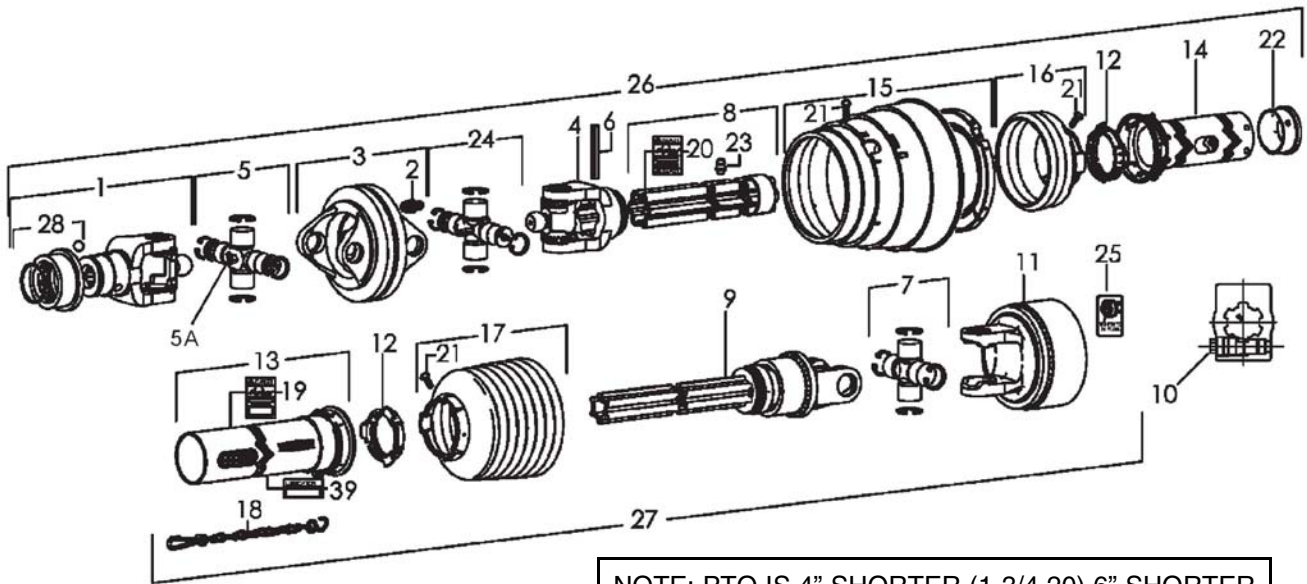

NOTE: PTO IS 4" SHORTER (1-3/4 20) 6" SHORTER (1-3/8 21) THAN STANDARD 540 OR 1000 RPM PTO.

SEE NEXT PAGE FOR CUTOUT CLUTCH

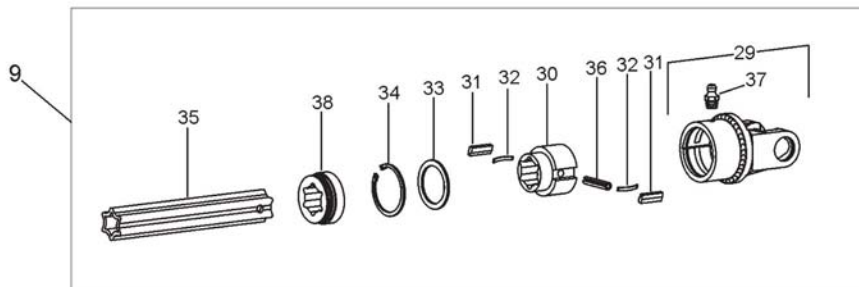



## 918-0309 PTO DRIVE SHAFT ASSEMBLY

1000 RPM 1-3/8" 21 SPLINE S.P. (STANDARD)

## 918-0311 PTO DRIVE SHAFT ASSEMBLY

1000 RPM 1-3/4" 20 SPLINE (OPTIONAL)

WWE2480 (80 DEGREE C.V.)


SERIAL NUMBERS 08 AND LATER WITH 1000 RPM ADD-ON KIT

KEY	MEYER PART NO.	DESCRIPTION
1	918-0208-1-1	Yoke 1 3/8"-21 Splined Assembly-STANDARD
	918-0210-1-1	Yoke 1 3/4"-20 Splined Assembly-Optional
2	918-0208-1-2	Grease Zerk in item 3
3	918-0208-1-3	Double Yoke
4	918-0308-1-1	Inboard Yoke
5	918-0208-1-5	Cross and Bearing Kit
5A	918-0208-1-5-1	M8x1 67.5° Zerk In Cross & Bearing Kit
6	918-0208-1-6	Spring Pin 10 x 75
7	918-0208-2-1	Cross and Bearing Kit
8	918-0309-1-2	Profile and Sleeve Welded Assy. 6" Shorter
	918-0311-1-2	Profile and Sleeve Welded Assy. 4" Shorter
9	918-0309-2-2	Overrunning Clutch & S4LGA Profile Assy. 6" Shorter
	918-0311-2-2	Overrunning Clutch & S4LGA Profile Assy. 4" Shorter
10	918-0208-2-3-1	Clamping Cone Bolt (Included in Item 11)
11	918-0308-2-2	Cut Out Clutch 2200NM
12	918-0208-2-4	Bearing Ring SC25
13	918-0309-2-3	Outer Shield Tube OVL 6" Shorter
14	918-0309-1-1	Inner shield Tube Round 6" Shorter
15	918-0308-1-3	CV Cone & Bearing Assy.
16	918-0308-1-4	Shield Cone 3 Rib
17	918-0308-2-5	Shield Cone 8 Rib
18	918-0208-2-7	Safety Chain
19	918-0208-2-8	Decal Out-In Item 13
20	918-0208-1-10	Decal In-In Item 8
21	918-0208-2-9	Screw-In Item 15,16 & 17
22	918-0208-1-11	Support Bearing
23	918-0208-1-12	Zerk-In Item 8
24	918-0208-1-13	Cross and Bearing Kit
25	918-0208-2-10	Decal-K64
26	918-0309-1	1 3/8-21 (Std) SPLINE Tractor 1/2 Assembly-6" Shorter -Star Profile
	918-0311-1	1 3/4-20 (Optional) SPLINE Tractor 1/2 Assembly-4" Shorter-Star Profile
27	918-0309-2	1000 RPM Cutout Clutch Implement 1/2 Assy. 4" Shorter-Star Profile 1 3/4-20
	918-0309-2-S	1000 RPM Cutout Clutch Implement 1/2 Assy. 6" Shorter-Star Profile 1 3/8-21
28	918-0208-1-1-1	AS-Lock Kit For Item 1 (Inc. Ring, Collar & Balls) 1 3/8-21 SPLINE
	918-0210-1-1-1	AS-Lock Kit For Item 1 (Inc. Ring, Collar & Balls) 1 3/4-20 SPLINE
29	918-0308-2-1-1-5	Over-running Clutch Housing
30	918-0308-2-1-10	Over-running Clutch Hub
31	18-0119-1-1-2	Over-running Clutch Key
32	18-0119-1-1-1	Over-running Clutch Leaf Spring
33	918-0308-2-1-3	Over-running Clutch Supporting Ring
34	18-0119-1-1-6	Over-running Clutch Retaining Ring
35	918-0309-2-1-8	Profile Tube - S4LGA 6" Shorter
	918-0311-2-1-8	Profile Tube - S4LGA 4" Shorter
36	918-0308-2-1-12	Spring Pin, 10 x 55
37	918-0208-1-2	Grease Zerk
38	918-0308-2-1-11	Bearing Ring

**918-0309 PTO DRIVE SHAFT ASSEMBLY**  
 1000 RPM 1-3/8" 21 SPLINE S.P. (STANDARD)

**918-0311 PTO DRIVE SHAFT ASSEMBLY**  
 1000 RPM 1-3/4" 20 SPLINE (OPTIONAL)  
 CUTOUT CLUTCH

SERIAL NUMBERS 08 AND LATER WITH 1000 RPM ADD-ON KIT

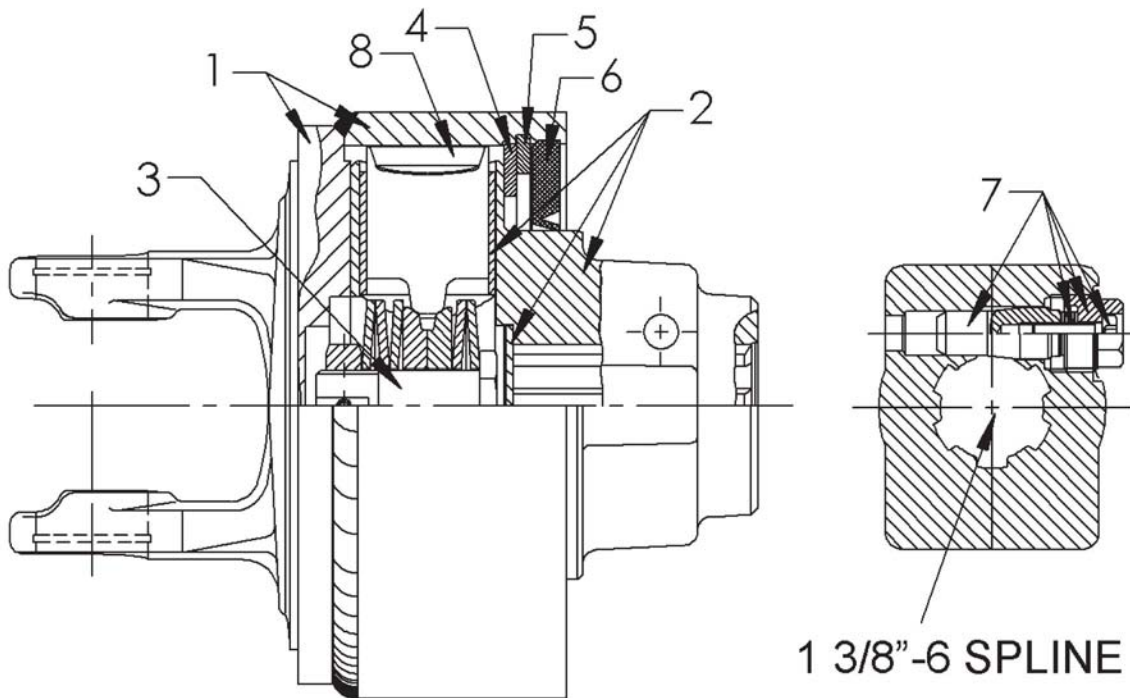

KEY	MEYER PART NO.	DESCRIPTION
1	918-0208-2-3-2	Housing
2	918-0208-2-3-3	Hub
3	918-0208-2-3-10	Spring Pack 2100NM
4	918-0208-2-3-5	Washer
5	918-0208-2-3-6	Retaining Ring
6	918-0208-2-3-7	Sealing Ring
7	918-0208-2-3-1	Clamp Cone Assembly
8	918-0208-2-3-8	Cam
NS	918-0208-2-3-9	Bushing-In Item #2
NS	918-0208-2-3-11	Cutout Clutch Shim Kit



This Page Intentionally Blank

## 918-0308 PTO DRIVE SHAFT ASSEMBLY

1-3/8" 21 SPLINE S.P. (FACTORY BUILT 1000 RPM, NOT KIT EQUIPPED)  
WWE2480 (80 DEGREE C.V.)

## 918-0310 PTO DRIVE SHAFT ASSEMBLY

1-3/4" 20 SPLINE S.P. (OPTIONAL) (FACTORY BUILT 1000 RPM, NOT KIT EQUIPPED)  
WWE2480 (80 DEGREE C.V.)

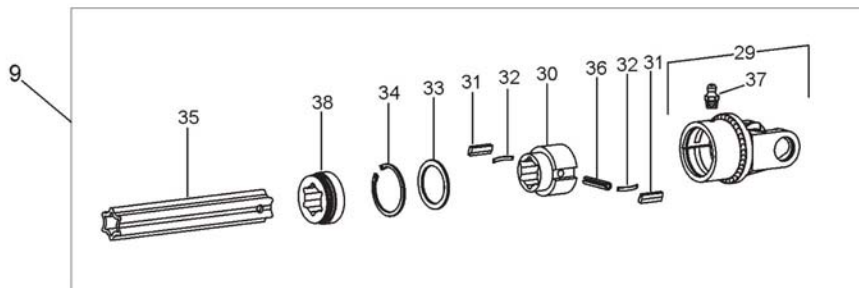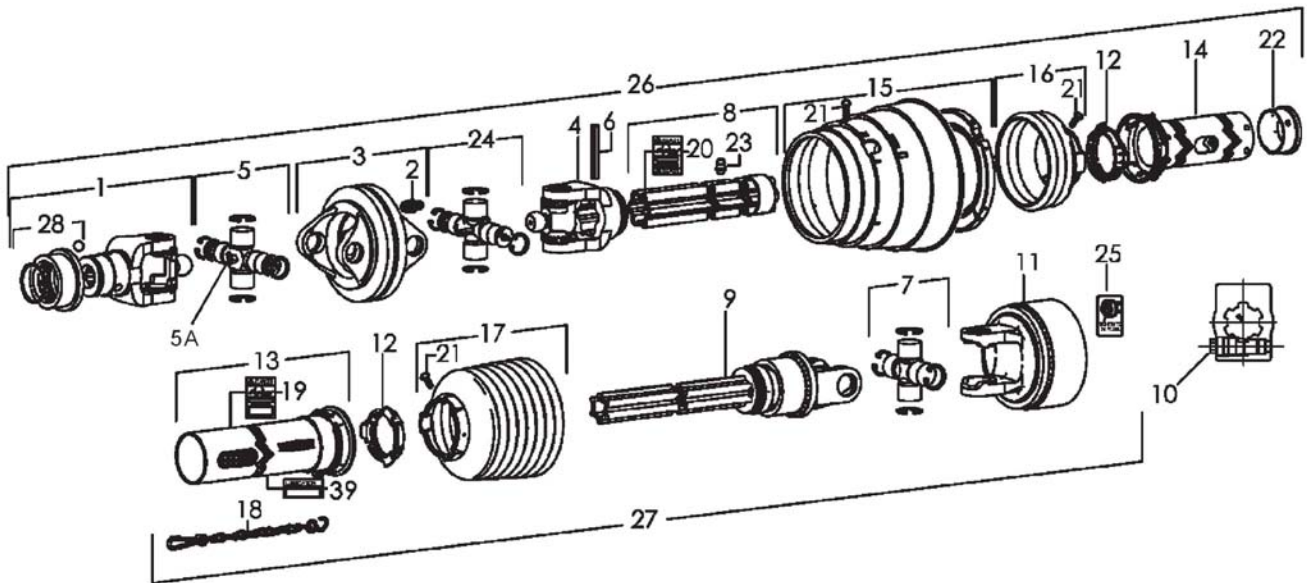

74-7500-918-0309-PTODriveShaft.cdr

## 918-0308 PTO DRIVE SHAFT ASSEMBLY


1-3/8" 21 SPLINE S.P. (FACTORY BUILT 1000 RPM, NOT KIT EQUIPPED)  
WWE2480 (80 DEGREE C.V.)

## 918-0310 PTO DRIVE SHAFT ASSEMBLY

1-3/4" 20 SPLINE S.P. (OPTIONAL) (FACTORY BUILT 1000 RPM, NOT KIT EQUIPPED)  
WWE2480 (80 DEGREE C.V.)


KEY	MEYER PART NO.	DESCRIPTION
1	918-0208-1-1	Yoke 1-3/8"-21 Splined Assembly
	918-0210-1-1	Yoke 1-3/4"-20 Splined Assembly
2	918-0208-1-2	Grease Zerk in item 3
3	918-0208-1-3	Double Yoke
4	918-0308-1-1	Inboard Yoke Star Profile
5	918-0208-1-5	Cross and Bearing Kit
5A	918-0208-1-5-1	M8x1 67.5° Zerk In Cross & Bearing Kit
6	918-0308-1-5	Spring Pin 10 x 75 mm
7	918-0208-2-1	Cross and Bearing Kit
8	918-0308-1-2	Profile S5 and Sleeve Welded Assy
9	918-0308-2-1	Overrunning Clutch & S4LGA Profile Assy
10	918-0208-2-3-1	Clamping Cone Locking Pin
11	918-0308-2-2	Cut Out Clutch
12	918-0208-2-4	Bearing Ring SC25
13	918-0308-2-3	Outer Shield Tube OVL
14	918-0308-2-4	Inner shield Tube Round
15	918-0308-1-3	CV Cone & Bearing Assy.
16	918-0308-1-4	Shield Cone 3 Rib
17	918-0308-2-5	Shield Cone 8 Rib
18	918-0208-2-7	Safety Chain
19	918-0208-2-8	Decal Out-In Item 13
20	918-0208-1-10	Decal In-In Item 8

KEY	MEYER PART NO.	DESCRIPTION
21	918-0208-2-9	Screw-In Item 15,16 & 17
22	918-0208-1-11	Support Bearing
23	918-0208-1-12	Zerk-In Item 8
24	918-0208-1-13	Cross and Bearing Kit
25	918-0208-2-10	Decal-K64
26	918-0308-1	1-3/8-21 Spline Tractor Half Assy
	918-0310-1	1-3/4" 20 Spline Tractor Half Assembly
27	918-0308-2	1000 RPM Implement 1/2 Assy
28	918-0208-1-1-1	1-3/8" Assembly Collar Kit (Inc. Ring, Collar & Balls)
	918-0210-1-1-1	1-3/4" Assembly Collar Kit (Inc. Ring, Collar & Balls)
29	918-0308-2-1-1-5	Over-running Clutch Housing
30	918-0308-2-1-10	Over-running Clutch Hub
31	18-0119-1-1-2	Over-running Clutch Key
32	18-0119-1-1-1	Over-running Clutch Leaf Spring
33	918-0308-2-1-3	Over-running Clutch Supporting Ring
34	18-0119-1-1-6	Over-running Clutch Retaining Ring
35	918-0308-2-1-8	Profile Tube - S4LGA
36	918-0308-2-1-12	Spring Pin, 10 x 55
37	918-0208-1-2	Grease Zerk
38	918-0308-2-1-11	Bearing Ring

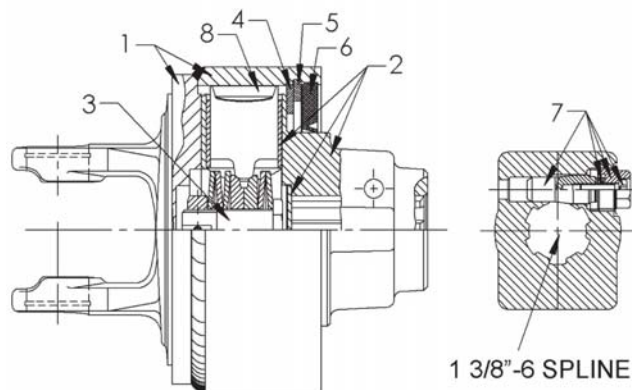


KEY	MEYER PART NO.	DESCRIPTION
1	918-0308-2-2-1	Housing
2	918-0308-2-2-2	Hub
3	918-0308-2-2-3	Spring Pack
4	918-0208-2-3-5	Washer
5	918-0208-2-3-6	Retaining Ring
6	918-0208-2-3-7	Sealing Ring
7	918-0208-2-3-1	Clamp Cone Locking Pin
8	918-0308-2-2-4	Cam
NS	918-0208-2-3-9	Bushing-In Item #2
NS	918-0208-2-3-11	Shim Kit

# #918-0150 VERTICAL DRIVELINE, TRUCK MOUNT MECHANICAL DRIVE

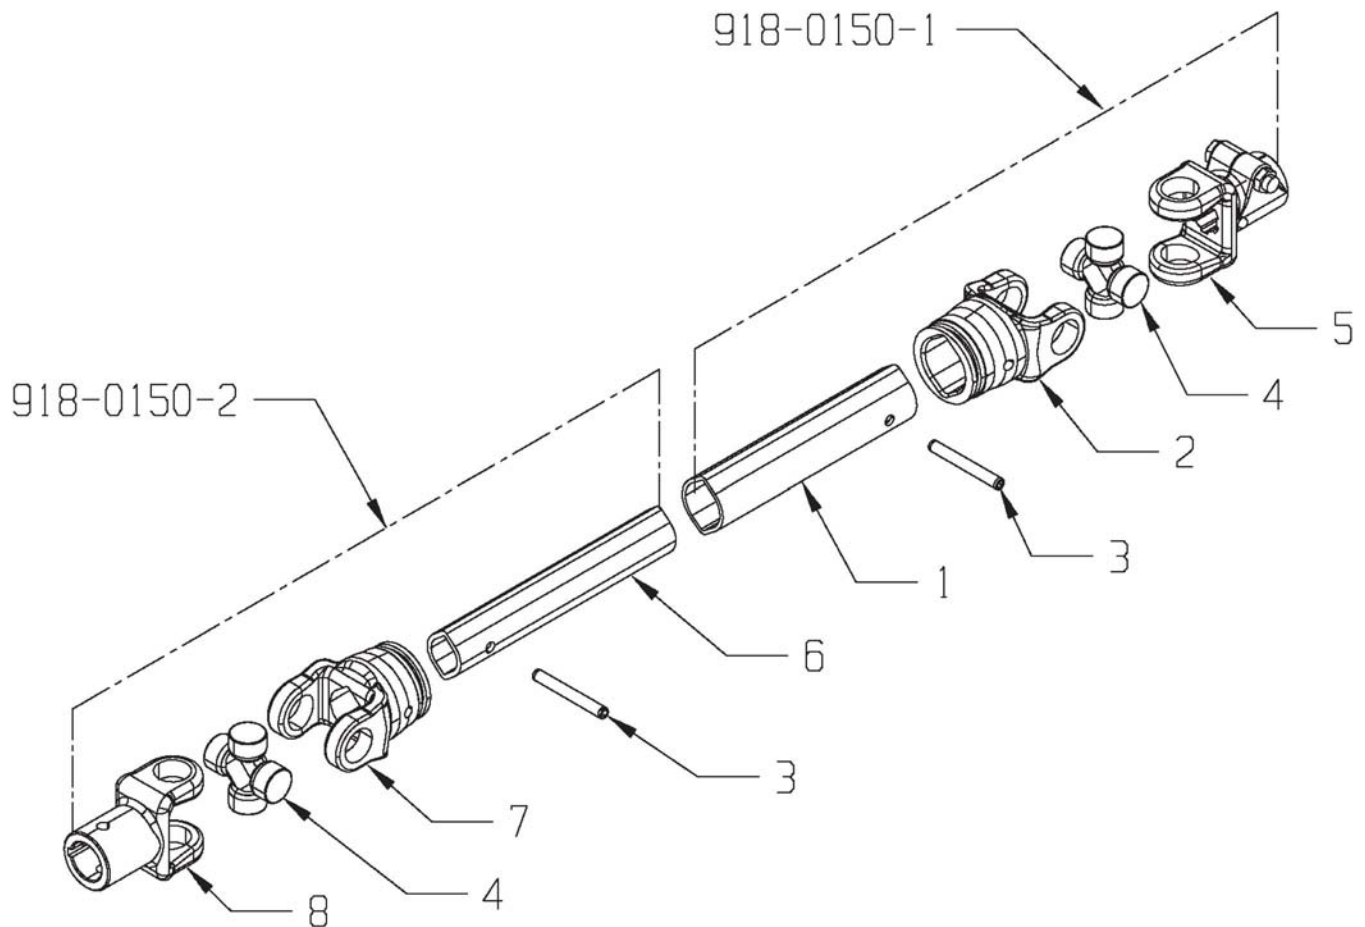

KEY	PART NO.	DESCRIPTION	QTY.
1	918-0150-1-1	V-Max/Force Top Lemon Profile Tube	1
2	618-0001-2-2	Walt#019519 Inboard Yoke 2a Lemon Profile	1
3	918-0208-1-6	Walt#020617 Spring Pin 10 x 75	2
4	918-0208-2-1	Walt#312410 Cross & Bearing Kit	2
5	918-0240-1-1	Walt#319208 Clamp Yoke 2400 1-3/8" 6 SPLINE AGKF	1
6	918-0150-2-1	V-Max/Force Lower Lemon Profile Tube	1
7	618-0001-1-2	Walt#019518 Inboard Yoke 1b Lemon Profile	1
8	918-0230-2-2-T	Walt, Hub Yoke, 1-3/8" Bore, 5/16" Key, Drilled And Tapped For Set Screws	1

## OPTIONAL TRUCK GEARBOX DRIVE PACKAGE #SV-GBD

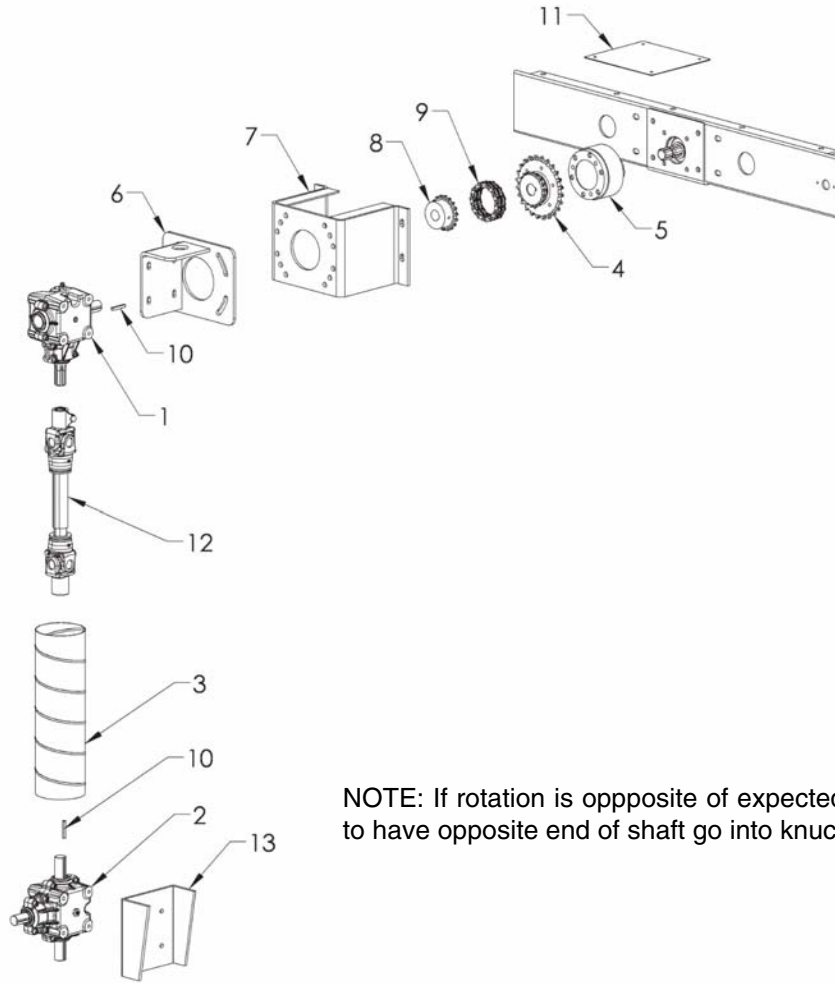

NOTE: If rotation is opposite of expected, flip gearbox to have opposite end of shaft go into knuckle.

KEY	PART NO.	DESCRIPTION	QTY.
1	19-0047	Mech Trk Mnt Upper Gearbox V-Max/VForce, 1:1 w/Syn Oil	1
2	19-0038-SYN	Gearbox 2:1 w/Syn Oil	1
3	49-0032	6" Hose	3.33'
4	910-0098	60B18/80B24 Sprocket w/Bolt Circle	1
5	918-0220-1	Walt Tk Mt Clutch w/Bolts & Washers, #X395028 RHEK64/2R	1
6	925-8003	Truck Upper Gearbox Bracket	1
7	925-8004	Truck Front Gearbox Bracket	1
8	937-0014-1	60B18 1-3/8" Bore Chain Coupler	1
9	111-0060-18-CC	Coupler Chain #60-18 Link W/Connector	1
10	935-0002	Key, 5/16 x 5/16 x 2-1/4" Hardened	2
11	925-8003-4	Truck Mech Drive Top Shield	1
12	918-0150	V-Max/VForce, GBD Vertical Driveline (See Page 78)	1
13	MT-PTO-0888-511-03	Lower Gearbox Angled Bracket	1

## MEYER SUPER SPREADER TROUBLESHOOTING

	<b>SYMPTOM</b>	<b>PROBLEM</b>	<b>SOLUTION</b>
<b>AUGERS</b>	Augers shake or chatter	Stiff roller chains - dry Loose roller chains Worn sprockets/chains Dry auger trough	Lubricate roller chains Tighten roller chains Replace sprockets/chains Load auger trough w/manure
	Augers wobble/lift up & down	Worn auger shaft bushings Worn auger hold down nylon bearings	Replace auger shaft bushings Replace auger hold down nylon bearings
<b>FLOW CONTROL GATE</b>	Will not lift	No hydraulic supply Froze tight	Supply hydraulic power Thaw frozen build-up
	Will not close/seal	Lodged foreign object/dirty	Remove foreign object/clean
	Sticks/binds	Dirty/dry slide guides Worn slide guides Worn out slide guide poly-slick	Clean/lubricate slide guides Replace slide guides Replace slide guide poly-slick
<b>GEAR BOXES</b>	Clunking sounds	Gears/bearings wearing low level of liquid grease	Replace gears/bearings-fill with semi-fluid, EP lithium base, gear grease
	Excessive oil use	Worn out oil seals Dry manure & twine wrapping	Replace oil seals Clean & remove build-up at seal areas
	Gear damage	High speed/full load start-up Worn out gears	Slow start-up, fill with oil Replace gears
<b>MATERIAL GUIDES</b>	Poor spreading pattern	Material guides out of adjustment	Adjust according to manual specifications
	Dirty/build-up	Too slow spinner RPM's	Operate spreader at recommended 540/1000 RPM
	Bending/breakage	Lodging foreign objects Multiple damaged paddles	Avoid loading foreign objects Replace paddles
<b>PTO SHAFT</b>	Whips/shakes	Over extended or bent PTO	Adjust tractor drawbar length (See Page 13) Straighten/replace PTO
	Vibrates up & down	Spreader center shaft bent	Replace center shaft
	Worn Universal Joints	Lack of lubrication/used	Lubricate joints daily replace joint



## MEYER SUPER SPREADER TROUBLESHOOTING

	SYMPTOM	PROBLEM	SOLUTION
<b>ROLLER CHAINS AND SPROCKET</b>	Excessive chain wear	Lack of lubrication Out of alignment/loose	Lubricate/align/tighten
	Roller chain breakage	Loose roller chain Worn sprockets	Tighten roller chains Replace sprockets
	Sprocket teeth tipped over	Worn roller chain Bad roller bearings	Replace roller chain Replace bearings
<b>SPINNERS (PADDLES/TEETH)</b>	Spinners turn hard/squeak	Bad lower spinner bearings	Replace lower spinner bearings
	Shake at high RPM's (excessive vibration)	Spinner bent/out of balance	Straighten/balance/replace spinner
		Worn out lower spinner sleeve/shaft	Replace lower spinner sleeve/shaft and reweld.
	Excessive paddle damage	Too slow spinner RPM's	Operate spreader at recommended 540/1000 RPM
		Lodging of manure	Adjust material guides Straighten/replace paddles/ Keep sharpened
		Spreading foreign objects	Avoid loading foreign objects

## MEYER EQUIPMENT WHEEL TORQUE

<b>BOLT/STUD SIZE</b>	<b>SOCKET SIZE</b>	<b>PRESS FORMED WHEEL CENTER</b>	<b>BOLT TYPE</b>	<b>HEAVY DUTY WHEEL CENTER</b>
5/8	15/16 1-1/16	100 ft lbs	Bevel or Flange Nut	160 ft lbs
3/4	1-1/8 1-1/2	NA	Flange Nut	378 ft lbs

## TIRE INFLATION

<b><i>TIRE SIZE</i></b>	<b><i>PLY</i></b>	<b><i>PSI</i></b>
12.5L-15	12	52
14L-16	12	44
16.5L-16	10	36
19LX16.1	10	32
11R/22.5	used truck	75
425/65X22.5	used truck	75

**FARM EQUIPMENT BUYERS TRUST THE NAME MEYER!**  
**Meyer Super Spreader**  
**SPECIFICATIONS**

	V-FORCE 7400 TRAILER MODEL	V-FORCE 7400 TRUCK MODEL	V-FORCE 7500 TRAILER MODEL	V-FORCE 7500 TRUCK MOUNT
<b>CAPACITY</b>				
Bushels Heaped	400	400	500	500
Gallons/Cu.Ft. (struck)	1,870 / 250	1,870 / 250	2433 / 324	2433 / 324
Cu. yards (struck)	9.26 cu. yards	9.26 cu. yards	12 cu. yards	12 cu. yards
<b>DIMENSIONS</b>				
Overall Length	21' 9"	18' 4" plus front drive	21' 9"	18' 4" plus front drive
Inside Tank Length	15'	15'	15'	15'
Loading Height	66" w/14Lx16.1 67.5" w/16.5Lx16.1	51 1/2" plus height of truck	76.5 w/16.5Lx16.1 78" w/19Lx16.1	60.5" plus height of truck
Overall Height- Top of Splash Guard	73.25" (front) 14L 74.75" (front) 16.5L	58 1/2" (front) plus height of truck	83.5" w/16.5Lx16.1 85" w/19Lx16.1	67.5" plus height of truck
Overall Width(outside tires)	95.75" w/14Lx16.1 102.75" w/16.5L	N/A	101.5" w/16.5Lx16.1 105" w/19Lx16.1	N/A
Top Tank Width	77 3/4"	77 3/4"	85 7/8"	85 7/8"
<b>SPECIFICATIONS</b>				
Total Weight	8,040# w/14L	6,540#	9,000# w/19L	7,080#
Max. Net Load (lbs.)	16,000#	16,000#	23,000#	23,000#
Auger Diameter (lower)	20" - 3/8" sectional	20" - 3/8" sectional	20" - 3/8" sectional	20" - 3/8" sectional
Ind. Lower Auger Shear Hub Sprockets	Standard	Standard	Standard	Standard
3rd Auger (solid material)	Standard	Standard	Standard	Standard
Drive - PTO RPM	540 or 1000 RPM with Constant Velocity	PTO Direct Std. Hydrostatic - Opt.	540 or 1000 RPM with Constant Velocity	PTO Direct Std. Hydrostatic - Opt.
Drive Line Protection	Overrunning torque disconnect clutch	Torque disconnect clutch w/shear bolt augers - PTO	Overrunning torque disconnect clutch w/shear bolt augers	Torque disconnect clutch w/shear bolt augers - PTO
Roller Chain Drive - augers - expellers	#80 - #120 #80	#80 - #120 #80	#80 - #120 #80	#80 - #120 #80
Roller Chain Auto Oiler	Standard	Standard	Standard	Standard
Expellor Speed (RPM)	660 RPM	660 RPM	660 RPM	660 RPM
Expellor Diameter	22"	22"	22"	22"
<b>TANK CONSTRUCTION</b>				
Construction	Copper bearing	Copper bearing	Copper bearing	Copper bearing
Material	steel	steel	steel	steel
Thickness - Tank Sides	3/16"	3/16"	3/16"	3/16"
Thickness - Front/Back	3/16"	3/16"	3/16"	3/16"
Frame Construction	Heavy 8" channel	Heavy 8" channel	Heavy 8" channel	Heavy 8" channel
Door Opening	27" x 42"	27" x 42"	27" x 42"	27" x 42"
Spindle Diameter - tandem axle	2 3/4"	N/A	3" sleeved	N/A
Hub	8 Bolt	N/A	8 Bolt - Heavy Duty	N/A
Splash Shields - front & rear	Standard - flat (low clearance)	Standard - flat (low clearance)	Standard - angled	Standard - angled
Transport Lights	Standard	Standard w/truck cord	Standard	Standard w/truck cord
Tractor Req. PTO HP (min)	85 HP		100HP	
<b>OPTIONS</b>				
100 RPM Kit	Optional		Optional	
19" Longer Hitch (for dual wheeled tractor)	Optional		Optional	
Hydraulic Controller Lid	Optional	Optional	Optional	Optional
Poultry Litter Package	Optional	Optional	Optional	Optional
Safety Chain	Optional		Optional	
Truck Mt. Drive Options	Optional	PTO - Direct Std. Hydraulic - opt.	Optional	PTO - Direct Std. Hydraulic - opt.

See the "Spreader Truck Mount Specifications and Mounting Instructions" for additional information. These instructions may also be found at [www.meyermfg.com/specifications.php](http://www.meyermfg.com/specifications.php).

This Page Intentionally Blank





# MAINTENANCE RECORD

MODEL NO. \_\_\_\_\_

SERIAL NO. \_\_\_\_\_

DATE	SERVICE PERFORMED

DATE	SERVICE PERFORMED



Manufactured by:  
**Meyer Mfg. Corp.**  
 674 W. Business Cty Rd A  
 Dorchester, WI 54425  
 Phone: 1-800-325-9103  
 Fax: 715-654-5513  
 Email: sales@meyermfg.com  
 Website: www.meyermfg.com  
 Farm Equipment Buyers Trust the Name Meyer!





**Meyer Manufacturing Corporation**

674 W. Business Cty Rd A

Dorchester, WI 54425

Phone: 1-800-325-9103

Fax: 715-654-5513

Email: [sales@meyermfg.com](mailto:sales@meyermfg.com)

Website: [www.meyermfg.com](http://www.meyermfg.com)